

[Manuals.plus](#) /

> [Cwmiibili](#) /

> Cwmiibili M3 Mini Wireless Bluetooth Speaker User Manual

Cwmiibili M3

Cwmiibili M3 Mini Wireless Bluetooth Speaker User Manual

Model: M3 (Item Model Number: I500746345)

1. INTRODUCTION

Thank you for purchasing the Cwmiibili M3 Mini Wireless Bluetooth Speaker. This manual provides essential information for the safe and efficient use of your device. Please read it carefully before use and retain it for future reference.

Package Contents:

- 1 x Cwmiibili M3 Mini Wireless Bluetooth Speaker
- 1 x USB Charging Cable (may vary)
- 1 x User Manual (this document)

2. PRODUCT OVERVIEW

Familiarize yourself with the components and controls of your M3 Mini Speaker.



Figure 2.1: Front view of the Cwmiibili M3 Mini Wireless Bluetooth Speaker. This compact, spherical black Bluetooth speaker features a metallic mesh grille on the front.

Controls and Ports:

More than small

Long standby life

MINI subwoofer in the palm of your hand



Figure 2.2: Rear view of the speaker showing the charging port, on-off key, microphone port, and lanyard attachment point.

- **Charging Port:** Used to connect the USB charging cable.
- **On-off Key:** Powers the speaker on/off, controls playback, and manages calls.
- **Microphone Port:** Integrated microphone for hands-free calling.
- **Lanyard Attachment Point:** For attaching a lanyard for portability.

3. SPECIFICATIONS

Feature	Specification
Speaker Type	Card-type Bluetooth Speaker
Connectivity	Bluetooth 5.0
Card Support	Yes (TF/MicroSD card)
Speaker Output	4Ω3W, Diameter 36MM
Frequency Response	20HZ-20KHZ

Transmission Range	Up to 10 meters (unobstructed)
Battery Voltage	3.7V
Charging Voltage	5V
Play Time	Approximately 1-3 hours (300mAh battery)
Signal-to-Noise Ratio	≥80DB
Distortion	≤1%
Material	Aluminum alloy (body)
Dimensions	4.33 x 3.54 x 1.57 inches (11 x 9 x 4 cm)
Weight	3.28 ounces (93 grams)

SMALL & POWERFUL

Small aluminum body delivers enhanced bass and clear sound through 4W high performance driver



BT 5.0



**3.0
HRS**
PLAYING Time

Figure 3.1: A view of the speaker's back panel, detailing its Bluetooth 5.0, 300 mAh battery, 4W speaker, and 3.0 hours playing time.

4. SETUP

4.1 Initial Charging

1. Connect the provided USB charging cable to the speaker's charging port.
2. Connect the other end of the USB cable to a 5V USB power source (e.g., computer USB port, USB wall adapter).
3. The charging indicator light will illuminate during charging. It will turn off or change color when the speaker is fully charged.
4. A full charge typically takes 1-3 hours.

4.2 Bluetooth Pairing

1. Ensure the speaker is sufficiently charged.
2. Press and hold the **On-off Key** for a few seconds to power on the speaker. A voice prompt or indicator light will confirm it is in Bluetooth pairing mode.
3. On your Bluetooth-enabled device (e.g., smartphone, tablet), go to the Bluetooth settings.
4. Enable Bluetooth and search for available devices.
5. Select "M3 Mini Speaker" (or a similar name) from the list of detected devices.
6. Once connected, a confirmation sound or light will indicate successful pairing. The speaker is now ready for audio playback.

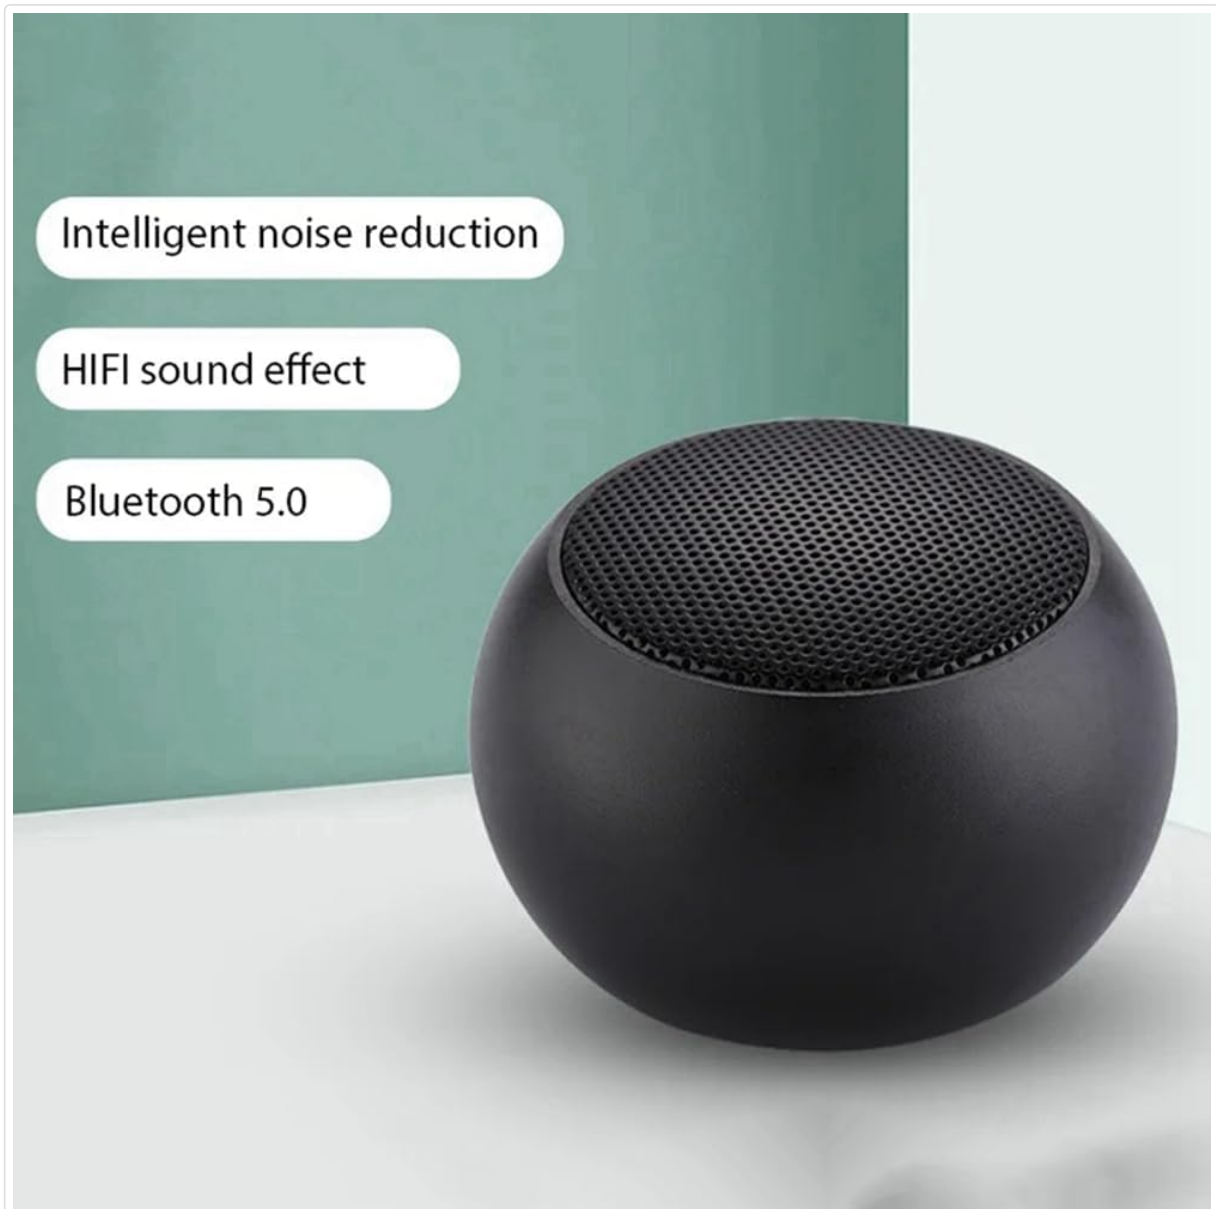


Figure 4.1: The speaker shown with text overlays indicating features like intelligent noise reduction, HIFI sound effect, and

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

- **To Power On:** Press and hold the **On-off Key** until you hear a power-on prompt or see the indicator light activate.
- **To Power Off:** Press and hold the **On-off Key** again until you hear a power-off prompt or the indicator light turns off.

5.2 Music Playback (Bluetooth)

- After successfully pairing your device, open your preferred music application.
- Start playing audio from your device. The sound will be transmitted to the M3 Mini Speaker.
- Use your connected device to control volume, play/pause, and skip tracks. The speaker's **On-off Key** may also function as a play/pause button with a short press.

5.3 Music Playback (Memory Card)

- Insert a compatible TF/MicroSD card (pre-loaded with audio files) into the designated card slot on the speaker.
- The speaker will automatically detect the card and switch to card playback mode, beginning to play audio files.
- Use the speaker's buttons (if available, typically the **On-off Key** for play/pause) to control playback.

5.4 Call Function

- When your speaker is connected to your smartphone via Bluetooth, incoming calls will be routed through the speaker.
- **To Answer a Call:** Briefly press the **On-off Key**.
- **To End a Call:** Briefly press the **On-off Key** again.
- The integrated microphone allows for hands-free communication.

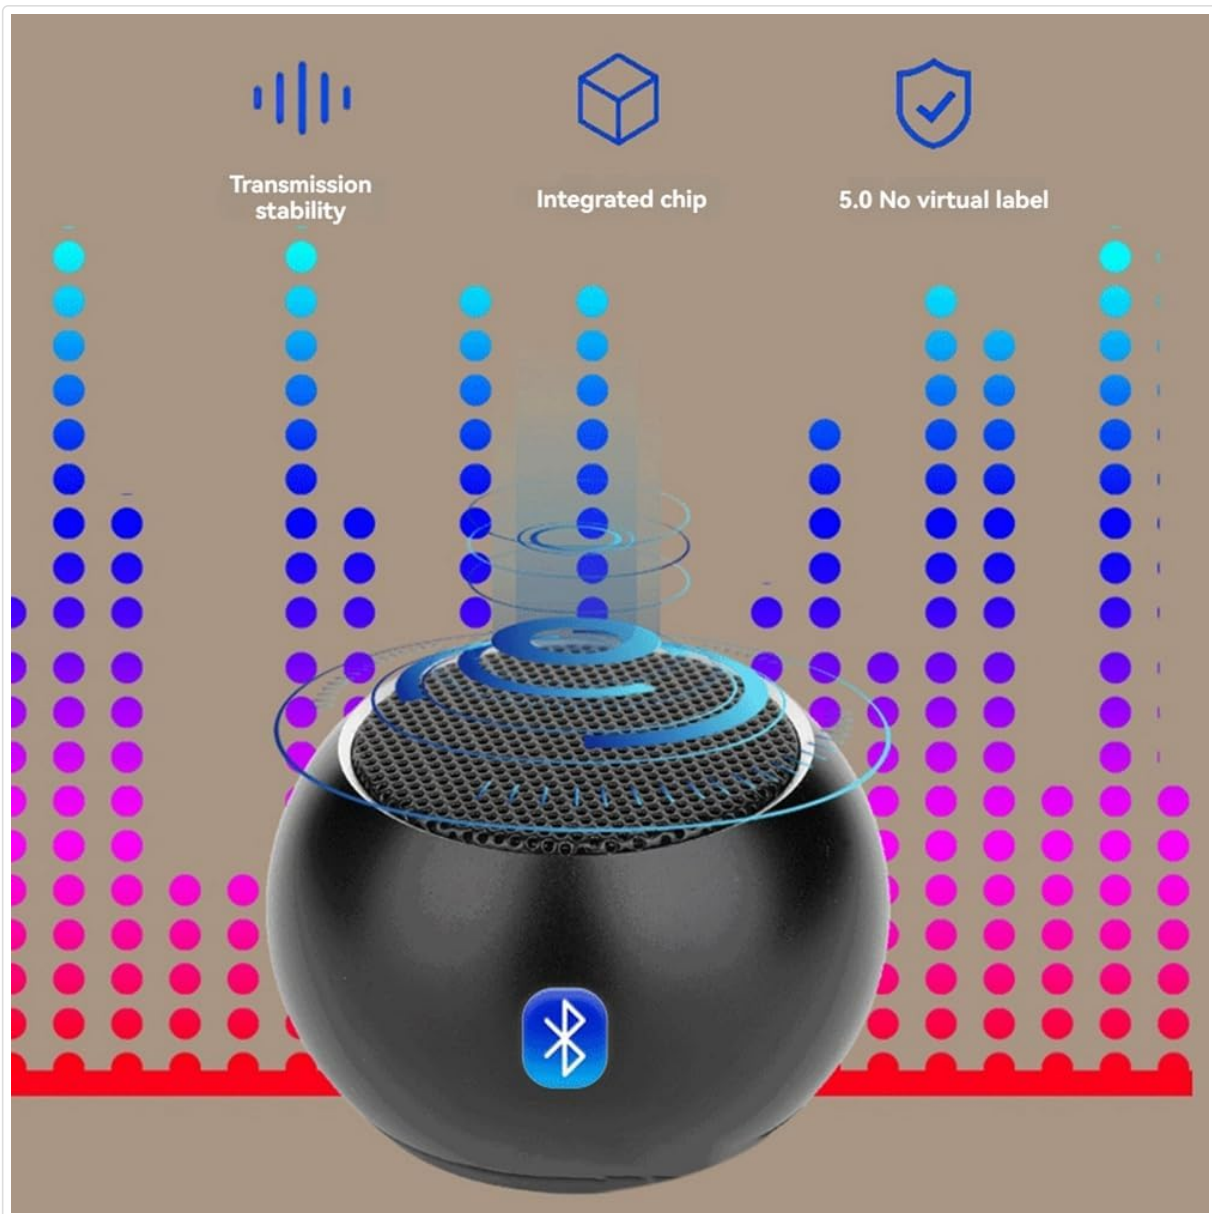


Figure 5.1: An illustration of the speaker emitting sound waves, symbolizing stable transmission and an integrated chip for Bluetooth 5.0.

6. MAINTENANCE

- **Cleaning:** Wipe the speaker with a soft, dry cloth. Do not use abrasive cleaners, solvents, or chemical agents, as these may damage the surface or internal components.
- **Water Exposure:** This speaker is not waterproof. Avoid exposing it to water, rain, splashes, or excessive moisture.
- **Temperature:** Do not expose the speaker to extreme temperatures (hot or cold) or direct sunlight for prolonged periods.
- **Storage:** When not in use, store the speaker in a cool, dry place, away from dust and direct sunlight.

7. TROUBLESHOOTING

If you encounter issues with your M3 Mini Speaker, refer to the following common problems and solutions:

- **Speaker won't turn on:**
 - Ensure the speaker is fully charged. Connect it to a power source and allow it to charge for at least 30 minutes.

- Press and hold the **On-off Key** for a few seconds to ensure it's not just a short press.
- **Cannot pair with my device:**
 - Ensure Bluetooth is enabled on your device.
 - Make sure the speaker is in pairing mode (indicated by a flashing light or voice prompt). If not, power it off and on again.
 - Move your device closer to the speaker (within 10 meters) and ensure there are no major obstructions.
 - Turn off Bluetooth on your device and turn it back on, then try searching again.
- **No sound or low volume:**
 - Check the volume levels on both the speaker and your connected device. Increase both.
 - Ensure the speaker is successfully paired with your device.
 - If playing from a memory card, ensure the card is inserted correctly and contains playable audio files.
 - Try restarting both the speaker and your connected device.
- **Poor sound quality or intermittent connection:**
 - Move your device closer to the speaker to reduce interference.
 - Ensure there are no physical obstructions (walls, large objects) between the speaker and your device.
 - Check the speaker's battery level; low battery can affect performance.
 - Avoid using the speaker near other strong wireless signals (Wi-Fi routers, other Bluetooth devices).

8. SAFETY INFORMATION

- Do not disassemble, repair, or modify the speaker yourself. This may void the warranty and pose safety risks.
- Keep the speaker away from children and pets.
- Use only the provided or a certified compatible charging cable.
- Avoid prolonged listening at high volumes to prevent potential hearing damage.
- Dispose of the product and its battery responsibly according to local environmental regulations. Do not dispose of with household waste.

9. WARRANTY AND SUPPORT

No specific warranty information is provided within this manual. Please refer to your purchase documentation, the product packaging, or contact the retailer/seller directly for details regarding warranty coverage and terms.

For technical support or further assistance, please contact the seller or manufacturer through the platform where the product was purchased.