

Bizak 62000722

Bizak Exost Phytton Blaster Acrobatic Water-Shooting Car Instruction Manual

1. INTRODUCTION

Welcome to the world of Exost! This manual provides essential information for the safe and optimal operation of your Bizak Exost Phytton Blaster. Please read it carefully before use to ensure a fun and safe experience. The Phytton Blaster offers dual fun, allowing you to drive and shoot powerful water jets up to 5 meters. It features a convenient water refill system and is designed for exciting adventures on both land and water, with two selectable speed modes.

2. SAFETY INFORMATION

WARNING! CHOKING HAZARD. Contains small parts. Not suitable for children under 36 months.
WARNING! Use only in water where the child can stand and under adult supervision.

- Always operate the vehicle in open areas, away from obstacles, people, and pets.
- Do not aim the water blaster at eyes or face.
- Ensure all battery compartments are securely closed before operating, especially in water.
- Do not modify the vehicle or remote control.
- Keep packaging and instructions for future reference.

3. PACKAGE CONTENTS

Your Bizak Exost Phytton Blaster package includes:

- 1 x Exost Phytton Blaster Vehicle
- 1 x Remote Control
- 1 x USB Charging Cable



Image: The Bizak Exost Phyton Blaster vehicle, its remote control, and the product packaging, illustrating the complete set.

4. SETUP AND ASSEMBLY

4.1. Vehicle Battery Installation and Charging

The Exost Phyton Blaster vehicle comes with a rechargeable battery.

1. Using a small screwdriver, carefully open the battery compartment cover located on the underside of the vehicle.
2. Connect the rechargeable battery to the vehicle's internal connector, ensuring the correct polarity.
3. Gently place the battery inside the compartment.
4. Close the battery compartment cover and secure it with the screw.

To charge the vehicle's battery:

1. Connect the vehicle's rechargeable battery to the provided USB charging cable.
2. Plug the USB end of the cable into a suitable USB power source (e.g., computer USB port, USB wall adapter).
3. The charging indicator light on the USB cable or vehicle will illuminate (e.g., red for charging).

4. Once fully charged, the indicator light may change color (e.g., green) or turn off. Disconnect the battery from the charger.

Your browser does not support the video tag.

Video: This video demonstrates the process of installing and charging the battery for a remote-controlled monster truck, which is similar to the procedure for the Bizak Exost Phyton Blaster. It shows connecting the battery, plugging in the USB charger, and the charging status indicator.

4.2. Remote Control Battery Installation

The remote control requires 2x AA batteries (not included).

1. Open the battery compartment cover located on the back of the remote control.
2. Insert 2x AA batteries, ensuring the correct polarity (+/-) as indicated inside the compartment.
3. Close the battery compartment cover securely.

4.3. Water Tank Filling

The Phyton Blaster is equipped with a water tank for its shooting function.

1. Locate the water tank on the top of the vehicle.
2. Open the tank cap.
3. Fill the tank with clean water.
4. Close the tank cap securely to prevent leaks.

Recarga automática de agua



Image: The Bizak Exost Phyton Blaster demonstrating its automatic water refill capability by suction from a water surface.

5. OPERATING INSTRUCTIONS

5.1. Power On/Off

Turn on the vehicle and the remote control using their respective power switches. The indicator lights on both devices should illuminate, indicating they are paired and ready for use.

5.2. Basic Driving Controls

Use the joysticks on the remote control to maneuver the vehicle:

- **Left Joystick:** Controls forward and backward movement.
- **Right Joystick:** Controls left and right steering.

5.3. Water Shooting Function

Once the water tank is filled, press the dedicated water shooting button on the remote control to activate the water blaster. The vehicle can shoot water jets up to 5 meters.

Diversión con disparos de agua



Image: The Bizak Exost Phyton Blaster vehicle actively shooting a stream of water while operating on a wet surface.

5.4. Speed Modes

The vehicle features two speed modes. Use the speed selection button on the remote control to switch between them, adapting to different terrains and play styles.

***Cambia entre 2
velocidades con solo
presionar un botón***



Tecnología



Image: The Bizak Exost Phyton Blaster vehicle alongside its remote control, emphasizing its 2.4 GHz technology and the availability of two speed settings.

5.5. Land and Water Operation

The Phyton Blaster is designed for versatile play on both land and water surfaces. Its robust construction allows for seamless transitions between environments. When operating in water, ensure the water tank is filled for the water shooting function. The vehicle can also perform acrobatic maneuvers.

Con ángulo ajustable

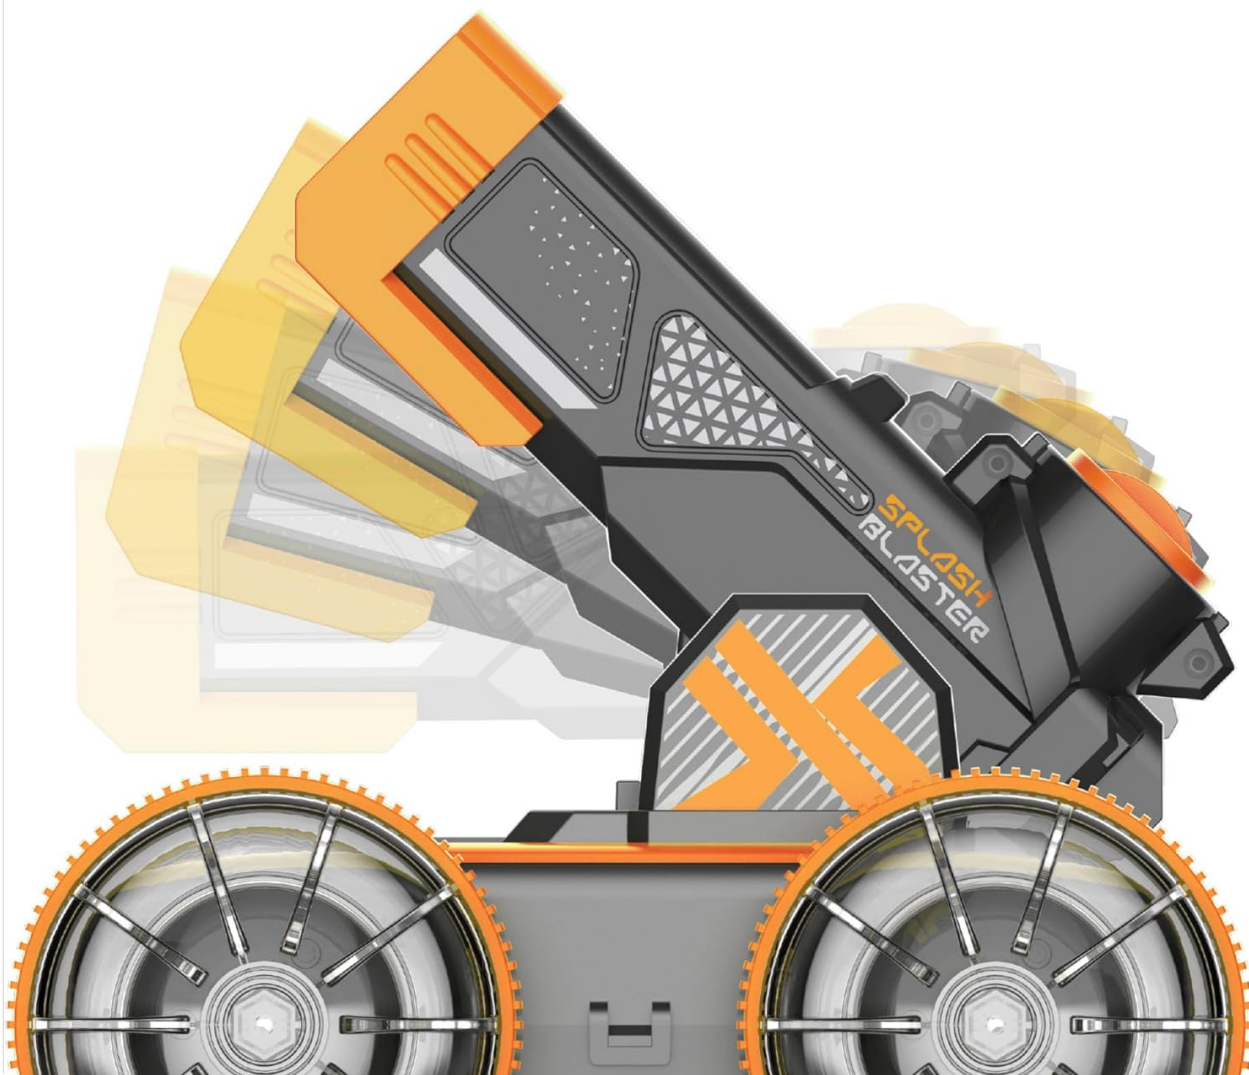


Image: The Bizak Exost Phyton Blaster showcasing its adjustable angle feature, allowing for dynamic movements and acrobatic stunts.

6. MAINTENANCE

6.1. Cleaning

After each use, especially after playing in water, clean the vehicle with a damp cloth. Ensure all water is drained from the tank and any internal components are thoroughly dry before storage to prevent damage.

6.2. Storage

Store the vehicle and remote control in a cool, dry place, away from direct sunlight and extreme temperatures. If the remote control will not be used for an extended period, remove its batteries to prevent leakage.

7. TROUBLESHOOTING

- **Vehicle does not respond:**
 - Check if the vehicle and remote control are both switched on.

- Ensure the vehicle's rechargeable battery is fully charged and correctly installed.
- Replace the batteries in the remote control if they are low or depleted.
- Make sure the vehicle and remote control are within operating range.
- **Water shooting is weak or not working:**
 - Verify that the water tank is filled with water.
 - Check for any blockages in the water nozzle.
- **Vehicle performance is poor:**
 - Ensure the vehicle's battery is fully charged.
 - Clean any debris from the wheels or moving parts.

8. SPECIFICATIONS

Feature	Detail
Model Number	62000722
Dimensions (L x W x H)	21.5 x 26.5 x 19 cm
Weight	866 g
Vehicle Battery	1x Rechargeable (included)
Remote Control Batteries	2x AA (not included)
Recommended Age	5 years and up
Material	Plastic
Special Function	Water shooting, rechargeable battery
Operation Mode	Remote control

+5



Image: The Bizak Exost Phyton Blaster vehicle with its approximate dimensions (15cm height, 15cm width, 18cm length) clearly marked.

9. WARRANTY AND SUPPORT

For warranty information, customer support, or to purchase replacement parts, please refer to the manufacturer's official website or contact your retailer. Please retain your proof of purchase for any warranty claims.