

110.26832692

Instruction Manual for Kenmore 110.26832692 Washer Water Drain Pump Replacement (Fricpart-055287)

1. INTRODUCTION

This manual provides essential information for the installation, operation, and maintenance of the Fricpart-055287 replacement water drain pump for Kenmore 110.26832692 washing machines. Please read these instructions carefully before proceeding with any installation or repair to ensure safe and correct usage. This part is designed to replace the original drain pump in compatible Kenmore washer models.

2. PRODUCT OVERVIEW

The Fricpart-055287 is a replacement water drain pump specifically designed for Kenmore 110.26832692 washer models. This component is crucial for the proper drainage of water from your washing machine during cycles.

Key Features:

- Direct replacement part for Kenmore 110.26832692 washer.
- Ensures efficient water drainage.
- Constructed for durability and compatibility.



A detailed view of the replacement water drain pump, showing its two inlet/outlet ports and the central impeller housing.

3. SAFETY INFORMATION

Always prioritize safety when working with appliances. Failure to follow these safety guidelines may result in injury or damage to property.

- **Disconnect Power:** Always unplug the washing machine from the power outlet before attempting any repairs or maintenance.
- **Turn Off Water Supply:** Close the hot and cold water supply valves to the washer.
- **Drain Residual Water:** Ensure all water is drained from the washer before beginning work.
- **Wear Protective Gear:** Use gloves and eye protection to prevent injury.
- **Professional Assistance:** If you are unsure about any step, consult a qualified appliance repair technician.

4. SETUP AND INSTALLATION

This section provides general guidance for replacing a washer drain pump. Specific steps may vary depending on your washer's configuration. Refer to your washer's service manual for detailed instructions.

Before You Begin:

- Verify that the replacement pump (Fricpart-055287) is compatible with your Kenmore 110.26832692 washer model.
- Gather necessary tools (e.g., screwdrivers, pliers, towels for water spills).

General Installation Steps:

1. Perform all safety precautions listed in Section 3.
2. Access the drain pump. This typically involves removing the front panel or tilting the washer back.
3. Locate the existing drain pump. Note its orientation and hose connections.
4. Disconnect the electrical wiring harness from the old pump.

5. Remove the hoses connected to the old pump. Be prepared for residual water.
6. Unmount the old pump from its housing or base.
7. Install the new Fricpart-055287 drain pump in the same orientation as the old one.
8. Reconnect the hoses securely, ensuring no leaks.
9. Reconnect the electrical wiring harness.
10. Reassemble the washer panels.
11. Restore water supply and power.
12. Test the washer with a short cycle to check for proper drainage and leaks.

5. OPERATING INSTRUCTIONS (POST-INSTALLATION)

After successful installation of the replacement drain pump, the washer should operate normally. The primary function of the drain pump is automatic during the wash and rinse cycles.

- Initiate a small test load or a drain/spin cycle to confirm the pump is functioning correctly.
- Listen for unusual noises during the drain cycle, which could indicate an issue.
- Observe for any leaks around the pump or hose connections.

6. MAINTENANCE

Regular maintenance can extend the life of your washer and its components, including the drain pump.

- **Check for Obstructions:** Periodically inspect the drain pump filter (if accessible on your model) for lint, coins, or other debris that can impede drainage.
- **Inspect Hoses:** Check drain hoses for kinks, cracks, or blockages that can strain the pump.
- **Clean Washer:** Run a washer cleaning cycle regularly to prevent buildup that could affect drainage.

7. TROUBLESHOOTING

If your washer is experiencing drainage issues after replacing the pump, consider the following:

Problem	Possible Cause	Solution
Washer not draining	Clogged drain hose or pump filter	Inspect and clear drain hose and pump filter.
Water leaking from pump area	Loose hose clamps or damaged hoses	Tighten hose clamps or replace damaged hoses. Ensure proper seating of pump seals.
Pump making unusual noise	Debris in pump impeller or faulty pump	Disconnect power, access pump, and check for debris. If clear, the pump may be faulty.
Washer displays a drain error code	Electronic control issue or pump not receiving power	Verify electrical connections to the pump. Consult your washer's manual for specific error code diagnostics.

8. SPECIFICATIONS

- **Part Number:** FRIC-PL-APP-TP-22052025-008226 (Fricpart-055287)
- **Compatible Washer Model:** Kenmore 110.26832692
- **Brand:** Generic

- **Color:** Black/White
- **Item Package Quantity:** 1

9. WARRANTY AND SUPPORT

For information regarding warranty coverage or technical support for this replacement part, please contact the seller or manufacturer directly. Keep your purchase receipt as proof of purchase.

Third-party protection plans may be available for purchase separately. Please refer to the terms and conditions of any such plan for details.