

UBEU16KN2186IZ27C6HT175EPN (Compatible with Bissell CrossWave OmniForce 4076, 3912, 3999, 4000, 4006, 4007, 4008, 4017,

Brush Roller Replacement Parts User Manual

For Bissell CrossWave OmniForce Series
Brand: Generic | Model: UBEU16KN2186IZ27C6HT175EPN

1. INTRODUCTION

This manual provides essential information for the installation, maintenance, and troubleshooting of your new brush roller replacement part. This part is designed to be compatible with various Bissell CrossWave OmniForce models, ensuring your floor cleaner continues to perform optimally.

Compatible Models: Bissell CrossWave OmniForce 4076, 3912, 3999, 4000, 4006, 4007, 4008, 4017, 4087.

2. PRODUCT OVERVIEW

The brush roller is a critical component of your floor cleaner, responsible for agitating and lifting dirt and debris from various floor surfaces. This replacement part is constructed from robust plastic and features a washable, reusable design for extended life and consistent cleaning performance.

Key Features:

- **Optimal Performance:** Engineered to effectively pick up dirt and dust for a thorough clean.
- **Durability:** Built with robust materials to withstand regular use without diminishing performance.
- **Easy Maintenance:** Washable and reusable, allowing for quick cleanup and reduced waste.



Figure 2.1: The brush roller replacement part, featuring a grey and white textured surface.

3. SETUP AND INSTALLATION

Follow these steps to safely replace the brush roller in your compatible Bissell CrossWave OmniForce floor cleaner. Always ensure the device is unplugged before beginning any maintenance.

1. **Power Off and Unplug:** Disconnect your floor cleaner from the power outlet to prevent accidental

activation.

2. **Access Brush Roll Area:** Depending on your specific model, you may need to open a cover or remove a component to access the brush roll. Refer to your cleaner's original manual for precise instructions on accessing this area.
3. **Remove Old Brush Roller:** Carefully unlatch or slide out the worn or damaged brush roller. Note its orientation for correct installation of the new part.
4. **Insert New Brush Roller:** Align the new brush roller with the slots or guides in the cleaner's brush roll housing. Gently push or slide it into place until it clicks or locks securely. Ensure both ends are properly seated.
5. **Secure Cover:** Close any covers or reattach components that were removed to access the brush roll.
6. **Test Functionality:** Plug in your cleaner and perform a brief test to ensure the new brush roller spins freely and operates correctly.



Figure 3.1: Illustrates the brush roller being inserted into the base of a floor cleaner.

4. OPERATING GUIDELINES

Once the new brush roller is installed, your floor cleaner should resume its optimal cleaning performance. For best results, ensure the brush roller is free from obstructions before each use.

The brush roller is designed to effectively clean various floor types, including hard floors and area rugs, by agitating and lifting embedded dirt. If you notice a decrease in cleaning efficiency, check the brush roller for tangled hair or debris, and refer to the maintenance section.



Figure 4.1: Depicts the brush roller's effectiveness on both hard and soft floor surfaces, demonstrating its cleaning capability.

5. MAINTENANCE

Regular cleaning of your brush roller will extend its lifespan and maintain your cleaner's performance. The brush roller is washable and reusable.

1. **Remove Brush Roller:** Follow the steps in Section 3 to safely remove the brush roller from your cleaner.
2. **Rinse:** Hold the brush roller under running tap water to rinse away dirt, debris, and tangled hair. Use your fingers or a small brush to dislodge stubborn particles.
3. **Inspect:** Check the brush roller for any remaining debris or damage. Ensure the bristles are not matted or excessively worn.
4. **Air Dry:** Allow the brush roller to air dry completely before reinstalling it into your cleaner. Do not use heat to dry, as this may damage the materials.
5. **Reinstall:** Once dry, reinstall the brush roller following the steps in Section 3.

6. TROUBLESHOOTING

If you encounter issues with your brush roller, refer to the table below for common problems and their solutions.

Problem	Possible Cause	Solution
Brush roller not spinning	Tangled hair or debris; improper installation	Remove and clean the brush roller; ensure it is correctly seated and locked into place.
Poor cleaning performance	Worn bristles; brush roller not clean	Clean the brush roller thoroughly; if bristles are significantly worn, consider replacing the roller.
Unusual noise from brush area	Debris caught in brush roller mechanism	Remove brush roller and inspect for any foreign objects.

7. SPECIFICATIONS

Detailed specifications for the brush roller replacement part:

Attribute	Detail
Product Name	Brush Roller Replacement Parts
Material	Plastic
Product Dimensions	9.45 x 9.45 x 1.97 inches
Item Weight	6.1 ounces
Manufacturer	Generic
Item Model Number	UBEU16KN2186IZ27C6HT175EPN
Country of Origin	China

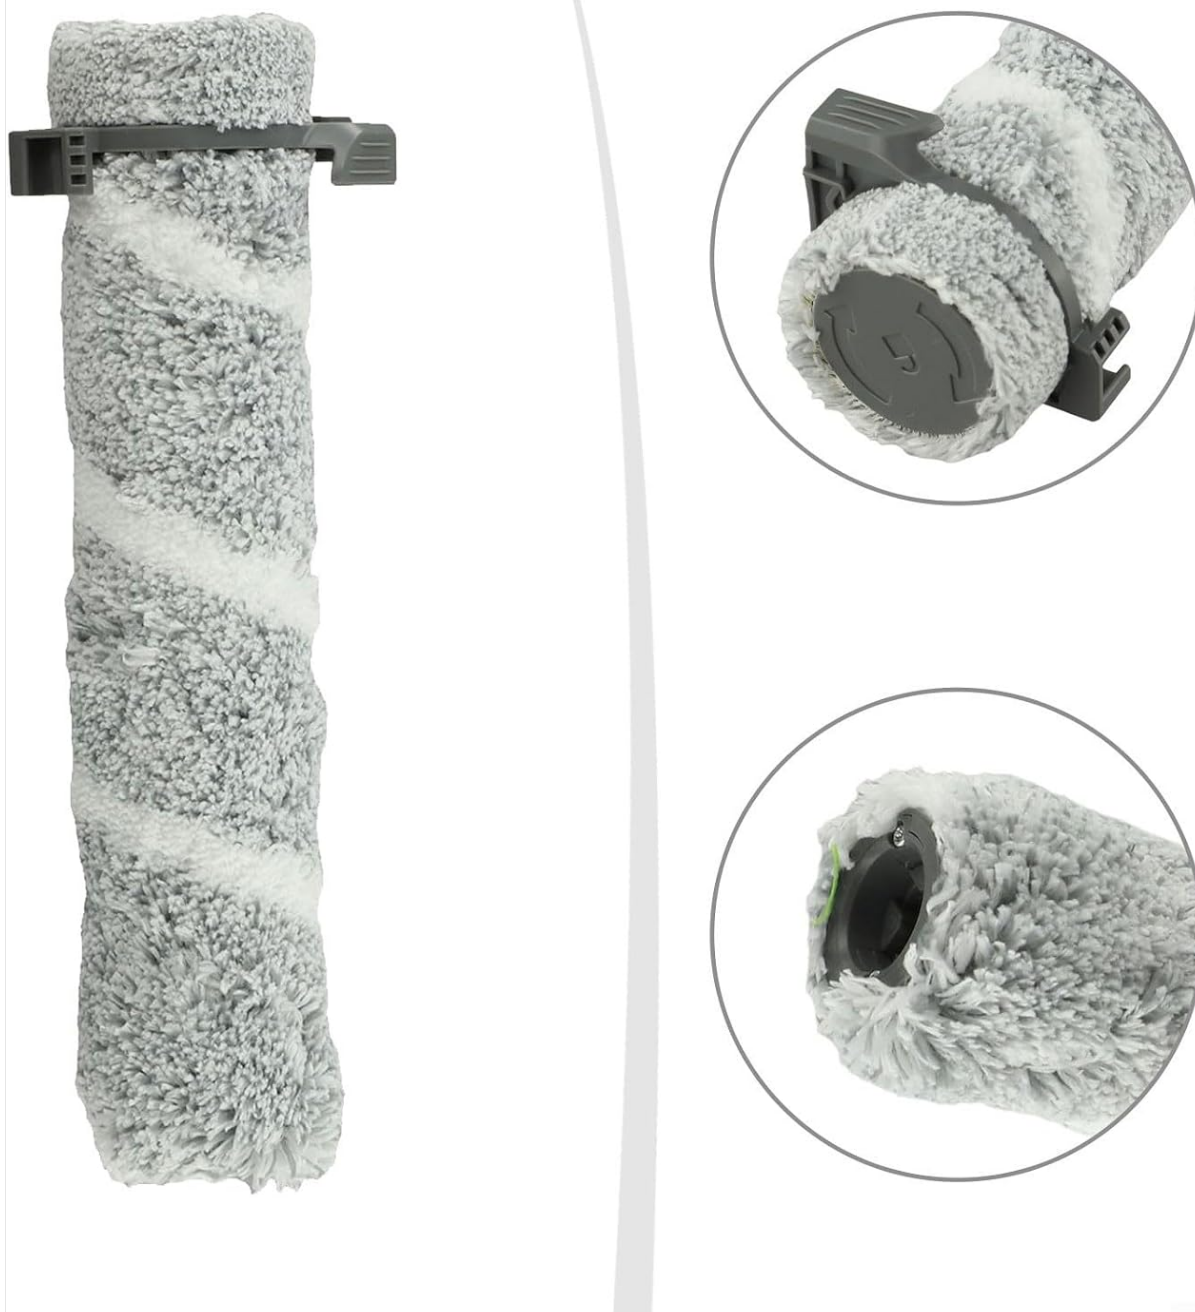


Figure 7.1: Close-up views highlighting the brush roller's design and end components.

8. WARRANTY INFORMATION

Specific warranty details for this Generic brand brush roller replacement part are not provided in this manual. For information regarding warranty coverage, please refer to the product listing where you purchased the item or contact the seller directly.

9. CUSTOMER SUPPORT

For any questions, concerns, or assistance with your brush roller replacement part, please contact the seller or manufacturer through the platform where the purchase was made. Provide your order details and a clear description of your inquiry for prompt support.

© 2025 Generic. All rights reserved. Compatibility with mentioned brands is for reference only.