

- Manuals.plus /
- › AHENOD /
- › AHENOD G18-96GB Android 13 MP3 Player User Manual

AHENOD G18-96GB

AHENOD G18-96GB Android 13 MP3 Player User Manual

Model: G18-96GB

1. INTRODUCTION

This manual provides detailed instructions for the AHENOD G18-96GB Android 13 MP3 Player. It covers device setup, operation, maintenance, and troubleshooting to ensure optimal use of your player. The G18-96GB is a portable multimedia device designed for music and video playback, app usage, and internet connectivity.

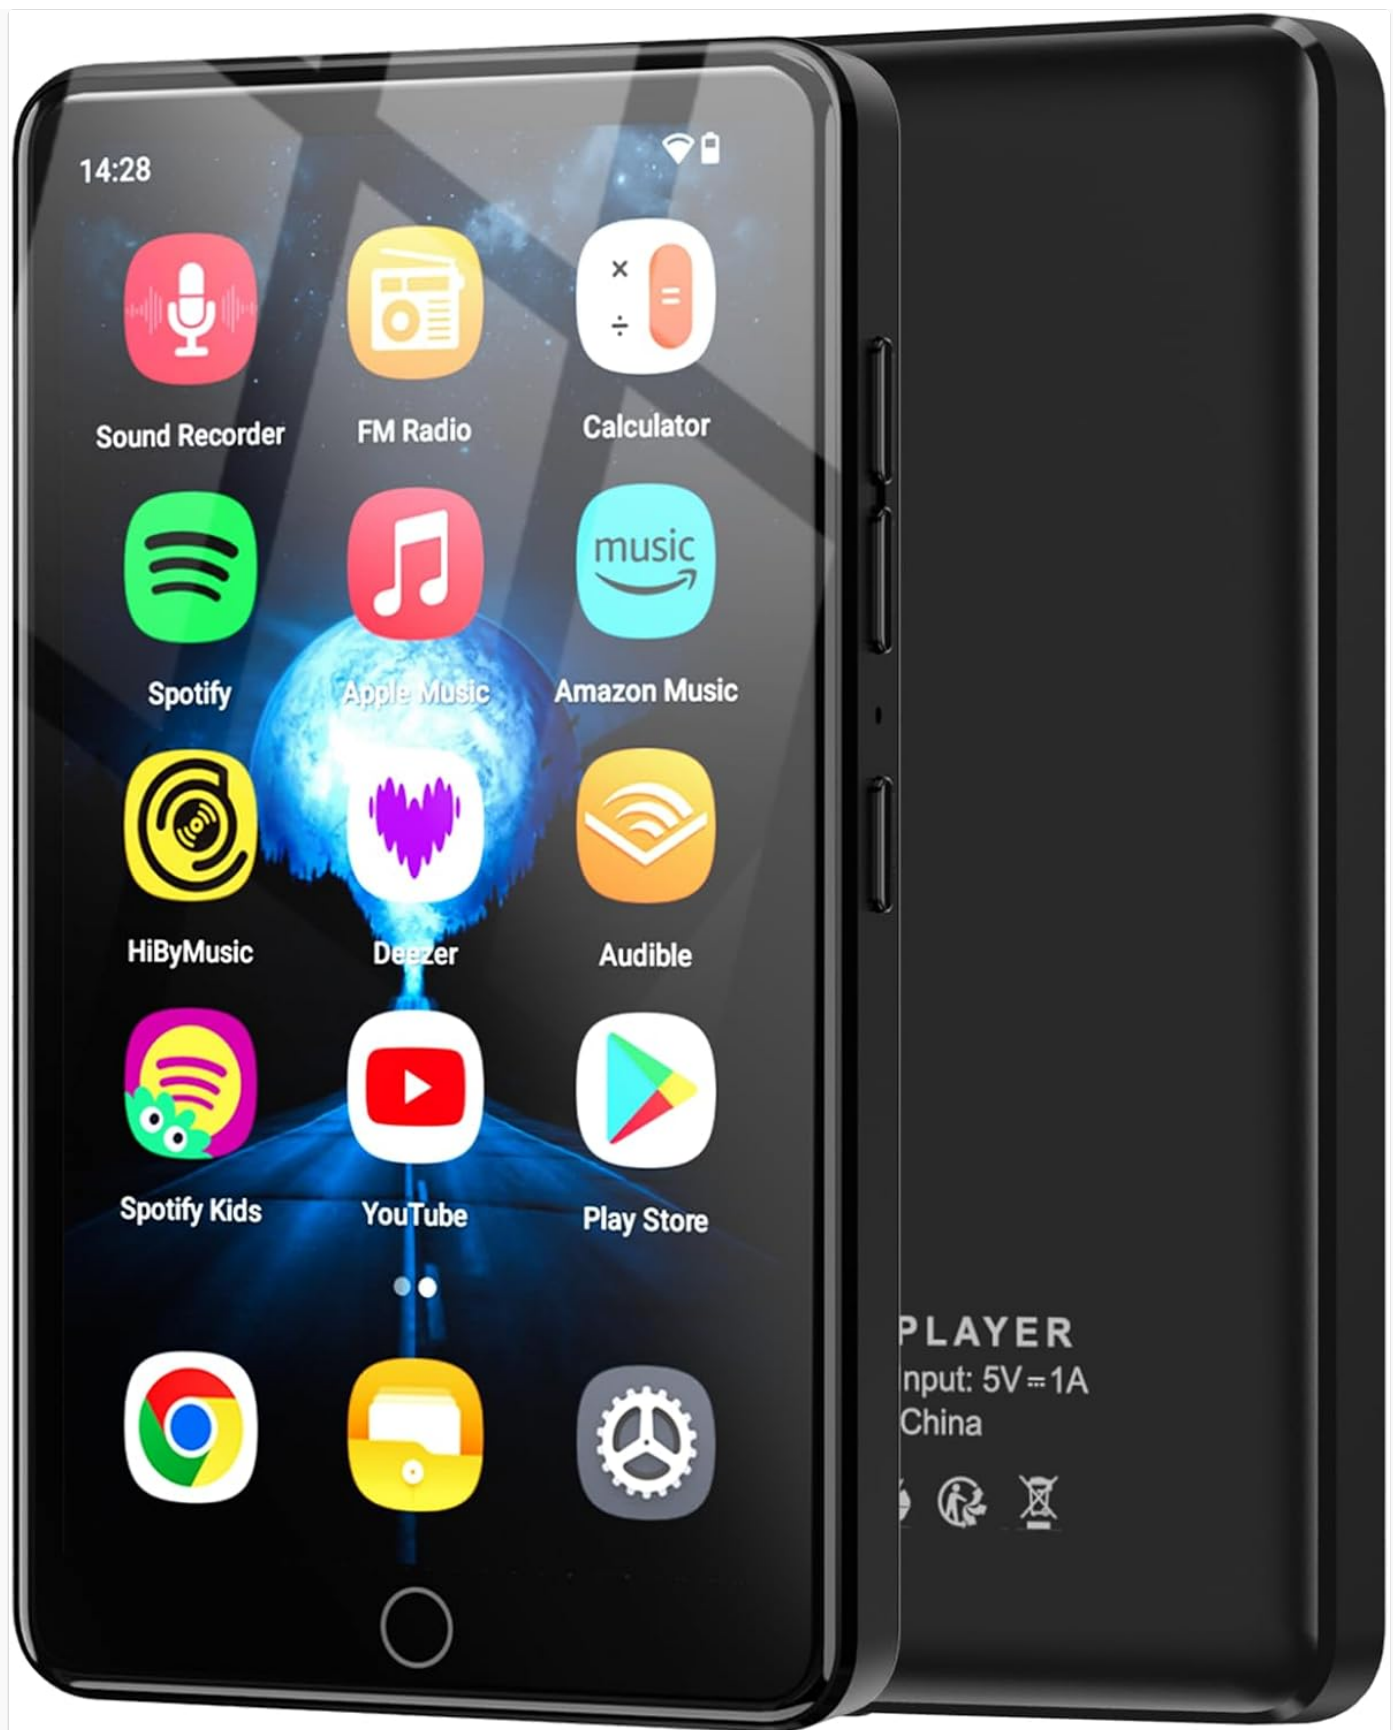 


Image 1.1: Front and back view of the AHENOD G18-96GB MP3 Player, showcasing its touch screen and sleek design.

2. What's in the Box

Verify that all items are present in the package:

- 1 x AHENOD G18-96GB MP3 Player
- 1 x 64GB SD card (pre-installed or separate)

- 1 x User Manual
- 1 x Type-C USB Cable
- 1 x Earphone
- 1 x Silicone Case
- 1 x Protective Film

3. PRODUCT OVERVIEW

The AHENOD G18-96GB features a 4.02-inch IPS HD touch screen, an 8-core MTK processor, and runs on Android 13. It includes 96GB of storage (internal + SD card) and supports Wi-Fi and Bluetooth 5.0 connectivity.




Image 3.1: Overview of the AHENOD G18-96GB's key features, including Wi-Fi 2.4G&5G, Bluetooth 5.0, Android 13, 2000mAh battery, 96GB storage, MTK 8-core processor, and 4.02-inch HD touch screen.

3.1. Processor and Memory

The device is equipped with an MTK 6762 octa-core processor and Android 13, ensuring smooth operation. It has 3GB RAM, 32GB internal ROM, and comes with a 64GB Micro SD card, expandable up to 512GB.

Android 13 OS with MTK 8-core processor

 The device uses MTK 6762 octa-core processor with Android 13 for smoother and more stable use.

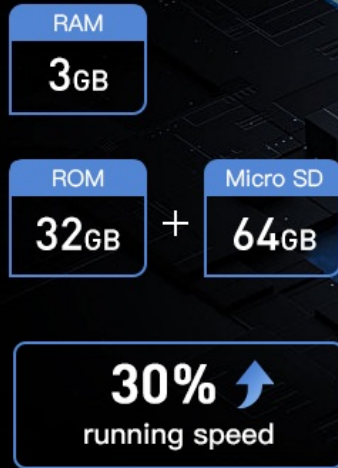

RAM
3GB

ROM
32GB

Micro SD
64GB

30% ↑
running speed

Image 3.2: Details of the Android 13 OS and MTK 8-core processor, highlighting RAM, ROM, and Micro SD card specifications.

 
4. SETUP

4.1. Charging the Device

Connect the device to a power source using the provided Type-C USB cable. The battery indicator on the screen will show charging status. A full charge provides approximately 25 hours of music playback or 5 hours of video playback.

Batteria integrata da 2000mAh

La soluzione a basso consumo garantisce l'ascolto continuo di musica e film

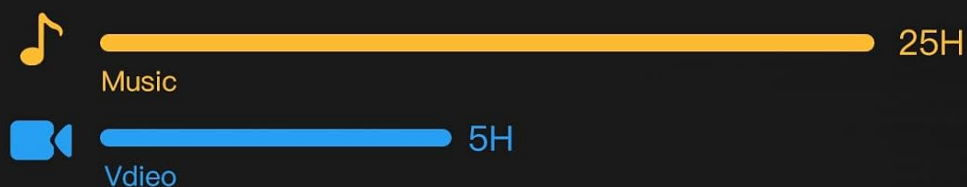

2000mAh

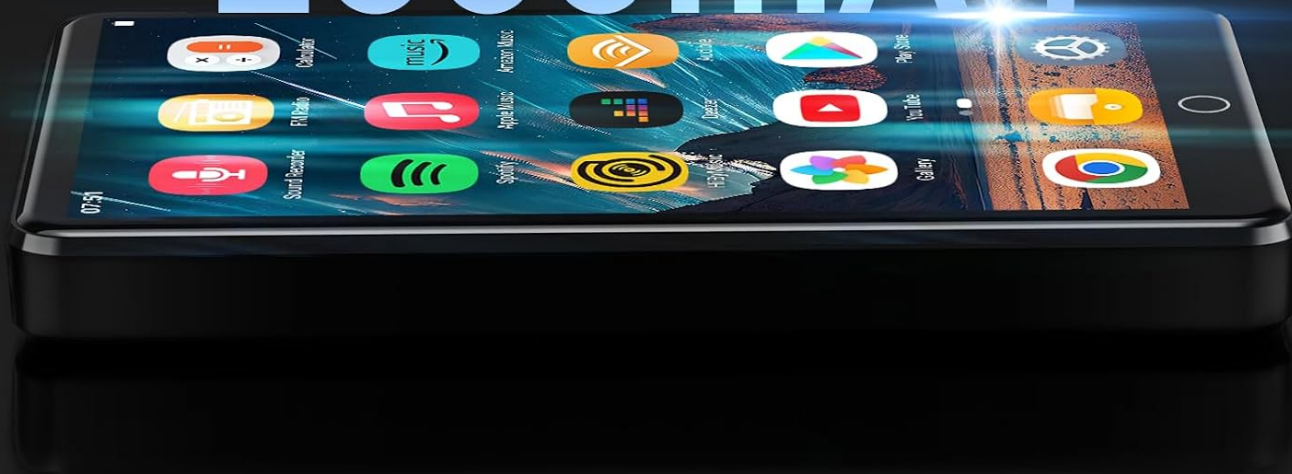 


Image 4.1: Illustration of the 2000mAh battery capacity and estimated usage times for music and video.

4.2. Power On/Off

- **To Power On:** Press and hold the power button on the side of the device until the screen lights up.
- **To Power Off:** Press and hold the power button, then select 'Power Off' from the options on the screen.

4.3. Inserting the SD Card

The device supports expandable storage up to 512GB. Locate the SD card slot on the side of the player and gently insert the Micro SD card until it clicks into place. A 64GB SD card is included.

Expandable Storage Up to 512G

The device has 32GB of RAM and a 64GB memory card with support for up to 512GB, which is perfectly suited to your high-capacity needs

3GB

RAM

32GB

ROM

64GB

SD Card in Package



Image 4.2: Visual representation of the expandable storage feature, showing the SD card slot and memory capacities.

4.4. Wi-Fi Connection

Navigate to **Settings > Network & internet > Wi-Fi**. Turn on Wi-Fi and select your desired network. Enter the password if prompted to connect to the internet.

4.5. Google Account Setup

To access the Google Play Store and other Google services, you will need to sign in with or create a Google account during the initial setup or via **Settings > Accounts**.

5. OPERATING INSTRUCTIONS

5.1. Basic Navigation

The device features a responsive 4.02-inch IPS HD touch screen for navigation. Swipe left or right to switch between home screens, tap icons to open applications, and use gestures for various functions.

5.2. Music Playback

The player supports various audio formats including MP3, WAV, APE, FLAC, AAC, OGG, and WMA. You can play local music files or stream from pre-installed apps like Spotify, Spotify Kids, HiByMusic, Deezer, Apple Music, and Amazon Music.



Image 5.1: The local music player interface, showing playback controls, song information, and options for sequential play, list loop, random playback, and single loop.

5.3. Video Playback

The 4.02-inch IPS screen supports 1080P resolution for video playback. Compatible video formats include AVI, MKV, RMVB, MP4, MPG, MOV, RM, and FLY.

1080P HD Full Touch Screen Player

Video format support: AVI MKV RMVB MP4 MPG MOV RM FLY



4.02 inch



640*1136

IPS

IPS HD touch screen



Image 5.2: The device displaying a high-definition video on its 4.02-inch IPS touch screen.

5.4. Bluetooth Connectivity

The device features duplex Bluetooth 5.0 for stable and compatible connections with various Bluetooth devices such as headphones, speakers, and car stereos.

- **To Connect:** Go to **Settings > Connected devices > Bluetooth**. Turn on Bluetooth and select 'Pair new device' to find and connect to available devices.

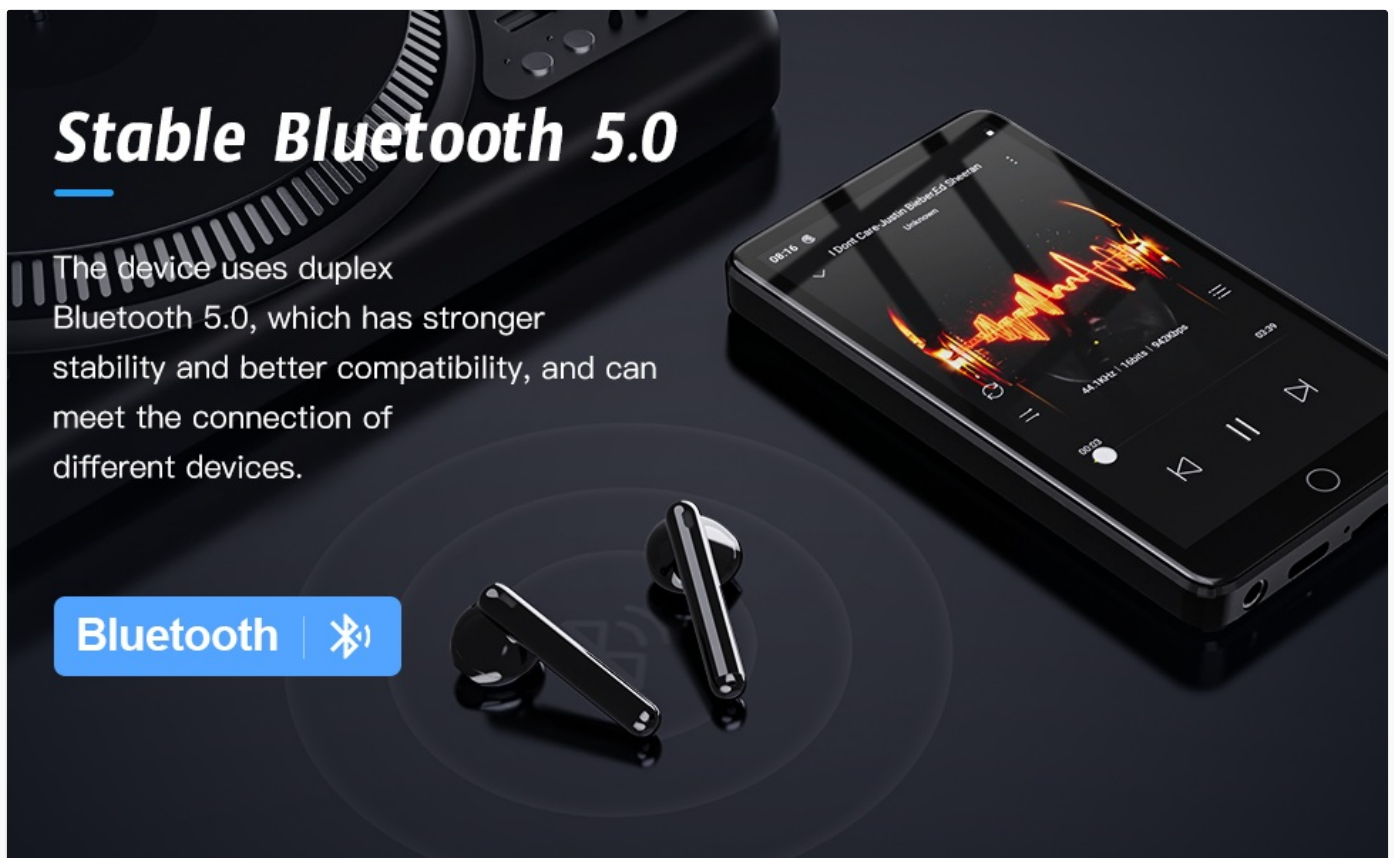


Image 5.3: The device connected via Bluetooth 5.0 to wireless earbuds, illustrating stable connectivity.

5.5. App Management

The device comes with the Google Play Store pre-installed, allowing you to install additional applications or update existing ones. You can also uninstall apps to free up memory.

- **To Install:** Open the **Play Store** app, search for your desired application, and tap 'Install'.
- **To Uninstall:** Press and hold the app icon on the home screen or app drawer, then drag it to the 'Uninstall' option that appears, or go to **Settings > Apps > See all apps** select the app, and tap 'Uninstall'.



Image 5.4: A visual guide demonstrating how to uninstall an application from the device's home screen.

5.6. Parental Controls

Parents can manage app access, set screen time limits, and control browser access using Google's Family Link. This feature can be enabled and configured within the device's settings.

- **To Set Up:** Navigate to **Settings > Digital Wellbeing & parental controls > Parental controls** and follow the on-

screen instructions to set up Family Link.

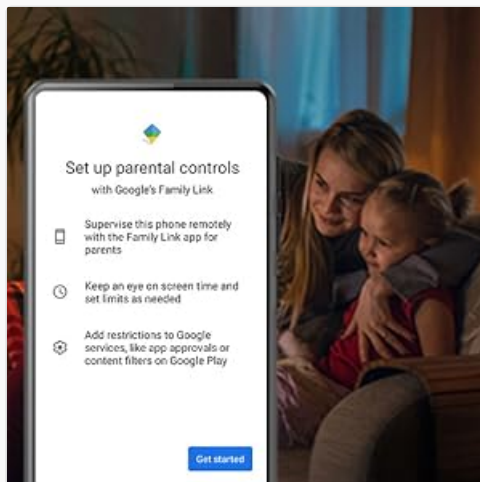


Image 5.5: The parental controls setup interface, indicating options for supervising the device, managing screen time, and restricting Google services.

5.7. Sound Recorder and FM Radio

The device includes a built-in sound recorder for capturing audio and an FM radio for listening to local broadcasts.

- **Sound Recorder:** Open the 'Sound Recorder' app from the app drawer to start recording.
- **FM Radio:** Connect wired earphones (which act as an antenna) and open the 'FM Radio' app to tune into stations.



Image 5.6: The Sound Recorder application interface, showing recording time and controls.

6. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the device. Avoid liquid cleaners or abrasive materials.
- **Battery Care:** To prolong battery life, avoid extreme temperatures and do not allow the battery to fully discharge frequently. Charge the device regularly.
- **Software Updates:** Periodically check for system updates in **Settings > System > System update** to ensure optimal performance and security.

7. TROUBLESHOOTING

- **Device Not Turning On:** Ensure the device is sufficiently charged. Connect it to a power source for at least 30 minutes before attempting to power on again.

- **Slow Performance or App Crashes:**
 - Close unnecessary background applications.
 - Clear app cache (**Settings > Apps > See all apps > [App Name] > Storage & cache > Clear cache**)
 - Ensure sufficient storage space is available. Uninstall unused apps or transfer files to the SD card.
 - Restart the device.
- **Bluetooth Connectivity Issues:**
 - Ensure Bluetooth is enabled on both the player and the target device.
 - Make sure devices are within range (typically 10 meters).
 - Forget the device in Bluetooth settings and attempt to re-pair.
 - Restart both devices.
- **Wi-Fi Connection Problems:**
 - Verify the Wi-Fi password is correct.
 - Restart your Wi-Fi router.
 - Ensure the device is within range of the Wi-Fi signal.
- **Battery Drains Quickly:**
 - Reduce screen brightness.
 - Close background apps when not in use.
 - Disable Wi-Fi and Bluetooth when not needed.
 - Limit streaming content, which consumes more power.

8. SPECIFICATIONS

Feature	Specification
Model Number	G18-96GB
Operating System	Android 13
Processor	MTK 8-core
Screen Size	4.02 Inches IPS HD Touch Screen
Memory Storage Capacity	96 GB (32GB ROM + 64GB SD card)
Expandable Storage	Up to 512 GB (Micro SD)
Connectivity Technology	Bluetooth 5.0, Wi-Fi (2.4G & 5G)
Battery	2000mAh Li-ion (1 9V battery included)
Special Features	Built-In Speaker, FM Radio, Sound Recorder
Supported Audio Formats	MP3, WAV, APE, FLAC, AAC, OGG, WMA
Supported Video Formats	AVI, MKV, RMVB, MP4, MPG, MOV, RM, FLY
Item Weight	7.4 ounces (approx. 210 grams)
Dimensions	10.3 x 5.8 x 1.1 cm (approx. 4.06 x 2.28 x 0.43 inches)

9. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation included with your purchase or contact AHENOD customer service through their official channels. Keep your proof of purchase for any warranty claims.

© 2025 AHENOD. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question