



1106807820

# User Manual for Kenmore 1106807820 OEM Dryer Drum Rollers

Brand: **Generic** | Model: **1106807820**

## 1. INTRODUCTION

---

This manual provides essential information for the installation, operation, maintenance, and troubleshooting of the Kenmore 1106807820 OEM Dryer Drum Rollers. These replacement parts are designed to restore the smooth and efficient operation of your dryer. Please read this manual carefully before proceeding with installation to ensure proper function and safety.

## 2. PRODUCT OVERVIEW

---



**Image Description:** This image displays two black and green dryer drum rollers, which are circular components with a central metal bearing. Alongside them are several small accessory parts: four light-colored triangular washers and one dark-colored circular washer. These components are crucial for the smooth rotation of the dryer drum.

The Kenmore 1106807820 OEM Dryer Drum Rollers are critical components that support the dryer drum, allowing it to rotate smoothly during operation. Worn-out rollers can lead to excessive noise, drum not turning, or inefficient drying. This kit includes the necessary rollers and associated washers for replacement.

### 3. SETUP AND INSTALLATION

---

Replacing dryer drum rollers requires disassembling parts of your dryer. It is recommended that this procedure be performed by an individual with mechanical aptitude or a qualified technician. Always ensure the dryer is unplugged from the power source before beginning any repair work.

#### 3.1. Safety Precautions

- **Disconnect Power:** Always unplug the dryer from the electrical outlet before starting any work.
- **Wear Gloves:** Protect your hands from sharp edges and grease.
- **Proper Tools:** Use appropriate tools for disassembly and reassembly.
- **Ventilation:** Ensure adequate ventilation if using cleaning agents.

#### 3.2. Installation Steps (General Guide)

*Note: Specific disassembly steps may vary by dryer model. Refer to your dryer's service manual for detailed instructions.*

1. **Access the Drum:** Carefully remove the top panel, control panel, front panel, and possibly the drum belt to gain access to the dryer drum and its support components.
2. **Locate Old Rollers:** Identify the existing drum rollers, typically located at the front and/or rear of the dryer drum support frame.
3. **Remove Old Rollers:** Detach the old rollers from their mounting posts. Note how they are installed, including any washers or clips.
4. **Install New Rollers:** Place the new Kenmore 1106807820 OEM Dryer Drum Rollers onto the mounting posts. Ensure all included washers and clips are installed correctly as per the original configuration.
5. **Reassemble Dryer:** Carefully reassemble the dryer in reverse order of disassembly. Ensure all connections are secure and no wires are pinched.
6. **Test Functionality:** Before plugging in, manually rotate the drum to ensure it moves freely and smoothly.

### 4. OPERATING CONSIDERATIONS

---

Once the new drum rollers are installed, the dryer should operate with reduced noise and improved drum rotation. Listen for any unusual sounds during the first few cycles. A properly functioning dryer drum will rotate smoothly and quietly.

- **Initial Test Run:** Run an empty cycle or a small load to confirm proper operation.
- **Listen for Noise:** Pay attention to any squeaking, grinding, or thumping noises, which could indicate improper installation or other issues.
- **Check Drying Efficiency:** Ensure clothes are drying effectively, as proper drum rotation is crucial for airflow.

### 5. MAINTENANCE

---

Regular inspection of dryer components can extend the life of your appliance and prevent future issues.

- **Periodic Inspection:** If you notice increased noise or reduced drum movement, inspect the rollers for wear.
- **Clean Lint:** Regularly clean lint from inside the dryer cabinet, especially around moving parts, to prevent buildup and friction.
- **Lubrication:** Drum rollers are typically self-lubricating or have sealed bearings. Do not apply grease or oil unless

specifically recommended by the dryer manufacturer.

## 6. TROUBLESHOOTING

If you encounter issues after installing the new drum rollers, consider the following common problems and solutions:

Problem	Possible Cause	Solution
Dryer making squealing or thumping noise.	Rollers not seated correctly, or other worn components (e.g., idler pulley, motor).	Re-check roller installation. Inspect other moving parts for wear.
Drum not turning.	Drum belt dislodged or broken, motor issue, or rollers seized.	Check drum belt. Ensure rollers spin freely. Consult a technician if motor issues are suspected.
Clothes not drying properly.	Restricted airflow due to lint, or drum not rotating efficiently.	Clean lint filter and dryer vents. Verify drum rotation.

## 7. SPECIFICATIONS

Attribute	Detail
Part Number	1106807820 (OEM Equivalent) / FRIC-PL-APP-TP-22052025-011865 (Manufacturer's Part Number)
Compatible Models	Kenmore 1106807820 and other compatible models (verify before purchase)
Manufacturer	Fricparts
Brand	Generic
Color	Black/White
Item Package Quantity	1 (typically includes a set of rollers and associated hardware)
ASIN	B0F9NYSSF8

## 8. WARRANTY AND SUPPORT

### 8.1. Return Policy

This product is subject to a 30-day return policy for refund or replacement. Please refer to your purchase platform's return guidelines for specific details and procedures.

### 8.2. Customer Support

For technical assistance, questions regarding compatibility, or issues with the product, please contact the seller, Fricgore, through the platform where the purchase was made. Provide your order number and a detailed description of the issue for prompt assistance.

