

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [iDiskk](#) /
- › [iDiskk Security Lock Box Shoulder Bag User Manual](#)

iDiskk B0F9P1CCW5

iDiskk Security Lock Box Shoulder Bag User Manual

Model: B0F9P1CCW5 | Brand: iDiskk

[Introduction](#) [Safety Information](#) [Package Contents](#) [Product](#)
[Overview](#) [Setup](#) [Operation](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. INTRODUCTION

The iDiskk Security Lock Box Shoulder Bag is designed to protect your valuables with advanced security features. This bag incorporates fingerprint and password unlocking mechanisms, along with Apple MFi certification for seamless integration with the Find My app on iOS devices. It also features RFID blocking technology to safeguard your personal information.

This manual provides detailed instructions for the proper setup, operation, and maintenance of your iDiskk Security Lock Box Shoulder Bag. Please read this manual thoroughly before using the product.

Your browser does not support the video tag.

Video 1: Official product overview of the iDiskk Security Lock Box Shoulder Bag, highlighting its design and key features.

2. SAFETY INFORMATION

- Do not expose the bag to extreme temperatures or direct sunlight for prolonged periods.
- Avoid submerging the bag in water or exposing it to heavy rain.
- Keep the fingerprint sensor and keypad clean and dry to ensure optimal performance.
- Do not attempt to force open the bag if it is locked. Refer to the troubleshooting section for assistance.
- Use only the provided charging cable for the internal battery.
- Keep out of reach of children to prevent accidental locking or damage.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- iDiskk Security Lock Box Shoulder Bag
- Shoulder Strap (chain and leatherette)
- USB Charging Cable

4. PRODUCT OVERVIEW

The iDiskk Security Lock Box Shoulder Bag features a durable metallic construction with integrated electronic locking mechanisms. Key components include:

- **Fingerprint Sensor:** Located on the top surface for quick biometric unlocking.
- **Numeric Keypad:** For password entry, located alongside the fingerprint sensor.
- **Status Indicator Light:** Provides visual feedback on lock status (e.g., green for unlocked, red for locked/error).
- **Charging Port:** For recharging the internal battery.
- **Shoulder Strap Attachment Points:** For securing the detachable shoulder strap.



Figure 1: Detailed view of the iDiskk Security Lock Box Shoulder Bag, highlighting the intelligent unlocking method (fingerprint sensor), secure code keypad, and shoulder straps.

TRUSTED SECURITY GUARD YOUR VALUABLES

FINGERPRINT & PASSWORD UNLOCK



Figure 2: Close-up of the bag's top panel, illustrating the fingerprint and password unlocking areas.

5. SETUP

5.1 Initial Charging

Before first use, fully charge the bag's internal battery using the provided USB cable. Connect the cable to the charging port on the bag and a compatible USB power source. The status indicator light will show charging status (e.g., red for charging, green for fully charged).

5.2 Setting Up Fingerprint and Password

The bag comes with a default password (e.g., 12345#) and allows any fingerprint to unlock initially. It is crucial to set your personal fingerprint(s) and password for security.

1. Change Default Password:

- Press the '#' key.

- Enter the default password (e.g., 12345#).
- Press the '*' key.
- Enter your new 6-digit password followed by '#'.
- Re-enter your new 6-digit password followed by '#' to confirm.
- The status indicator will confirm successful password change.

2. Register Fingerprint(s): (Up to 3 fingerprints can be registered)

- With the bag unlocked, press and hold the fingerprint sensor until the indicator light flashes.
- Place your finger on the sensor, lift, and repeat several times from different angles until the indicator light confirms successful registration (e.g., solid green light).
- Repeat for additional fingerprints if desired.

5.3 Connecting to Apple Find My App (iOS Only)

The iDiskk bag is MFi certified and can be tracked using the Apple Find My app on your iOS device. No additional app download is required.

1. Ensure Bluetooth is enabled on your iPhone or iPad.
2. Open the "Find My" app.
3. Navigate to the "Items" tab and tap "Add Item".
4. Select "Other Supported Item".
5. The app will search for nearby compatible devices. Select "safeBag" (or similar name) and tap "Connect".
6. You can rename your bag and choose an emoji for it. Tap "Continue" and then "Agree" to the terms.
7. Once paired, you can view its location on the map, play a sound, or get directions to your bag.



Figure 3: Step-by-step guide for connecting your iDiskk bag to the Apple Find My app.

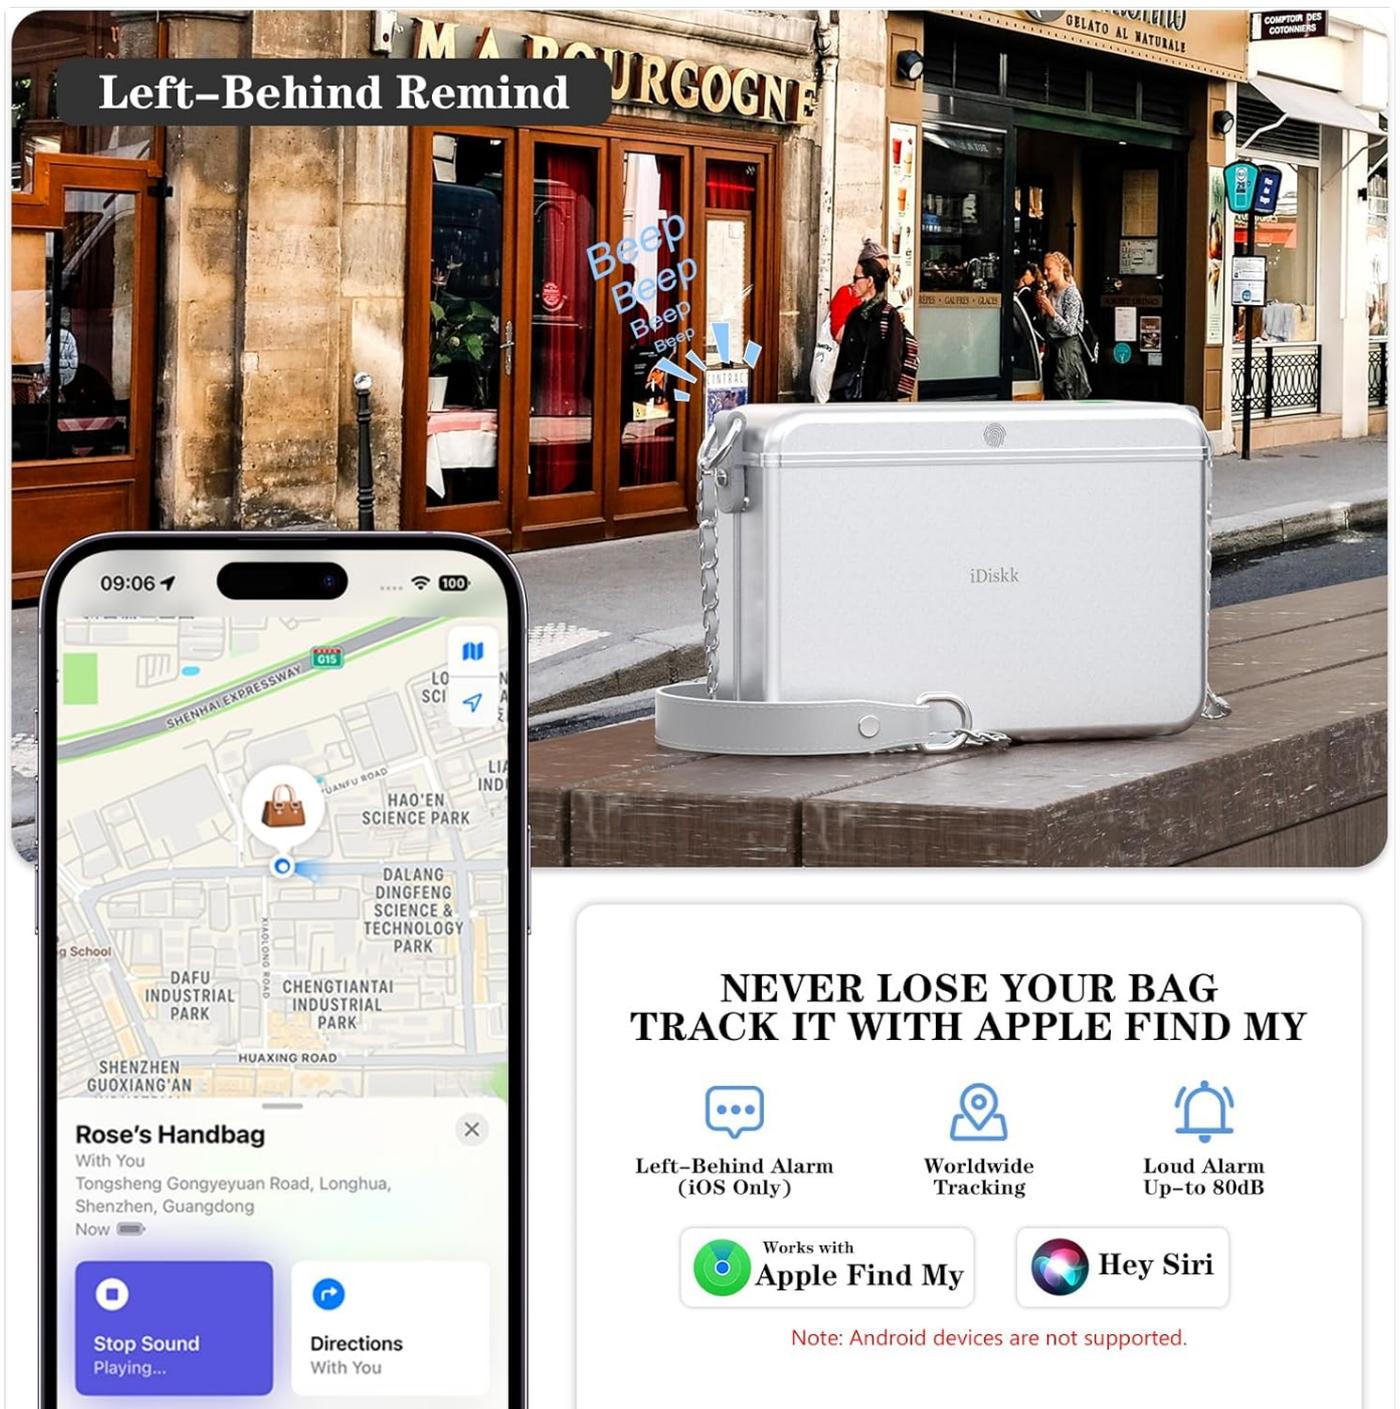


Figure 4: The Find My app interface displaying the bag's location and options like "Play Sound" and "Directions".

6. OPERATING INSTRUCTIONS

6.1 Unlocking with Fingerprint

To unlock the bag using your registered fingerprint:

1. Place your registered finger firmly on the fingerprint sensor.
2. The status indicator light will turn green, and you will hear an audible click as the lock disengages.
3. Gently lift the lid to open the bag.

6.2 Unlocking with Password

To unlock the bag using your set password:

1. Press the '#' key to activate the keypad.

2. Enter your 6-digit password followed by the '#' key.
3. The status indicator light will turn green, and you will hear an audible click as the lock disengages.
4. Gently lift the lid to open the bag.

Your browser does not support the video tag.

Video 2: Official product video demonstrating the fingerprint and password unlocking features of the iDiskk Security Lock Box Shoulder Bag.

6.3 Using Find My Features

Once paired with the Apple Find My app, you can utilize its features:

- **Locate:** View the bag's current or last known location on a map.
- **Play Sound:** If the bag is nearby but out of sight, tap "Play Sound" in the app to make the bag emit an audible alert.
- **Lost Mode:** Mark your bag as lost to receive notifications if it's found by another Apple device user. You can also display contact information for the finder.

6.4 RFID Blocking Protection

The iDiskk Security Lock Box Shoulder Bag is equipped with RFID blocking material to protect your credit cards, passports, and other RFID-enabled items from unauthorized scanning and electronic theft.



Figure 5: Illustration of the bag's RFID blocking capability, preventing unauthorized data scans.

7. MAINTENANCE

- **Cleaning:** Wipe the exterior with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners. Ensure the fingerprint sensor and keypad are free of dust and debris.
- **Battery Care:** Recharge the battery regularly, even if the bag is not in frequent use, to maintain battery health. Avoid completely draining the battery.
- **Storage:** Store the bag in a cool, dry place when not in use.

8. TROUBLESHOOTING

8.1 Bag Does Not Open

- **Check Battery:** Ensure the bag is sufficiently charged. A low battery might prevent the locking mechanism from operating. Charge the bag for at least 30 minutes and try again.

- **Incorrect Fingerprint/Password:** Verify you are using a registered fingerprint or the correct password. The status indicator will typically flash red for incorrect attempts.
- **Sensor/Keypad Cleanliness:** Ensure the fingerprint sensor and keypad are clean and dry. Moisture or dirt can interfere with recognition.
- **Mechanical Jam:** If the lock mechanism sounds like it's engaging but the lid doesn't open, gently press down on the lid while attempting to unlock. If the issue persists, contact customer support.

8.2 Find My App Not Locating Bag

- **Bluetooth Connection:** Ensure Bluetooth is active on your iOS device and the bag is within range.
- **Bag Battery:** The bag needs to have sufficient battery power to transmit its location.
- **Re-pair Device:** If connection issues persist, try removing the bag from the Find My app and re-pairing it.

9. SPECIFICATIONS

Product Dimensions	7.3 x 2.56 x 3.4 inches (L*W*H)
Internal Dimensions	7.3 x 2.2 x 3.4 inches (L*W*H)
Item Weight	2 pounds
Shoulder Strap Length	47.2 inches
Battery	1 Lithium Ion battery required
Unlocking Methods	Fingerprint, Password
Tracking	Apple Find My App (iOS Only)
Security Features	RFID Blocking

High-Strength Material Shoulderbag

Perfect size & Plenty of room



Figure 6: Visual representation of the bag's dimensions and internal capacity.

10. WARRANTY AND SUPPORT

The iDisk Security Lock Box Shoulder Bag comes with a standard manufacturer's warranty. For warranty details, product support, or to report any issues, please contact iDiskk customer service through their official website or the retailer where the product was purchased. Please retain your proof of purchase for warranty claims.

USE "FIND MY" TO PAIR, NO APP DOWNLOAD REQUIRED

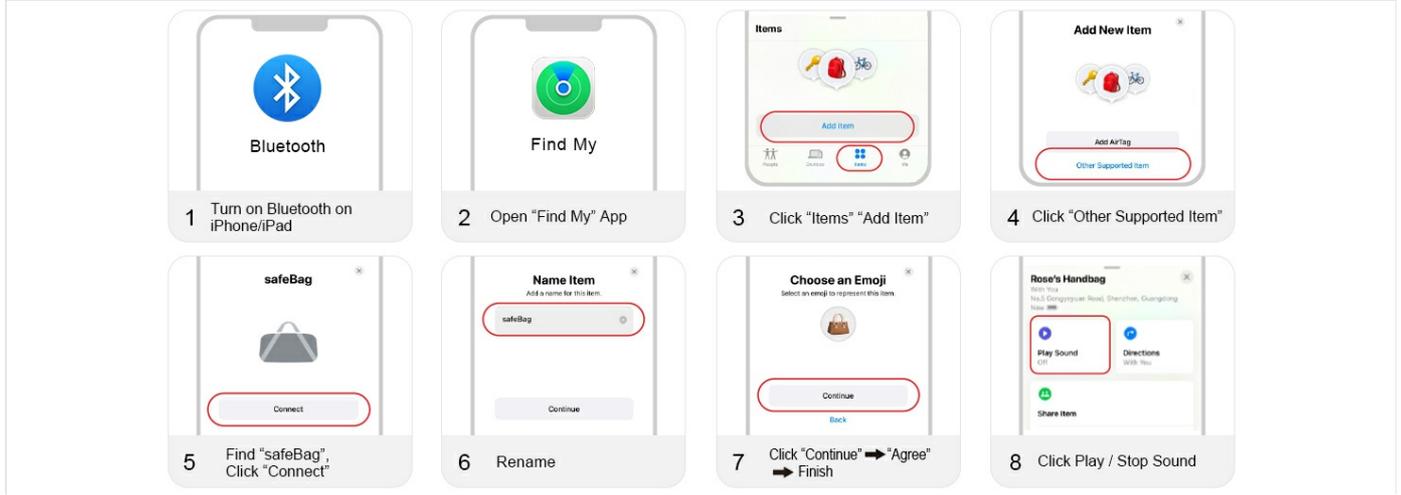


Figure 7: iDisk customer support is available to assist with product inquiries and issues.