

[manuals.plus](#) /

› [Xiaomi](#) /

› [Xiaomi Redmi Pad 2 User Manual](#)

Xiaomi Redmi Pad 2 (4GB+128GB Wi-Fi)

Xiaomi Redmi Pad 2 User Manual

Model: Redmi Pad 2 (4GB+128GB Wi-Fi)

1. INTRODUCTION

Welcome to the user manual for your new Xiaomi Redmi Pad 2. This guide provides essential information to help you set up, operate, maintain, and troubleshoot your device. Please read this manual thoroughly to ensure optimal performance and longevity of your tablet.



Figure 1.1: Xiaomi Redmi Pad 2 Tablet

This image displays the Xiaomi Redmi Pad 2 tablet from both the front and back, highlighting its sleek design and camera module.

2. PRODUCT OVERVIEW

The Redmi Pad 2 is designed for immersive entertainment and productivity, featuring a large display, powerful processor, and long-lasting battery.

2.1 Key Features

- Display:** 11-inch 2.5K high-resolution display with 90Hz Adaptive Sync refresh rate and eye care features.
- Performance:** Powered by the high-performance MediaTek Helio G100-Ultra chip.
- Storage:** 4GB RAM and 128GB internal storage, expandable up to 2TB via microSD card.

- **Audio:** Quad speakers with Dolby Atmos support for an immersive audio experience.
- **Battery:** Large 9000mAh battery for extended usage.
- **Connectivity:** Supports Xiaomi Interconnectivity features for seamless device integration.
- **Design:** Durable metal unibody construction.
- **Software:** Runs on Xiaomi HyperOS, with pre-installed applications like bekids Coloring.
- **Accessories:** Compatible with Redmi Smart Pen (sold separately).



Figure 2.1: Key Features Overview

This image provides a visual summary of the Redmi Pad 2's main features, including its display, battery, processor, and speaker system.

2.2 Components

Your Redmi Pad 2 package includes:

- Redmi Pad 2 Tablet
- Power Adapter
- USB Type-C Cable
- Quick Start Guide
- Warranty Card

3. SETUP

3.1 Charging the Battery

Before first use, fully charge the tablet's battery. Connect the provided USB Type-C cable to the tablet's charging port and the other end to the power adapter. Plug the power adapter into a wall outlet.

11インチ2.5K高精細ディスプレイ



11"

インチ

2560 x 1600

解像度

10-bit

色深度

274

ppi

1500:1

コントラスト比

なめらかな90Hz AdaptiveSyncリフレッシュレート

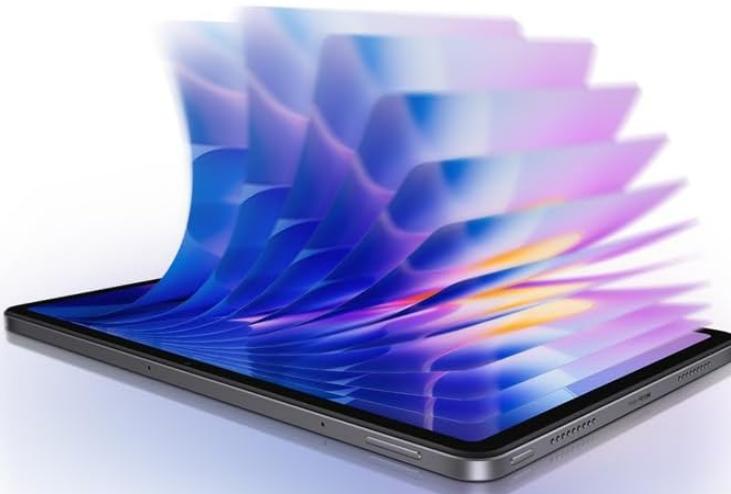


Figure 3.1: 9000mAh Battery

This image illustrates the large 9000mAh battery capacity of the Redmi Pad 2, indicating long usage times.

3.2 Powering On/Off

- To Power On:** Press and hold the Power button until the Xiaomi logo appears.
- To Power Off:** Press and hold the Power button until the power menu appears, then select "Power off".
- To Restart:** Press and hold the Power button until the power menu appears, then select "Restart".

3.3 Initial Setup

Upon first power-on, follow the on-screen instructions to complete the initial setup, which includes selecting your

language, connecting to a Wi-Fi network, and signing in with your Google account.

4. OPERATING INSTRUCTIONS

4.1 Navigating the Interface

The Redmi Pad 2 runs on Xiaomi HyperOS, offering an intuitive user experience. Use touch gestures to navigate:

- **Tap:** Select an item or open an app.
- **Swipe:** Scroll through pages or lists.
- **Pinch:** Zoom in or out on images and web pages.

4.2 Connecting to Wi-Fi

To connect to a Wi-Fi network:

1. Go to **Settings > Wi-Fi**.
2. Turn on Wi-Fi.
3. Select your desired network from the list.
4. Enter the password if prompted, then tap **Connect**.



Figure 4.1: Network Interconnectivity

This image demonstrates the network interconnectivity feature, allowing the tablet to easily connect to a smartphone's hotspot.

4.3 Using Xiaomi Interconnectivity

The Redmi Pad 2 supports Xiaomi Interconnectivity, allowing seamless interaction with other Xiaomi devices.

- **Communication Interconnectivity:** Answer phone calls directly on your tablet.
- **Network Interconnectivity:** Easily share your phone's mobile data with the tablet.
- **Shared Clipboard:** Copy text or images on one device and paste them on another.

通信連携

シームレスな通話対応：スマートフォンに着信した通話をタブレット上で直接受けることができ、音声通話をスムーズにデバイス間で切り替えられます。



Figure 4.2: Communication Interconnectivity

This image illustrates how the tablet can receive and manage phone calls seamlessly from a connected smartphone.

共有クリップボード

テキストや画像を、まるで同じデバイス内にいるかのようにシームレスにコピー＆ペーストできます。



Figure 4.3: Shared Clipboard

This image demonstrates the shared clipboard functionality, allowing users to copy and paste content between their Xiaomi phone and tablet.

4.4 Expanding Storage

You can expand the tablet's storage up to 2TB using a microSD card. Locate the microSD card slot on the side of the tablet, insert the card gently until it clicks into place.

Xiaomi Interconnectivity対応

通信連携



ネットワー ク連携



共有クリッ プボード



Figure 4.4: 2TB Expandable Storage

This image highlights the Redmi Pad 2's capability to expand storage up to 2TB, providing ample space for media and files.

4.5 Using Redmi Smart Pen (Optional)

The Redmi Pad 2 supports the Redmi Smart Pen for enhanced creativity and productivity. Simply pair the pen with your tablet via Bluetooth and start writing or drawing.

メタルユニボディ



3色のスタイリッシュなカラー



Figure 4.5: Redmi Smart Pen Support

This image shows a hand using the Redmi Smart Pen to draw on the tablet screen, demonstrating its compatibility and functionality.

5. MAINTENANCE

5.1 Cleaning the Device

Use a soft, lint-free cloth to clean the screen and body of the tablet. Avoid using abrasive cleaners or solvents that may damage the surface.

5.2 Software Updates

Regularly check for and install software updates to ensure your tablet has the latest features and security patches. Go to **Settings > About tablet > MIUI version** to check for updates.

5.3 Battery Care

To prolong battery life:

- Avoid extreme temperatures.
- Do not let the battery drain completely before recharging.
- Unplug the charger once the battery is full.

6. TROUBLESHOOTING

6.1 Common Issues and Solutions

Issue	Possible Solution
Tablet won't turn on	Ensure the battery is charged. Press and hold the Power button for at least 10 seconds.
Apps are crashing or freezing	Clear app cache (Settings > Apps > [App Name] > Storage > Clear cache). Restart the tablet.
Wi-Fi connection issues	Restart your router and tablet. Forget the network and reconnect.
Slow performance	Close unnecessary background apps. Clear storage space. Consider a factory reset as a last resort.

If you encounter issues not listed here or if the solutions do not resolve your problem, please contact Xiaomi customer support.

7. SPECIFICATIONS

Key technical specifications for the Redmi Pad 2 (4GB+128GB Wi-Fi model):

Feature	Specification
OS	Android 15 (Xiaomi HyperOS)
Display Size	11 inches
Display Resolution	2.5K (2560 x 1600)
Processor	MediaTek Helio G100-Ultra
RAM	4GB
Internal Storage	128GB
Expandable Storage	Up to 2TB (microSD)
Battery Capacity	9000mAh
Wireless Communication	Wi-Fi

Feature	Specification
Weight	880 g
Dimensions	26.7 x 17.9 x 4.4 cm
Color	Graphite Gray

8. WARRANTY AND SUPPORT

Your Xiaomi Redmi Pad 2 comes with a standard manufacturer's warranty. Please refer to the warranty card included in your package for detailed terms and conditions, including warranty period and coverage.

For technical support, service, or further inquiries, please visit the official Xiaomi support website or contact their customer service hotline. Contact information can typically be found on the Xiaomi website or in the documentation provided with your device.

Online Support: www.mi.com/global/support

© 2025 Xiaomi. All rights reserved.