

## Indesit BTW7251CFR

# INDESIT BTW7251CFR Top-Load Washing Machine User Manual

Model: BTW7251CFR

## 1. INTRODUCTION

This manual provides essential information for the safe and efficient use of your INDESIT BTW7251CFR top-load washing machine. Please read these instructions carefully before installation, operation, and maintenance. Keep this manual for future reference.

## 2. SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons. This appliance is intended for domestic use only.

- Ensure the appliance is properly grounded.
- Do not allow children to play with or operate the appliance.
- Unplug the appliance before cleaning or performing any maintenance.
- Do not install or store the appliance where it will be exposed to weather or freezing temperatures.
- Do not operate the appliance if it is damaged or malfunctioning.

## 3. SETUP AND INSTALLATION

### 3.1 Unpacking

Carefully remove all packaging materials. Ensure no parts are missing or damaged. Keep packaging out of reach of children.

### 3.2 Positioning and Leveling

Place the washing machine on a flat, stable floor. Adjust the feet to ensure the appliance is perfectly level. This prevents excessive vibration and noise during operation.



**Image 1:** Angled view of the Indesit BTW7251CFR top-load washing machine, illustrating its compact design suitable for various placements. The machine is white with a control panel on top.

### 3.3 Water Connection

Connect the water inlet hose to a cold water tap. Ensure connections are tight to prevent leaks. The appliance requires a water pressure between 0.1 MPa and 1 MPa.

### 3.4 Drain Hose

Position the drain hose correctly, ensuring it is not kinked or obstructed. The hose should be securely hooked into a drain pipe or sink, at a height between 60 cm and 100 cm from the floor.

### 3.5 Electrical Connection

Plug the appliance into a properly grounded electrical outlet. Do not use extension cords or adapters. Ensure the voltage and frequency match the specifications on the rating plate.

## 4. OPERATING INSTRUCTIONS

### 4.1 Control Panel Overview



**Image 2:** Top view of the Indesit BTW7251CFR washing machine control panel, showing the digital display, program selector knob, and various option buttons.

The control panel features a digital display, a program selector knob, and buttons for various functions and options. Familiarize yourself with these controls before operating the machine.

## 4.2 Loading Laundry

Open the top lid and the drum flaps. Load laundry into the drum, ensuring not to overload the machine. The maximum capacity is 7 kg. Close the drum flaps and the top lid securely.

## 4.3 Adding Detergent

Pull out the detergent dispenser drawer. Add the appropriate amount of detergent and any fabric softener to the designated compartments. Refer to detergent packaging for dosage recommendations.

## 4.4 Program Selection

Turn the program selector knob to choose the desired wash cycle. The machine offers 14 programs, including:

- **Turn&Go:** For mixed loads at 30°C in 45 minutes.
- **Rapid Wash:** For daily textiles requiring quick cleaning.
- Specific programs for wool, colors, and sportswear.

## 4.5 Selecting Options

Press the option buttons to activate additional functions such as:

- **Delayed Start:** Postpone the start of the cycle by up to 24 hours.
- **Pre-wash:** For heavily soiled items.
- **Extra Rinse:** For sensitive skin or to ensure thorough detergent removal.
- **Easy Ironing:** Reduces creasing to simplify ironing.

## 4.6 Starting a Cycle

Once the program and options are selected, press the Start/Pause button to begin the wash cycle. The display will show the remaining time.

# 5. MAINTENANCE AND CARE

---

Regular maintenance ensures the longevity and optimal performance of your washing machine.

## 5.1 Cleaning the Detergent Dispenser

Remove the detergent dispenser drawer and rinse it under running water to remove any residue. Clean the housing of the dispenser with a brush if necessary.

## 5.2 Cleaning the Filter

The machine features an accessible drain pump, making filter cleaning straightforward. Regularly clean the filter to prevent blockages and ensure efficient drainage. Refer to the diagram below for location.



**Image 3:** Front view of the Indesit BTW7251CFR washing machine. The circular panel at the bottom right provides direct access to the drain pump filter for easy maintenance.

### 5.3 Drum Cleaning

Run a maintenance wash cycle (e.g., a hot wash with no laundry and a descaling agent) periodically to clean the drum and prevent odors.

### 5.4 Exterior Cleaning

Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.

## 6. TROUBLESHOOTING

If you encounter issues with your washing machine, consult the following table before contacting technical support.

Problem	Possible Cause	Solution
Machine does not start	Power cord unplugged; door not closed; program not selected; fuse blown.	Check power connection; ensure lid is closed; select a program; check household fuse.
Water not filling	Water tap closed; inlet hose kinked; water supply cut off.	Open water tap; straighten hose; check water supply.
Water not draining	Drain hose kinked or blocked; filter clogged.	Straighten or clear drain hose; clean the drain pump filter.
Excessive vibration/noise	Machine not level; transport bolts not removed; unbalanced load.	Adjust leveling feet; remove transport bolts (if applicable); redistribute laundry.

The appliance includes an anti-balourd system to manage unbalanced loads and a detector anti-mousse to prevent excessive foam.

## 7. SPECIFICATIONS

Key technical details for the INDESIT BTW7251CFR washing machine:

- **Brand:** Indesit
- **Model:** BTW7251CFR
- **Type:** Top-Load Washing Machine
- **Capacity:** 7 kg
- **Spin Speed:** 1200 rpm
- **Dimensions (L x W x H):** 68 x 44 x 94 cm
- **Weight:** 56 kg
- **Motor Type:** Inverter (ensures silent and reliable operation)
- **Drum Volume:** 42 liters, Stainless Steel
- **Tub Material:** Polypropylene
- **Number of Programs:** 14
- **Noise Level (Spin):** 78 dB

 







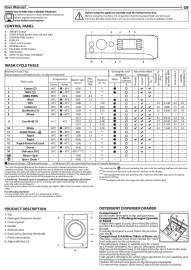 
 


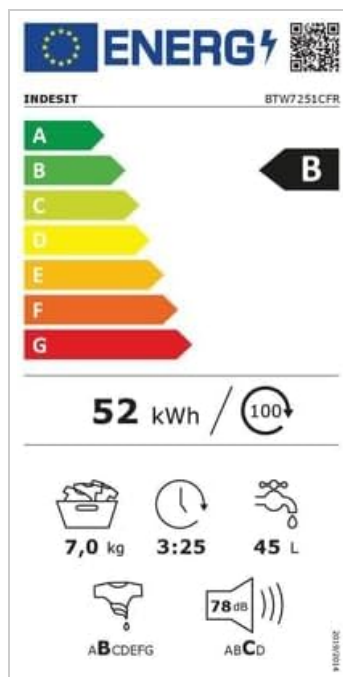

Image 4: Energy label for the Indesit BTW7251CFR washing machine, indicating an energy efficiency class B, 52 kWh per 100 cycles, 7.0 kg capacity, 3:25 cycle duration, 45 L water consumption, and 78 dB noise level.

## 8. WARRANTY AND SUPPORT

For warranty information, please refer to the warranty card provided with your appliance or contact your retailer. Keep your proof of purchase for any warranty claims.

Regarding spare parts availability, information is currently unavailable. For technical assistance or service, please contact the authorized Indesit service center in your region.

### Related Documents - BTW7251CFR

 <p>MARQUE: INDESIT REFERENCE: BWE91283XWFR COSMIC: 4227134</p>  	<p><a href="#">Mode d'emploi Indesit BWE91283XWFR - Lave-linge</a></p> <p>Manuel d'utilisation détaillé pour le lave-linge Indesit modèle BWE91283XWFR, couvrant l'installation, l'utilisation, l'entretien et le dépannage.</p>
<p>MANUEL D'UTILISATION </p> <p>INDESIT</p> <p>LAVE LINGE FRONTAL BWE71484XWFRN</p> <p><small>Ne pas éliminer les déchets dans la nature Recyclez vos déchets dans les points de collecte agréés Pour plus d'infos sur nos produits et services, visitez notre site internet : <a href="#">www.indesit.com</a> </small></p>	<p><a href="#">Indesit BWE71484XWFRN Lave-Linge Frontal - Manuel d'Utilisation</a></p> <p>Manuel d'utilisation complet pour le lave-linge frontal Indesit modèle BWE71484XWFRN, couvrant la sécurité, le fonctionnement, les programmes, l'entretien et le dépannage.</p>
	<p><a href="#">Indesit Push&amp;Go Washing Machine User Manual - Operation and Maintenance</a></p> <p>Comprehensive user manual for the Indesit Push&amp;Go washing machine. Learn about wash cycles, control panel functions, daily use, troubleshooting, cleaning, and maintenance for your Indesit appliance.</p>
<p>INDESIT</p> <p>LAVE LINGE INTEGRABLE BIWMIL71252EU</p> <p>MANUEL D'UTILISATION</p>  <p><small>Recherchez l'adresse de votre magasin Darty sur <a href="#">darty.com</a> </small></p>	<p><a href="#">Indesit BIWMIL71252EU : Manuel d'utilisation complet pour lave-linge intégrable</a></p> <p>Découvrez le manuel d'utilisation complet pour le lave-linge intégrable Indesit BIWMIL71252EU. Ce guide fournit des instructions détaillées sur les programmes, l'utilisation quotidienne, l'entretien, la sécurité et l'installation.</p>
 <p>MARQUE: INDESIT REFERENCE: IWC 7145 BLANC COSMIC: 319104</p> 	<p><a href="#">Indesit IWC 7145 BLANC : Mode d'emploi et guide d'utilisation</a></p> <p>Manuel d'utilisation complet pour le lave-linge Indesit IWC 7145 BLANC. Découvrez l'installation, les programmes, l'entretien, les fonctions et le dépannage.</p>
 <p>頂置式洗衣機 Top Loading Washer</p> <p>TIDW 70110</p> <p>Instructions &amp; Installation Manual 安裝及使用手冊</p> <p><small>© 2014 Indesit S.p.A. - Tutti i diritti sono riservati. È vietata espressamente la ristampa o l'uso non autorizzato senza permesso scritto dalla Indesit S.p.A.</small></p>	<p><a href="#">Indesit TIDW 70110 Top Loading Washer: Instructions &amp; Installation Manual</a></p> <p>Comprehensive instructions and installation guide for the Indesit TIDW 70110 top loading washing machine, covering safety, setup, operation, maintenance, and troubleshooting.</p>

