

Saved from manuals.plus.

Open the live page for links to other documents and user manuals.

[Manuals.plus](#) /

› [LALISU](#) /

› LALISU Industrial 3-Light Tree Floor Lamp Instruction Manual (Model: LALISUATLALIF7288)

LALISU LALISUATLALIF7288

LALISU Industrial 3-Light Tree Floor Lamp Instruction Manual

Model: LALISUATLALIF7288

PRODUCT OVERVIEW

The LALISU Industrial 3-Light Tree Floor Lamp is designed to provide versatile illumination for various spaces such as living rooms, bedrooms, and offices. It features three independently controlled lamp heads with adjustable rotation, offering customizable lighting options. The lamp includes four LED bulbs: two with 3-way dimming functionality and one with 3-color temperature settings, allowing for diverse lighting atmospheres.



Image: The LALISU Industrial 3-Light Tree Floor Lamp in White Gold, showcasing its design and three adjustable lamp heads.

WHAT'S IN THE BOX

Please ensure all components are present before beginning assembly:

- Lamp Pole Sections
- Lamp Base
- 3 Lamp Heads with Sockets
- 4 LED Bulbs (3 dimmable, 1 color temperature adjustable)
- Instruction Manual



Image: All components of the LALISU Tree Floor Lamp, including the base, pole sections, lamp heads, and bulbs, laid out for assembly.

SETUP AND ASSEMBLY

Follow these steps to assemble your LALISU Tree Floor Lamp:

1. **Assemble the Lamp Pole and Base:** Carefully connect the lamp pole sections, ensuring they are securely tightened. Attach the assembled pole to the weighted lamp base.
2. **Attach Lamp Heads:** Secure each lamp head to its designated position on the lamp pole.
3. **Install Bulbs:** Screw the provided LED bulbs into each lamp head socket. Ensure the power is off before installing or replacing bulbs.

For a visual guide, please refer to the assembly video below:

Your browser does not support the video tag.

Video: Step-by-step instructions for assembling the LALISU Tree Floor Lamp, demonstrating how to connect the pole, attach lamp heads, and install bulbs.

OPERATING INSTRUCTIONS

The LALISU Tree Floor Lamp offers flexible lighting control:

- **Independent Rotary Switches:** Each of the three lamp heads is equipped with its own rotary switch located on the back of the lampshade. Rotate the knob to turn the light on/off or adjust settings.
- **3-Way Dimmable Bulbs:** Two of the included LED bulbs offer three levels of brightness (Low/Medium/High). Rotate the switch to cycle through these settings.
- **3-Color Temperature Bulb:** One bulb provides three distinct color temperature settings (e.g., warm white, natural white, cool white). Rotate its switch to change the light color.
- **360° Adjustable Lamp Heads:** Each lamp head can be rotated a full 360 degrees. This allows you to direct light precisely where needed for reading, tasks, or accent lighting.



Image: Illustration demonstrating the 3-level dimming capability of the lamp, showing different brightness settings.



Image: Close-up view of the lamp heads, highlighting their 360-degree adjustability for directing light.

Your browser does not support the video tag.

Video: Demonstration of the LALISU Industrial Tree Floor Lamp's features, including adjustable heads and independent switch control.

MAINTENANCE

- **Cleaning:** Ensure the lamp is unplugged before cleaning. Wipe the lamp pole and shades with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Bulb Replacement:** Always turn off and unplug the lamp before replacing bulbs. Allow bulbs to cool completely. Use only LED bulbs of the specified wattage to avoid damage.
- **Stability Check:** Periodically check that all pole sections and the base are securely tightened to maintain stability.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Lamp does not light up.	◦ Power cord not plugged in. ◦ Bulb is loose or faulty. ◦ Wall switch is off.	◦ Ensure the power cord is securely plugged into a working outlet. ◦ Tighten or replace the bulb. ◦ Turn on the wall switch.
Light flickers.	◦ Loose bulb connection. ◦ Incompatible dimmer (if using an external dimmer).	◦ Tighten the bulb. ◦ Ensure the bulb is fully compatible with any external dimmer being used.
Lamp is unstable.	◦ Pole sections not fully tightened. ◦ Base not properly secured.	◦ Tighten all pole connections. ◦ Ensure the lamp base is flat on the floor and securely attached to the pole.

SPECIFICATIONS

Brand	LALISU
Model Number	LALISUATLALIF7288
Product Dimensions	13.7"D x 7.67"W x 21.25"H
Item Weight	2.3 Pounds
Lamp Type	Floor Lamp
Shade Material	Metal
Switch Type	Rotary
Light Source Type	LED
Material Type	Metal
Color	White Gold
Room Type	Living Room, Bedroom, Office



Image: Detailed diagram illustrating the dimensions (height, base diameter, shade size) and key features like rotary switch, stable metal base, and 360-degree adjustable lampshades.

WARRANTY AND SUPPORT

This product comes with a manufacturer's warranty. For specific warranty details or technical support, please refer to the documentation included in your package or contact LALISU customer service directly.

For further assistance, please visit the [LALISU Store on Amazon](#).

© 2026 LALISU. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0F9P6SFRW>

More documents and user manuals: **<https://manuals.plus/>**