

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Rinetiy](#) /

› [Rinetiy Wireless Door Chime \(Model DB03\) Instruction Manual](#)

## Rinetiy DB03

# Rinetiy Wireless Door Chime (Model DB03) Instruction Manual

Comprehensive guide for setup, operation, and maintenance.

## 1. INTRODUCTION

---

This manual provides detailed instructions for the Rinetiy Wireless Door Chime, Model DB03. This system is designed to alert you when a door or window is opened, offering enhanced security and convenience for homes, offices, or retail spaces. It features a wireless receiver and two contact sensors, offering adjustable volume, multiple chime options, and a wide operating range.

## 2. PACKAGE CONTENTS

---

- 1 x Plug-in Receiver
- 2 x Wireless Door/Window Contact Sensors
- Mounting Hardware (double-sided adhesive tape, screws)
- User Manual



Image: The Rinety Wireless Door Chime package includes one plug-in receiver and two door/window contact sensors.

### 3. PRODUCT OVERVIEW

---

The Rinety Wireless Door Chime system consists of a plug-in receiver and two magnetic contact sensors. The receiver plugs into a standard electrical outlet and emits an audible chime when a sensor is triggered. The sensors are installed on doors or windows and detect when they are opened.

# Product Details

## 2 Transmitters + 1 Plug-in Receiver

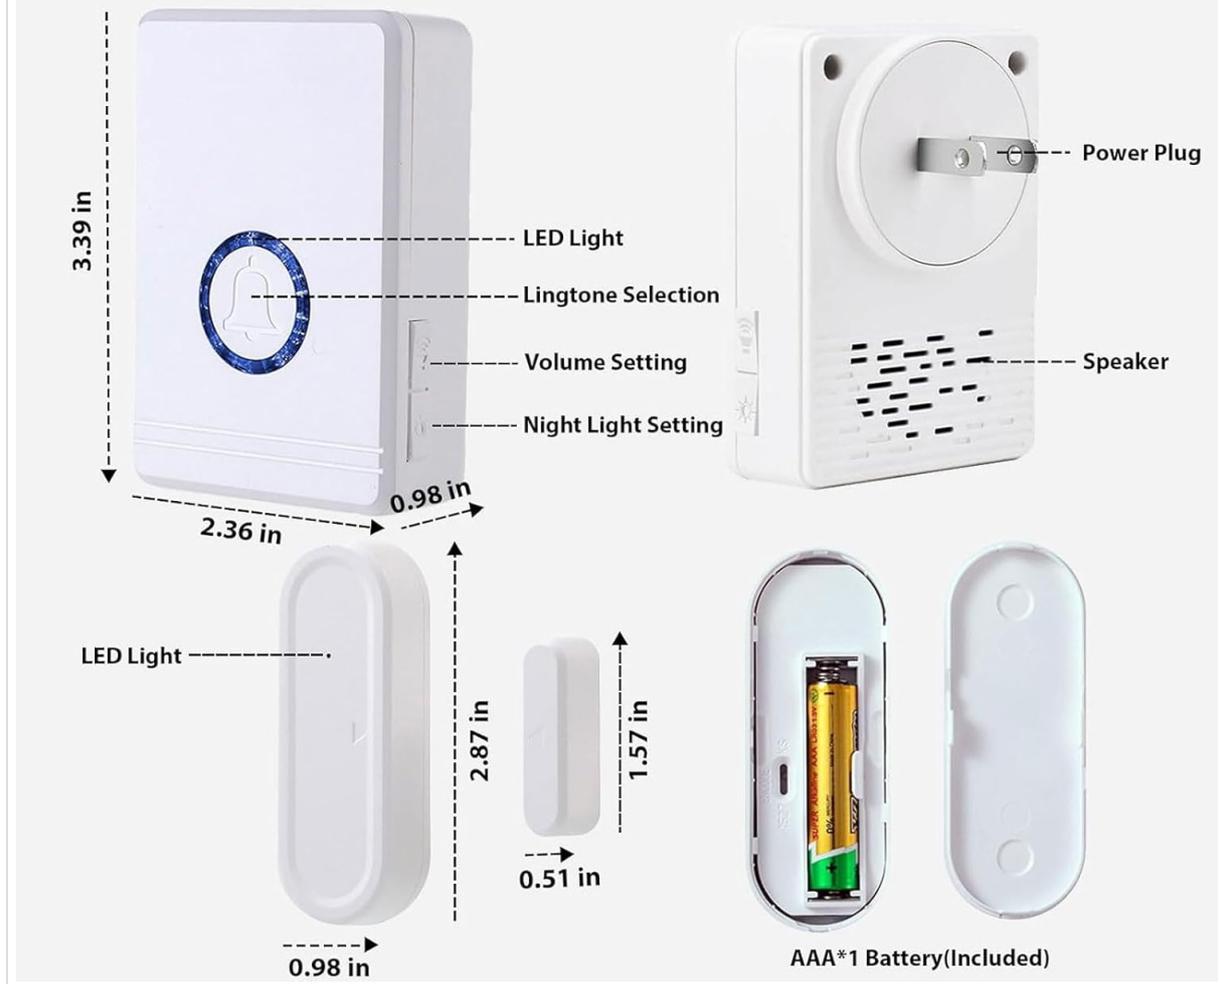


Image: Detailed view of the receiver and sensor components, including dimensions and labeled parts such as LED light, ringtone selection, volume setting, power plug, and speaker.

## 4. SETUP AND INSTALLATION

### 4.1. Receiver Installation

1. Plug the receiver into a standard electrical outlet in your desired location. Ensure it is within the 656 ft operating range of the sensors.
2. The LED indicator on the receiver will light up, indicating it is powered on.

# Anti-theft Doorbell



Image: A hand plugging the receiver unit into a standard wall outlet, showing the LED indicator illuminating.

## 4.2. Sensor Installation

1. Identify the desired door or window for sensor placement. Clean the surface thoroughly to ensure proper adhesion.
2. Peel off the backing from the double-sided adhesive tape provided.
3. Attach the larger sensor unit to the door or window frame.
4. Attach the smaller magnetic strip to the moving part of the door or window, aligning it with the larger sensor unit. The distance between the two parts should be no more than 0.4 inches (1.5 cm) when the door/window is closed.



Image: A visual guide demonstrating how to apply adhesive patches to the sensor units and align them on a door frame, ensuring a gap of less than 0.4 inches (1.5 cm).

### 4.3. Pairing Sensors with Receiver

The doorbell and receiver are typically pre-paired from the factory. If re-pairing is needed or you wish to add more sensors:

1. Select your desired ringtone on the receiver by pressing the ringtone selection button.
2. Press and hold the middle volume key on the receiver for 5-8 seconds until you hear a 'ding' sound and the LED indicator flashes rapidly. This indicates pairing mode.
3. Separate the two parts of the door sensor. The sensor's indicator light will flash, and the receiver will emit two 'dingding' sounds, confirming successful pairing.

Your browser does not support the video tag.

Video: Official Rinety Wireless Door Chime video demonstrating the pairing process and basic functionality.

## 5. OPERATING INSTRUCTIONS

---

### 5.1. Changing Ringtones

The receiver offers 48 different ringtones. Press the "ringtone selection" button on the side of the receiver to cycle through the available melodies. The receiver has a memory function, retaining your last selected ringtone after power loss.

### 5.2. Adjusting Volume

There are 5 adjustable volume levels (100-0 dB) on the receiver. Press the "volume setting" button on the side of the receiver to increase or decrease the volume to your preference.

### 5.3. LED Indicator

The receiver features an LED indicator that flashes when a sensor is triggered, providing a visual alert in addition to the audible chime. This is particularly useful in noisy environments or for individuals with hearing impairments.

# Smart Wireless Doorbell

## 5 levels of volume adjustable



Mute Mode



5 Volume Levels



48 Ringtones



LED Flashing



6 Night Light Modes



Image: Infographic highlighting the key features of the Rinety Wireless Door Chime, including 48 ringtones, 5 volume levels, LED flashing, and various night light modes.

## 6. MAINTENANCE

### 6.1. Sensor Battery Replacement

The door sensors are powered by a CR2032 battery. When the sensor's indicator light no longer flashes or the chime becomes unreliable, it may be time to replace the battery.

1. Carefully open the sensor casing using a small screwdriver or by gently prying it open.
2. Remove the old CR2032 battery from the circuit board.
3. Insert a new CR2032 battery, ensuring correct polarity.
4. Close the sensor casing securely.

Your browser does not support the video tag.

Video: A demonstration of how to replace the battery in a door sensor, including opening the casing and inserting a new CR2032 battery.

## 7. TROUBLESHOOTING

Problem	Solution
The door chime does not work after opening the package.	The door sensor may not be paired with the receiver. Please perform the pairing operation as described in Section 4.3.
The door chime works intermittently.	The distance between the door sensor and the receiver might be too far. Shorten the distance and test it to ensure normal operation.
The door chime stops working after a period of normal use.	<ul style="list-style-type: none"> <li>The pairing of the door chime may have been accidentally cleared. Try to pair it again.</li> <li>The battery of the door sensor might be depleted. It is recommended to replace the battery (refer to Section 6.1).</li> </ul>
What should I do if there is a problem with the product?	Please contact our after-sales support staff through Amazon mail for assistance. We will replace the new door chime for free or issue a refund.

Your browser does not support the video tag.

Video: A demonstration of the wireless door chime in action, showing how it alerts when a door is opened.

## 8. SPECIFICATIONS

Feature	Detail
Model Number	DB03
Brand	Rinetyi
Number of Sensors	2
Number of Receivers	1
Ringtones	48
Adjustable Volume Levels	5
Operating Range	Up to 656 feet (open area)
LED Indicator	Yes
Memory Function	Retains previous settings
Sensor Battery Type	CR2032 (1 per sensor)
Power Source (Receiver)	Plug-in (AC powered)
Mounting Type	Wall Mount (adhesive)
Product Dimensions	2.4 x 1 x 3.4 inches (Receiver)
Item Weight	6.4 ounces

## 9. WARRANTY AND SUPPORT

---

For any product-related issues, including warranty claims or technical support, please contact Rinety customer service directly through Amazon's messaging system. Our support team is available to assist with troubleshooting, replacements, or refunds as needed.