

MeowWhimsy S7

MeowWhimsy Automatic Self-Cleaning Litter Box

MODEL: S7

User Manual

Introduction

Thank you for choosing the MeowWhimsy S7 Automatic Self-Cleaning Litter Box. This device is designed to simplify cat care by automating the litter cleaning process, providing a hygienic environment for your feline companion and convenience for you. This manual provides essential information for the safe and efficient operation of your new litter box.

The MeowWhimsy S7 features an advanced self-cleaning system, smart safety sensors, app control, and a large capacity suitable for multiple cats. Please read this manual thoroughly before initial use and retain it for future reference.

Safety Information

- Always place the litter box on a flat, stable surface.
- Ensure the power adapter is connected to a suitable power outlet and keep the cord away from water or potential chewing by pets.
- Do not allow children to play with or operate the litter box without adult supervision.
- The device is equipped with infrared and weight sensors to detect your cat's presence. The cleaning cycle will pause if a cat enters during operation. Do not attempt to bypass these safety features.
- Use only clumping cat litter as recommended. Non-clumping litter may interfere with the cleaning mechanism.
- Do not immerse the main unit in water. The detachable litter tray is washable, but electronic components are not.
- For any malfunctions or unusual behavior, disconnect power immediately and refer to the troubleshooting section or contact customer support.

Package Contents

Verify that all items are present in the package:

- Self Cleaning Cat Litter Box (MeowWhimsy S7)
- MeowWhimsy User Manual
- Quick Start Guide
- Power Adapter (USA)
- 2 Trash Bags (40 pcs total)
- 1 Cleaning Brush
- Incense Box & Scented Stick (Deodorizer)
- 1 Cat Litter Mat
- 1 Waste Bin

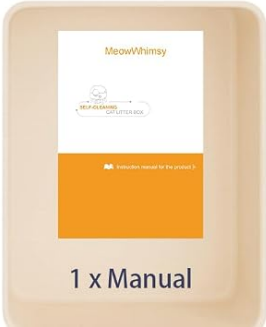
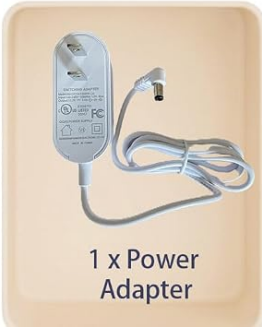


Image: All included accessories for the MeowWhimsy S7 Automatic Self-Cleaning Litter Box.

Product Overview and Features

The MeowWhimsy S7 is designed with several key features to enhance convenience and hygiene:

- **Advanced Self-Cleaning System:** Automatically rakes waste into a sealed 15L bin, eliminating daily scooping and maintaining hygiene for weeks.
- **Large Capacity:** 95L interior space, suitable for cats weighing 2.2-33 lbs. The waste bin can hold up to 10-15 days of waste, ideal for multi-cat households.
- **Smart Safety Sensors:** Equipped with infrared and weight sensors that pause operation immediately if a cat enters the unit, ensuring safety.
- **Whisper-Quiet Operation:** Designed to operate at low noise levels (≈25dB) to avoid disturbing your household or startling your pets.
- **Litter Compatibility:** Works with most clumping and silica cat litters, including mineral, bentonite, or hybrid types.
- **App-Controlled Convenience:** Manage settings, track cat usage, set cleaning schedules, and receive alerts via the Tuya App (requires 2.4G Wi-Fi).
- **Ambient Lighting:** Customizable mood lights provide a calming atmosphere and improve nighttime visibility for your cat.
- **Washable Tray:** The detachable litter tray allows for easy and thorough cleaning.

Large Capacity for Multi Cats (2.2-33lbs)



Image: The MeowWhimsy S7 offers a large 95L capacity for cats and a 15L waste bin for extended use.

APP Control



Image: Manage your MeowWhimsy S7 via the Tuya App for remote control and monitoring.

Keep Your Companion Safe



Image: The MeowWhimsy S7 features multiple safety sensors, including infrared and weight sensors, to protect your cat.

Peaceful Performance, Comfort for You and Your Cat



Image: Enjoy peaceful performance with the MeowWhimsy S7, designed for quiet operation.

Setup

1. **Unpack and Inspect:** Carefully remove all components from the packaging. Verify that all items listed in the "Package Contents" section are present and undamaged.
2. **Placement:** Choose a suitable location for the litter box. Ensure it is on a level surface and has access to a power outlet. The unit requires approximately 2.76 sq ft of space.
3. **Install Waste Bag:** Open the waste bin drawer and line it with one of the provided trash bags. Ensure the bag is securely fitted.
4. **Add Litter:** Pour clumping cat litter into the main drum. Do not exceed the 'MAX' fill line inside the drum. The litter box is compatible with mineral, bentonite, or hybrid clumping litters.
5. **Connect Power:** Plug the power adapter into the litter box and then into a wall outlet. The unit will power on.
6. **App Connection (Tuya App):**

- Download the Tuya Smart App from your device's app store.
 - Register or log in to your account.
 - Follow the in-app instructions to add the MeowWhimsy S7 device. Ensure your phone is connected to a 2.4G Wi-Fi network during setup.
 - After adding the device, you can control it and monitor its status via the app.
7. **Initial Reset:** After adding litter, press the Reset button on the control panel or in the app to calibrate the weight sensors.

Your browser does not support the video tag.

Video: A demonstration of the MeowWhimsy S7's app control features and setup process.

Operating Instructions

1. **Automatic Cleaning Cycle:** The MeowWhimsy S7 will automatically detect when your cat has used the litter box. After a preset delay (customizable via the app), it will initiate a cleaning cycle, sifting waste into the sealed bin.
2. **Safety Pause:** If a cat approaches or enters the litter box during a cleaning cycle, the sensors will detect its presence, and the operation will immediately pause to ensure the cat's safety. The cycle will resume once the cat has left.
3. **Manual Cleaning:** You can initiate a cleaning cycle manually at any time using the control panel on the device or through the Tuya App.
4. **App Functions:** The Tuya App allows you to:
 - Monitor cat usage times and frequency.
 - Set custom cleaning schedules and delay times.
 - Receive alerts for waste bin capacity or other operational issues.
 - Control ambient lighting settings.
5. **Sleep Mode:** Activate sleep mode via the app to prevent cleaning cycles during specific hours, ensuring quiet nights.

Your browser does not support the video tag.

Video: A demonstration of the MeowWhimsy S7's safety check mechanism in action, showing how it pauses when a cat is detected.

Maintenance

1. **Emptying the Waste Bin:** The waste bin has a 15L capacity and can hold waste for 10-15 days for a single cat. When the app or indicator light signals that the bin is full, slide out the drawer, tie off the trash bag, and dispose of it. Replace with a new trash bag.
2. **Cleaning the Litter Tray:** The main litter tray is detachable and washable. Periodically, or as needed, remove the tray, empty any remaining litter, and wash it with mild soap and water. Ensure it is completely dry before reassembling and adding fresh litter.
3. **Litter Replacement:** Regularly check the litter level and replenish as needed, ensuring it stays between the MIN and MAX lines. For optimal performance, replace all litter every 2-4 weeks, depending on usage.
4. **Exterior Cleaning:** Wipe the exterior of the litter box with a damp cloth. Do not use harsh chemicals or abrasive cleaners.
5. **Deodorizer:** Replace the scented stick in the incense box as needed to maintain odor control.

Scoopless for up to 15 days

Enjoy a truly scoopless life with MeowWhimsy



Image: The MeowWhimsy S7 is compatible with various types of clumping cat litter, including mineral, bentonite, and mixed.

Multi-Functional Litter Tray



Premium Anti-Stick

Anti-Seepage

Waterproof

Image: The multi-functional litter tray is designed for easy cleaning and maintenance.

Perfect for On-the-Go

Quick Release

Effortless Clean



Image: The quick-release design allows for effortless cleaning of the litter box.

Troubleshooting

- **Gravity Anti-Pinch Sensor Triggered:** If this error occurs after adding litter, press the Reset button on the device or in the app before starting a cleaning cycle. This calibrates the sensors for proper operation.
- **Wi-Fi Indicator Not Flashing:**
 - a. Lightly press the Wi-Fi button on the device and listen for a beep.
 - b. If there is no response after pressing the Wi-Fi button firmly, ensure your home Wi-Fi is 2.4G and the device is within range. If the issue persists, contact customer support.
- **General Malfunctions:** If the device exhibits unusual behavior or stops working, first try unplugging it for 30 seconds and then plugging it back in. If the problem persists, refer to the support section.

Specifications

Feature	Detail
---------	--------

Product Dimensions	20"L x 20"W x 21"H (50.8 cm L x 50.8 cm W x 53.34 cm H)
Item Weight	23 pounds (10.43 kg)
Model Number	AE-box
Material	Acrylonitrile Butadiene Styrene (ABS), Polypropylene (PP)
Weight Capacity (Cat)	2.2 - 33 pounds (1 - 15 kg)
Litter Box Type	Automated Self-Cleaning Litter Box
Waste Bin Capacity	15 Liters
Connectivity	2.4G Wi-Fi (Tuya App compatible)
Safety Features	Infrared Sensors, Weight Sensors, Anti-Pinch Technology



Image: Detailed dimensions of the MeowWhimsy S7 Automatic Self-Cleaning Litter Box.

Warranty & Support

Warranty: The MeowWhimsy S7 Automatic Self-Cleaning Litter Box comes with a 1-year manufacturer's warranty covering major parts. This warranty ensures support for product defects under normal use. Please retain your proof of purchase for warranty claims.

Support: If you encounter any issues, have questions, or require assistance, please refer to the following options:

- **Contact Seller:** You can reach out to the seller directly through your Amazon order page.
- **Amazon Service:** Amazon Customer Service can assist in connecting you with the seller for support.
- **User Manual:** This manual contains detailed instructions and troubleshooting tips.
- **Device Support Details:** Check the device itself for any support contact information or QR codes.

MeowWhimsy is committed to supporting you and ensuring your furry friend's happiness and health. We are here to help every step of the way.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question