

Pxdiiy USB Charger Cord

Pxdiiy USB Charger Cord User Manual

For Hatteker RFC-691 Hair Trimmer Pro Clippers

1. INTRODUCTION

Thank you for choosing the Pxdiiy USB Charger Cord. This product is specifically designed to provide reliable power for your Hatteker RFC-691 Hair Trimmer Pro Clippers. This manual provides essential information for the proper setup, operation, and maintenance of your charger cord to ensure optimal performance and longevity.

2. PRODUCT OVERVIEW

The Pxdiiy USB Charger Cord is engineered for durability and efficiency. It features a robust design and incorporates multiple safety certifications to protect against overload and short circuits. Its compact and lightweight nature makes it convenient for travel and everyday use.

- **Durable Construction:** Made from high-quality raw materials for stable performance and long-term reliability.
- **Optimized Efficiency:** Designed for quick response and high-intensity usage requirements.
- **Safety Certified:** Prevents overload and short circuits, ensuring safe operation.
- **Energy Efficient:** Low power design compliant with environmental standards.
- **Portable Design:** Lightweight and compact for easy carrying and storage.



Figure 2.1: The Pxdiiy USB Charger Cord, featuring a standard USB-A connector on one end and a two-pin charging connector on the other, designed for specific hair trimmers.

3. SETUP

Before using the charger cord, ensure compatibility with your device and connect it to a suitable power source.

1. **Verify Compatibility:** Carefully compare the charging cable interface with the charging port on your Hatterker RFC-691 Hair Trimmer Pro Clippers. Ensure the two-pin connector on the charger cord matches the port on your device to avoid damage or improper charging.
2. **Connect to Power Source:** Insert the USB-A end of the charger cord into a compatible USB power source. This can be a wall charger adapter, a power bank, a laptop/PC USB port, or a car charger.
3. **Connect to Device:** Insert the two-pin connector end of the charger cord firmly into the charging port of your Hatterker RFC-691 Hair Trimmer Pro Clippers.

Tip

Before purchasing, please compare the charging cable interface with the shaver to avoid buying the wrong model.



Shaver interface



Charging cable interface

Figure 3.1: Important tip for verifying the charging cable interface matches the shaver's interface before purchase or use.



Figure 3.2: Illustration showing the correct connection of the two-pin charger cord to a compatible trimmer, highlighting correct and incorrect connector types.

4. OPERATING INSTRUCTIONS

Once properly connected, the charger cord will begin to supply power to your Hatteker RFC-691 Hair Trimmer Pro Clippers.

1. **Initiate Charging:** After connecting both ends of the cable, the trimmer should indicate that it is charging (e.g., via an LED indicator on the trimmer, if available).
2. **Monitor Charging:** Allow the trimmer to charge fully. Refer to your trimmer's manual for specific charging times and battery indicators.
3. **Disconnect Safely:** Once charging is complete, disconnect the charger cord from the trimmer first, then from the power source. Always pull from the plug head, not the cable itself, to prevent damage.

Power by USB devices



Figure 4.1: Examples of compatible USB power sources including a wall charger, power bank, PC, and car charger.

5. MAINTENANCE

Proper care will extend the life of your Pxdiiy USB Charger Cord.

- **Storage:** Store the cord in a cool, dry place away from direct sunlight and extreme temperatures. Avoid tightly coiling or bending the cable sharply.
- **Cleaning:** If necessary, gently wipe the cable with a soft, dry cloth. Do not use harsh chemicals or abrasive cleaners. Ensure the connectors are free of dust and debris.
- **Handling:** Always grasp the plug when connecting or disconnecting the cable. Avoid pulling on the cord itself, as this can damage the internal wires.
- **Inspection:** Periodically inspect the cable for any signs of wear, fraying, or damage. Discontinue use if any damage is observed.

6. TROUBLESHOOTING

If you encounter issues with your charger cord, please refer to the following common solutions:

Problem	Possible Cause	Solution
Device not charging	Loose connection, incompatible power source, damaged cable, or incompatible device.	<p>Ensure both ends of the cable are securely connected.</p> <p>Try a different USB power source (e.g., a different wall adapter or USB port).</p> <p>Verify the charger cord is compatible with your Hatteker RFC-691 trimmer.</p> <p>Inspect the cable for visible damage. If damaged, discontinue use and replace.</p>
Slow charging	Low-power USB source, background processes on PC, or cable resistance.	<p>Use a dedicated USB wall adapter with appropriate power output.</p> <p>Avoid charging from a PC USB port if faster charging is required.</p>
Cable feels warm during charging	Normal operation, or potential overload/short circuit.	<p>A slight warmth is normal. If the cable becomes excessively hot, disconnect immediately.</p> <p>Ensure the power source is not overloaded.</p>

7. SPECIFICATIONS

Feature	Detail
Brand	Pxdairy
Compatibility	Hatteker RFC-691 Hair Trimmer Pro Clippers
Connector Type (Device End)	2-pin charging connector
Connector Type (Power Source End)	USB-A
Color	Black
ASIN	B0F9PF83GD

8. WARRANTY & SUPPORT

For warranty information or technical support regarding your Pxdairy USB Charger Cord, please refer to the product packaging or contact the manufacturer directly through their official website or customer service channels. Please have your product model and purchase details available when contacting support.

