

GODOX iT30Pro S

Godox iT30Pro S TTL Flash for Sony Camera Instruction Manual

INTRODUCTION

This manual provides detailed instructions for the safe and effective use of your Godox iT30Pro S TTL Flash for Sony Cameras. Please read this manual thoroughly before operating the product to ensure optimal performance and to prevent damage. Keep this manual for future reference.

SETUP

1. What's in the Box

Verify that all components are present:

- Light Body (iT30Pro S Flash) x1
- USB-C Charging Cable x1
- Storage Bag x1



Image: The package contents, including the iT30Pro S flash unit, USB-C charging cable, and a storage bag.

2. Charging the Battery

The iT30Pro S features a built-in lithium battery. Before first use, fully charge the battery.

1. Connect the provided USB-C charging cable to the USB-C port on the flash unit.
2. Connect the other end of the cable to a compatible USB power adapter (not included) or a computer's USB port.
3. The charging indicator on the flash will show charging status. A full charge typically takes a few hours.

What's in the Box



iT30Pro(Black)

Light Body

×1

USB-C Charging Cable

×1

Storage Bag

×1

Image: A close-up of the Godox iT30Pro S flash connected to a USB-C charging cable, indicating the charging process.

3. Mounting the Flash to Your Camera

The iT30Pro S is designed for hot shoe mounting on Sony cameras.

1. Ensure your camera is powered off.
2. Slide the flash unit onto the camera's hot shoe.
3. Press the quick-release button on the side of the flash to secure it firmly in place.

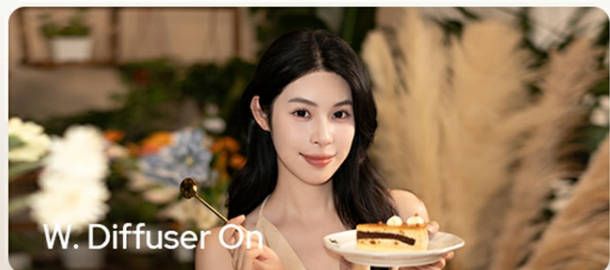
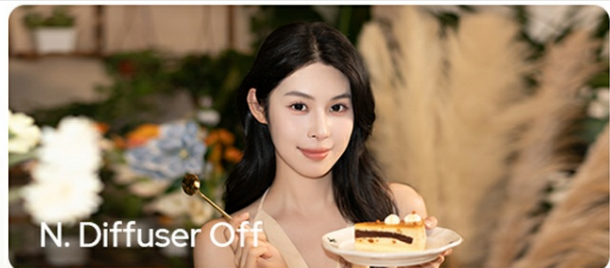


Image: The Godox iT30Pro S flash mounted on a Sony camera, with an inset showing the quick-release button for secure attachment.

4. Powering On/Off

Press and hold the power button on the flash unit to turn it on or off.

OPERATING INSTRUCTIONS

1. 2.8" Full-Color Touchscreen

The iT30Pro S features a responsive 2.8-inch touchscreen for intuitive control. Swipe to navigate menus and tap to adjust settings. A traditional rotary dial is also available for fine-tuning flash output.



Image: A close-up view of the Godox iT30Pro S's 2.8-inch full-color touchscreen displaying flash power settings.

2. TTL Auto-Exposure Mode

In TTL (Through-The-Lens) mode, the flash automatically meters light through your camera's lens and calculates the optimal flash output for balanced exposure. This mode is suitable for various lighting conditions and simplifies flash photography.



Image: The Godox iT30Pro S flash mounted on a camera, demonstrating its TTL auto-exposure capabilities during a portrait shot.

3. Wireless Master & Receiver Functionality

The iT30Pro S integrates a built-in Godox 2.4GHz X system, allowing it to function as both a Master and Receiver unit. This enables flexible multi-light setups with other Godox 2.4GHz wireless flashes or triggers like the X3.



Image: An outdoor scene illustrating the Godox iT30Pro S participating in a wireless multi-light setup with other Godox flash units.

4. Advanced Features

- **High-Speed Sync (HSS):** Supports shutter speeds up to 1/8000s, allowing for wider apertures in bright conditions. The 'S' version supports global-shutter flash sync up to 1/80000s on Sony cameras.
- **Front/Rear-Curtain Sync:** Synchronizes the flash with the beginning or end of the shutter exposure for creative motion effects.
- **Multi Mode:** Fires a series of rapid flashes for stroboscopic effects.
- **Flash Exposure Compensation (FEC):** Adjusts flash output to fine-tune exposure.



Image: The Godox iT30Pro S mounted on a camera, showcasing its integration and control interface for advanced flash functions.

5. Battery Performance

The iT30Pro S offers a 1.5-second recycle time and provides up to 560 full-power flashes on a single charge, ensuring extended shooting sessions.

6. Built-in Diffuser

A built-in diffuser can be deployed with a quick flick of a lever to provide wider coverage and softer, more even lighting.



Image: The Godox iT30Pro S flash unit, demonstrating the effect of its built-in diffuser when off and on, showing softer light distribution.

7. Compatible Sony Cameras

The Godox iT30Pro S is compatible with a range of Sony cameras, including but not limited to:

- a77II, a99, a77, DSC-RX10, a6000
- a7R, a350, a7RII(4.0), a7RIII, a7M3
- a9, a7RIV, a7R5, a7MIV, ZV-E10
- A9III, A7C, A7CII, a6400, a6500



Image: A graphic displaying a list of compatible Sony camera models for the Godox iT30Pro S flash.

MAINTENANCE

1. Cleaning

To clean the flash unit, use a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, followed by a dry cloth. Avoid using strong detergents or solvents.

2. Battery Care

To prolong battery life, avoid fully discharging the battery frequently. If storing the flash for an extended period, charge the battery to approximately 50% and recharge every few months.

3. Storage

Store the flash in its provided storage bag in a cool, dry place, away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

- **Flash not firing:** Ensure the flash is securely mounted on the camera's hot shoe. Check battery level and recharge if necessary. Verify camera and flash settings are correct (e.g., flash mode, sync speed).
- **Inconsistent exposure:** In TTL mode, ensure the subject is within the flash's effective range. In Manual mode, adjust power output as needed. Check for obstructions between the flash and subject.
- **Wireless connection issues:** Ensure both master and receiver units are set to the correct channel and group. Check for interference from other 2.4GHz devices. Ensure units are within range.
- **Touchscreen unresponsive:** Power off the flash and restart it. If the issue persists, contact customer support.

SPECIFICATIONS

Feature	Specification
Brand	GODOX
Model Name	iT30Pro S
Compatible Mountings	Sony
Camera Flash Type	External
Flash Sync Speed	1/8000s (HSS)
Connectivity Technology	Wireless (2.4G RF)
Number of Batteries	1 Nonstandard Battery (Built-in Lithium)
Mount Type	Hot Shoe Mount
Item Dimensions (D x W x H)	1.85"D x 1.81"W x 2.6"H
Color	Black
Exposure Control Type	TTL, Manual
Screen Size	2.8 Inches
Item Weight	0.12 Kilograms
Recycle Time	1.5 seconds
Full Power Flashes	Up to 560 per charge

WARRANTY INFORMATION

For detailed warranty information, please refer to the official warranty card included with your product or visit the official Godox website. Keep your proof of purchase for warranty claims.

CUSTOMER SUPPORT

If you encounter any issues or have questions not covered in this manual, please contact Godox customer support

through their official website or the contact information provided with your product. You can visit the [GODOX Store on Amazon](#) for more information.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question