

[Manuals.plus](#) /

› [Effireli](#) /

› Effireli RD1A4 RD1A1 Replacement Remote Control User Manual

Effireli YK-RD1A4 RD1A1

Effireli RD1A4 RD1A1 Replacement Remote Control User Manual

For Skyworth Air Conditioner V1BB1A-3

INTRODUCTION

This user manual provides comprehensive instructions for the Effireli RD1A4 RD1A1 Replacement Remote Control, designed specifically for Skyworth Air Conditioner model V1BB1A-3. This remote is ready to use without any programming or complex setup.

Please read this manual carefully to ensure proper operation and to maximize the lifespan of your remote control.

SETUP

Battery Installation

The Effireli RD1A4 RD1A1 remote control requires two AAA batteries (not included) for operation.

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Close the battery compartment cover securely.

Note: Remove batteries if the remote control will not be used for an extended period to prevent leakage.

Initial Use

This replacement remote control is pre-programmed and requires no additional setup. Simply point the remote towards your Skyworth Air Conditioner and begin operation.

OPERATING INSTRUCTIONS



Figure 1: Effireli RD1A4 RD1A1 Replacement Remote Control. This image displays the front view of the remote control, showing its

LCD screen at the top, a circular navigation pad with power button in the center, and various function buttons arranged below.

Button Functions

Button	Function
Power ()	Turns the air conditioner On or Off.
MODE	Cycles through operating modes (e.g., Cool, Heat, Fan, Dry, Auto).
Temperature Adjustment (◀/▶)	Adjusts the desired temperature setting.
SWING	Controls the vertical louver swing function.
FAN	Adjusts the fan speed (e.g., Low, Medium, High, Auto).
TURBO	Activates rapid cooling or heating for quick temperature changes.
ECO	Engages energy-saving mode for reduced power consumption.
SLEEP	Activates sleep mode, which adjusts temperature gradually for comfortable sleep.
TIMER	Sets a timer for automatic On/Off operation.
LIGHT	Controls the display light on the air conditioner unit.
HEALTH	Activates health-related functions, such as air purification or ionizer (if available on the AC unit).
Wi-Fi Symbol Button	Used for Wi-Fi connectivity features, if supported by the air conditioner model. Refer to your air conditioner's manual for specific instructions.

LCD Display Indicators

- **Temperature Display:** Shows the set temperature in Celsius (°C).
- **Light Bulb Icon:** Indicates the display light function is active.
- **Battery Indicator:** Shows the current battery level of the remote control.
- **Signal Indicator:** Displays when the remote is transmitting a signal.

MAINTENANCE

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's range decreases or the display becomes dim. Always replace both batteries at the same time with new ones of the same type.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Problem	Possible Cause / Solution
---------	---------------------------

Problem	Possible Cause / Solution
Remote not responding.	◦ Batteries are dead or inserted incorrectly. Replace batteries and ensure correct polarity. ◦ Obstruction between remote and AC unit. Ensure a clear line of sight. ◦ Remote is too far from the AC unit. Move closer to the unit.
Air conditioner not responding to specific functions.	◦ The specific function may not be supported by your air conditioner model. Refer to your air conditioner's user manual. ◦ Ensure the remote is pointed directly at the AC unit's infrared receiver.
Remote display is dim or blank.	Batteries are low. Replace with new batteries.

If your model number isn't listed as compatible or your original remote looks different, please contact Effireli customer support directly to confirm compatibility before troubleshooting further.

SPECIFICATIONS

- Model Number:** YK-RD1A4 RD1A1
- Compatible Models:** Skyworth Air Conditioner V1BB1A-3
- Connectivity Technology:** Infrared (IR)
- Power Source:** 2 x AAA Batteries (not included)
- Special Feature:** No Programming Required
- Max Number of Supported Devices:** 1
- Item Weight:** 2.11 ounces (approx. 60 grams)
- Package Dimensions:** 5.51 x 1.57 x 0.59 inches (approx. 14 x 4 x 1.5 cm)
- Manufacturer:** Effireli

WARRANTY AND SUPPORT

Warranty Information

This Effireli remote control comes with a **12-month warranty** covering manufacturing defects from the date of purchase. Additionally, a **30-day money-back guarantee** is offered. Returns and exchanges are accepted within the warranty period for eligible manufacturing defects.

Customer Support

For any questions, compatibility concerns, or warranty claims, please contact Effireli customer support. Please have your product model number (YK-RD1A4 RD1A1) and purchase details ready when contacting support. *Contact information is typically provided by the seller or on the product packaging.*

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0F9PR3B38>

More documents and user manuals: <https://manuals.plus/>