



Manuals.plus /

› PINDOWS /

› PINDOWS Ladies Sports Watch Analog Digital LED Display 50m Waterproof Instruction Manual

PINDOWS PDS-636-N5

PINDOWS Ladies Sports Watch

Model: PDS-636-N5

INTRODUCTION

This manual provides comprehensive instructions for the operation, maintenance, and troubleshooting of your PINDOWS Ladies Sports Watch. Please read this manual thoroughly before using the watch to ensure proper function and longevity.



Image: Front view of the PINDOWS Ladies Sports Watch, highlighting its analog and digital display features.

SAFETY INFORMATION

-
- Do not expose the watch to extreme temperatures (hot or cold) for prolonged periods.
 - Avoid strong impacts or dropping the watch, as this may damage internal components.
 - While the watch is 50m water resistant, it is not suitable for hot showers, saunas, or deep-sea diving. Avoid pressing buttons underwater.
 - Keep the watch away from strong magnetic fields.
 - Do not attempt to open the watch case or replace the battery yourself, as this may void the warranty and damage the watch. Contact professional service for battery replacement.

PACKAGE CONTENTS

Please check the package for the following items:

- PINDOWS Ladies Sports Watch (Model: PDS-636-N5)
- Instruction Manual
- Gift Box


PRODUCT OVERVIEW

Familiarize yourself with the watch's components and button functions.

製品パラメータ



着用サイズ
5.6inch(142mm) to 7.8inch(197.1mm)

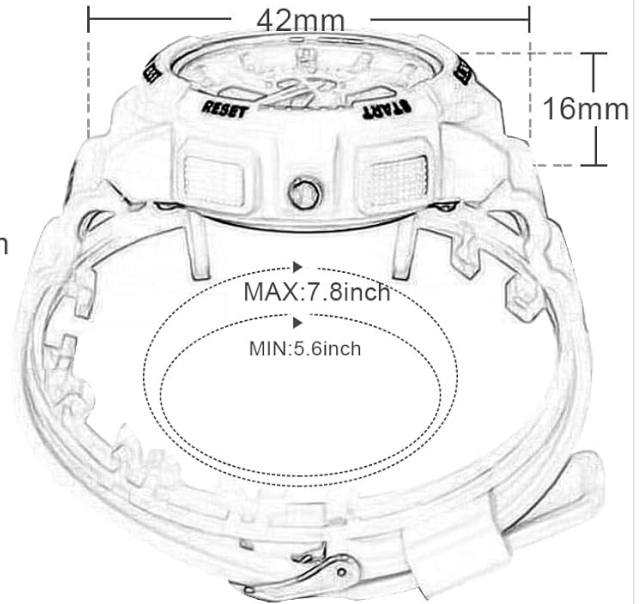

重さ: 41g	ストラップ材質: TPU
ケース材質: ABS	底カバー材質: ステンレス
 ハウジング直径: 1.65inch/42mm	 ストラップ幅: 0.71inch/18mm
 殻の厚さ: 0.63inch/16mm	 Band Length: 5.6inch-7.8inch

Image: Technical diagram illustrating the watch's dimensions (42mm housing diameter, 16mm thickness, 18mm strap width) and materials (ABS case, TPU strap, stainless steel back).

Button Functions

- **LIGHT Button (Top Left):** Activates the LED backlight for the digital display.
- **MODE Button (Bottom Left):** Cycles through different modes (Time, Alarm, Stopwatch).
- **START Button (Top Right):** Used to start/stop the stopwatch, or adjust settings in setting mode.
- **RESET Button (Bottom Right):** Used to reset the stopwatch, or select items in setting mode.
- **Crown (Right Side):** Used to set the analog time.



Image: Close-up side view of the watch, highlighting the 'RESET' and 'START' buttons on the right side.

SETUP

Setting Analog Time

1. Pull out the crown on the right side of the watch.
2. Rotate the crown to adjust the hour and minute hands to the desired time.
3. Push the crown back in to start the analog timekeeping.

Setting Digital Time and Date

1. In normal time display mode, press the **MODE** button repeatedly until the seconds start flashing. This indicates you are in setting mode.
2. Press the **RESET** button to cycle through the settings: Seconds → Hour → Minute → Month → Date → Day of Week.
3. Use the **START** button to adjust the flashing value.
4. Once all settings are adjusted, press the **MODE** button to exit setting mode.

12/24 Hour Mode

In normal time display mode, press the **START** button to toggle between 12-hour (with AM/PM indicator) and 24-hour display formats.

OPERATING FUNCTIONS

LED Backlight

Press the **LIGHT** button (top left) to illuminate the digital display. The backlight will remain on for a few seconds.

LEDバックライト

暗い場所でもはっきりと見える明るいディスプレイ



Image: The watch face with its digital display brightly illuminated by the LED backlight, enhancing visibility in low-light conditions.

Stopwatch Function

1. From normal time display, press the **MODE** button once to enter Stopwatch mode. The display will show "00:00:00".
2. Press the **START** button to begin timing.
3. Press the **START** button again to pause timing.
4. Press the **RESET** button to reset the stopwatch to "00:00:00".
5. Press the **MODE** button to return to normal time display.

Alarm Function

1. From normal time display, press the **MODE** button twice to enter Alarm mode. The display will show the alarm time.
2. Press the **RESET** button to select the hour or minute to set.
3. Use the **START** button to adjust the flashing value.
4. Press the **START** button and **RESET** button simultaneously to toggle the alarm ON/OFF. An alarm icon will appear when activated.

5. Press the **MODE** button to return to normal time display.

Hourly Chime

In Alarm mode, press the **RESET** button to select the hourly chime setting. Press the **START** button to toggle the hourly chime ON/OFF. A chime icon will appear when activated.

MAINTENANCE

Cleaning

Wipe the watch case and strap with a soft, damp cloth. For stubborn dirt, use a mild soap solution and rinse thoroughly with clean water. Ensure the watch is completely dry before wearing again.

Water Resistance

The watch is rated for 50 meters (5 ATM) water resistance. This means it is suitable for everyday use, such as hand washing, rain, and brief immersion in water. It is not designed for prolonged underwater activities, diving, or exposure to hot water/steam. Always ensure the crown is fully pushed in to maintain water resistance.



Image: The watch partially submerged in water, visually representing its 50-meter water resistance capability for daily activities like hand washing or rain exposure.

Battery Replacement

The watch is equipped with a battery designed to last over 2 years. When the display becomes dim or the watch stops functioning, it indicates that the battery needs to be replaced. Battery replacement should be performed by a qualified watch technician to ensure proper sealing and maintain water resistance.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Digital display is blank or dim.	Low battery.	Replace the battery (professional service recommended).
Analog hands are not moving.	Crown is pulled out; low battery.	Push the crown back in; replace the battery.
Watch is not water resistant after exposure to water.	Crown was not fully pushed in; buttons pressed underwater; watch exposed to hot water/steam.	Ensure crown is always fully pushed in. Avoid pressing buttons underwater or exposing to hot water/steam. If water ingress occurs, seek professional repair immediately.
Time is inaccurate.	Incorrect time setting; low battery.	Re-set the time according to instructions; replace the battery.

SPECIFICATIONS

Feature	Detail
Product Dimensions	4.4 x 3.6 x 1.35 cm; 130 g
Model Number	PDS-636-N5
Manufacturer	PINDOWS
ASIN	B0F9SRX6QL
Country of Origin	China
Department	Womens
Water Resistance	50m (5 ATM)
Movement	Japanese Quartz
Strap Material	TPU
Case Material	ABS
Back Cover Material	Stainless Steel

WARRANTY AND SUPPORT

Your PINDOWS Ladies Sports Watch comes with a **12-month warranty** from the date of purchase. This warranty covers manufacturing defects and material flaws under normal use. It does not cover damage caused by misuse, accidents, unauthorized repairs, or normal wear and tear.

For warranty claims, technical support, or any questions regarding your watch, please contact our customer support team. We are committed to ensuring your satisfaction.

Customer Support Contact:

Please refer to the contact information provided with your purchase or on the official PINDOWS website.