

## PINDOWS 636N1

# PINDOWS Women's Sports Watch

MODEL: 636N1 USER MANUAL

### Introduction

---

Thank you for choosing the PINDOWS Women's Sports Watch Model 636N1. This watch combines a sporty design with practical features, including an analog-digital display, LED backlight, 50-meter water resistance, stopwatch, and daily alarm. This manual provides detailed instructions to help you understand and operate your watch effectively.

### Safety Information

---

- Avoid exposing the watch to extreme temperatures (hot or cold) or sudden temperature changes.
- Do not press buttons underwater, as this may compromise water resistance.
- Avoid contact with strong chemicals, solvents, or detergents, which can damage the watch materials.
- Clean the watch regularly with a soft, dry cloth. For water-resistant models, a damp cloth can be used, then dry thoroughly.
- Keep the watch away from strong magnetic fields.

### Product Overview

---

The PINDOWS 636N1 features a robust design with four control buttons and a clear analog-digital display.



**Image:** Diagram of the PINDOWS 636N1 watch, illustrating button functions and key dimensions. The top-left button is 'LIGHT', bottom-left is 'MODE', top-right is 'START', and bottom-right is 'RESET'.

### Button Functions:

- **LIGHT (Top Left):** Activates the LED backlight for visibility in low-light conditions.
- **MODE (Bottom Left):** Cycles through different display modes (Time, Stopwatch, Alarm, Date).
- **START (Top Right):** Used to start/stop functions like the stopwatch or to adjust settings.
- **RESET (Bottom Right):** Used to reset functions or confirm settings.

### Setup

#### Setting Time and Date:

1. In normal time display mode, press the **MODE** button repeatedly until the time setting mode is displayed (usually indicated by flashing digits).
2. Use the **START** button to select the digit you wish to adjust (hours, minutes, year, month, day).
3. Use the **RESET** button to change the value of the selected digit.
4. Once all settings are correct, press the **MODE** button to exit the setting mode and return to normal time display.

## 12/24 Hour Format:

In time display mode, press the **START** button to toggle between 12-hour and 24-hour formats.

## Operating Instructions

---

### Stopwatch Function:

1. Press the **MODE** button until the stopwatch display appears.
2. Press **START** to begin timing.
3. Press **START** again to pause timing.
4. Press **RESET** to clear the stopwatch to zero.
5. To resume timing after pausing, press **START**.

### Alarm Function:

1. Press the **MODE** button until the alarm setting mode is displayed.
2. Use the **START** button to select the hour or minute digit.
3. Use the **RESET** button to adjust the alarm time.
4. Press **MODE** to exit the alarm setting mode.
5. To turn the alarm on/off, press **START** while in the alarm display mode. An alarm icon will indicate if it's active.

### LED Backlight:

Press the **LIGHT** button (top left) to illuminate the display. The backlight will remain active for a few seconds.

# LEDバックライト

暗い場所でもはっきりと見える明るいディスプレイ



**Image:** The PINDOWS 636N1 watch display illuminated by its LED backlight, showing clear visibility in dark conditions.

## **Water Resistance (50M):**

This watch is designed with 50-meter water resistance, making it suitable for daily use and various water activities. It can withstand:

- Splashes and rain.
- Hand washing.
- Swimming in shallow water.

**Important: Avoid pressing buttons underwater. Do not expose the watch to hot water, steam (e.g., hot showers, saunas), or extremely cold water, as this can damage the seals and compromise water resistance.**

# 50M の生活防水



- 冷水すぎ
- 泳ぐ

- 雨に濡れる
- 手を洗う

**Image:** The PINDOWS 636N1 watch partially submerged in water, demonstrating its 50-meter water resistance for daily activities like swimming and hand washing.

## Maintenance

### Cleaning:

Wipe the watch case and strap with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, followed by thorough drying. Do not use chemical cleaners.

### Battery Replacement:

The watch is powered by a CR2032 battery, designed to last over 2 years. When the display becomes dim or functions become erratic, it may be time to replace the battery. It is recommended to have battery replacement performed by a qualified watch technician to ensure proper sealing and maintain water resistance.

### Storage:

When not in use for extended periods, store the watch in a cool, dry place away from direct sunlight and extreme temperatures.

## Troubleshooting

Problem	Possible Cause	Solution
Display is blank or dim.	Low battery.	Replace the battery (CR2032).
Time is inaccurate.	Incorrect time setting or low battery.	Reset the time. If problem persists, replace battery.
Buttons are unresponsive.	Watch may be in a locked mode or battery is low.	Try pressing all buttons to unlock. If not, replace battery.
Water inside the watch.	Water resistance compromised (e.g., buttons pressed underwater, exposure to hot water).	Immediately take the watch to a qualified technician for inspection and repair. Do not attempt to dry it yourself.

## Specifications

<b>Model Number</b>	636N1 (Internal: PDS-636-N5)
<b>Display Type</b>	Analog-Digital
<b>Movement</b>	Japanese Quartz
<b>Water Resistance</b>	50 Meters (5 ATM)
<b>Case Material</b>	ABS Plastic
<b>Strap Material</b>	Thermoplastic Polyurethane (TPU)
<b>Case Diameter</b>	42 mm
<b>Case Thickness</b>	16 mm
<b>Band Width</b>	18 mm
<b>Band Length</b>	142 mm - 197.1 mm (5.6 - 7.8 inches)
<b>Weight</b>	41 g
<b>Battery Type</b>	CR2032 (1 included)
<b>Special Features</b>	LED Backlight, Stopwatch, Alarm, Auto Calendar, 12/24 Hour Format

## Warranty and Support

PINDOWS provides a **12-month warranty** for this product, covering manufacturing defects from the date of purchase. This warranty does not cover damage caused by misuse, accidents, unauthorized repairs, or normal wear and tear.

For any questions, technical assistance, or warranty claims, please contact our customer support team. We

are committed to ensuring your satisfaction.

Please refer to your purchase documentation for specific contact details or visit the official PINDOWS website.