

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [DJI](#) /

› [DJI Osmo Pocket 3 Creator Combo User Manual](#)

DJI Osmo Pocket 3 Creator Combo

DJI Osmo Pocket 3 Creator Combo User Manual

Your comprehensive guide to setup, operation, and maintenance.

INTRODUCTION

This manual provides detailed instructions for the DJI Osmo Pocket 3 Creator Combo. It covers essential information from initial setup and operation to maintenance and troubleshooting, ensuring you can fully utilize all features of your device. Please read this manual carefully before using the product.

1. SETUP AND ACTIVATION

1.1 Unboxing and Initial Charge

Carefully unbox your DJI Osmo Pocket 3 Creator Combo. Verify all components are present: Osmo Pocket 3 camera, DJI Mic 2 Transmitter, Battery Handle, Wide-Angle Lens, Mini Tripod, and various cables. Before first use, fully charge the Osmo Pocket 3 and the DJI Mic 2 Transmitter using the provided USB-C cable and a compatible power adapter.

1.2 Device Activation

The Osmo Pocket 3 requires activation via the DJI Mimo app. Download the DJI Mimo app from your device's app store. Power on the Osmo Pocket 3, then open the DJI Mimo app and follow the on-screen prompts to connect and activate your device. Ensure your mobile device has an active internet connection during activation.

1.3 Assembling Accessories

- **Battery Handle:** Attach the Battery Handle to the bottom of the Osmo Pocket 3 for extended battery life and additional control options.
- **Wide-Angle Lens:** Securely attach the Wide-Angle Lens to the camera lens magnetically for a broader field of view.
- **Mini Tripod:** Screw the Mini Tripod into the 1/4"-20 thread on the bottom of the Battery Handle for stable placement.
- **DJI Mic 2:** Power on the DJI Mic 2 Transmitter. It will automatically pair with the Osmo Pocket 3 when both devices are powered on and within range.

2. OPERATING THE DEVICE

2.1 Basic Controls

- **Power Button:** Press and hold to power on/off. Single press to switch between photo and video modes.
- **Joystick:** Control gimbal pan and tilt.
- **Record Button:** Press once to start/stop recording or take a photo.
- **Touchscreen:** Swipe up, down, left, or right to access various settings and modes.

2.2 Shooting Modes

Swipe left on the touchscreen to access shooting modes:

- **Video:** Standard video recording.
- **Low-Light Video:** Optimized for dim environments.
- **Slow Motion:** Capture high frame rate footage.
- **Timelapse:** Create dynamic time-lapse sequences.
- **Hyperlapse:** Stabilized time-lapse while moving.
- **Photo:** Single shot, countdown, panorama.

2.3 Gimbal Operation

The 3-axis gimbal provides stable footage. Swipe down on the touchscreen to access gimbal modes:

- **Follow:** Gimbal follows your pan and tilt movements smoothly.
- **Tilt Locked:** Gimbal maintains a level horizon while panning.
- **FPV:** Gimbal follows all movements, including roll, for a first-person view effect.

2.4 DJI Mimo App Integration

Connect your Osmo Pocket 3 to the DJI Mimo app via Wi-Fi and Bluetooth for advanced control:

- **Remote Control:** Use your mobile device as a remote viewfinder and controller.
- **Editing:** Access editing tools and templates.
- **Firmware Updates:** Update the device firmware through the app.
- **Story Mode:** Automated shooting and editing for quick content creation.

2.5 DJI Mic 2 Wireless System

The DJI Mic 2 Transmitter enhances audio quality. Ensure it is paired with the Osmo Pocket 3. You can monitor audio levels on the camera's screen. For optimal audio, clip the transmitter close to the sound source.

2.6 Pro Mode and Manual Settings

For advanced users, Pro Mode offers manual control over:

- **Exposure:** Adjust ISO, shutter speed, and aperture.
- **White Balance:** Fine-tune color temperature.
- **Focus:** Manual focus or advanced autofocus modes.
- **Color Profiles:** Choose between Normal and D-Log M for post-production flexibility.

3. MAINTENANCE

3.1 Cleaning

- **Lens and Screen:** Use a soft, dry, lint-free cloth to gently wipe the lens and touchscreen. For stubborn smudges, a specialized lens cleaning solution can be used sparingly.
- **Gimbal:** Keep the gimbal free from dust and debris. Avoid applying pressure to the gimbal motors.

3.2 Battery Care

- Charge the battery fully before long-term storage.
- Recharge the battery every three months to maintain optimal performance.
- Avoid exposing the battery to extreme temperatures.

3.3 Firmware Updates

Regularly check for and install firmware updates via the DJI Mimo app. Updates often include performance improvements, new features, and bug fixes.

3.4 Storage

Store the Osmo Pocket 3 in its protective cover or a dedicated carrying case to prevent damage. Keep it in a cool, dry place away from direct sunlight.

4. TROUBLESHOOTING

4.1 Common Issues and Solutions

- **Gimbal Not Level:** Perform a gimbal calibration through the settings menu on the device or in the DJI Mimo app.
- **Device Not Powering On:** Ensure the battery is charged. Connect to a power source and try again.
- **Connection Issues with DJI Mimo App:** Restart both the Osmo Pocket 3 and your mobile device. Ensure Wi-Fi and Bluetooth are enabled.
- **DJI Mic 2 Not Pairing:** Ensure both devices are powered on and within range. Check pairing status in the camera's audio settings.
- **Overheating Warning:** Stop recording and allow the device to cool down in a shaded area. Avoid direct sunlight during extended use.

4.2 Factory Reset

If issues persist, a factory reset may resolve them. Navigate to 'Settings' > 'System Settings' > 'Factory Reset' on the Osmo Pocket 3. Note that this will erase all custom settings and data.

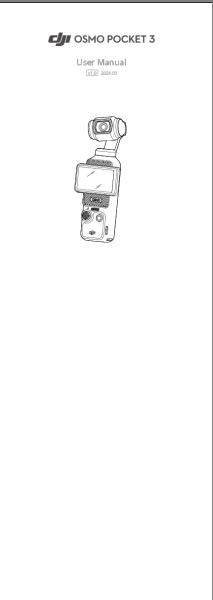
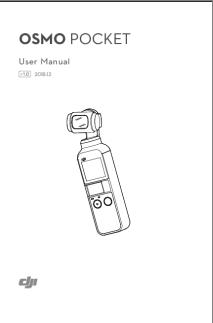
5. SPECIFICATIONS

Sensor	1-inch CMOS
Lens	FOV 90° (without wide-angle lens), f/2.0
Video Resolution	Up to 4K/120fps
Stabilization	3-axis mechanical gimbal
Battery Life	Approx. 160 minutes (with standard battery)
Charging Time	Approx. 32 minutes to 80%, 50 minutes to 100%
Dimensions (L×W×H)	139.7 × 42.2 × 33.5 mm
Weight	Approx. 179 g
Operating Temperature	0° to 40° C (32° to 104° F)

6. WARRANTY AND SUPPORT

The DJI Osmo Pocket 3 Creator Combo comes with a standard manufacturer's warranty. For detailed warranty terms and conditions, please refer to the official DJI website or the warranty card included with your product. For technical support, product inquiries, or service requests, please visit the official DJI Support page at www.dji.com/support.

Related Documents - Osmo Pocket 3 Creator Combo

	<p>DJI Pocket 2 FAQ: Your Guide to Features and Functionality</p> <p>Explore the official Frequently Asked Questions (FAQ) for the DJI Pocket 2. This comprehensive guide covers setup, features like ActiveTrack and Glamour Effects, accessories, and troubleshooting for the DJI Pocket 2 and its various combos.</p>
	<p>DJI Osmo Pocket 3 User Manual: Comprehensive Guide</p> <p>The official user manual for the DJI Osmo Pocket 3, providing detailed instructions on setup, operation, features, accessories, maintenance, and troubleshooting for this advanced handheld gimbal camera.</p>
	<p>DJI Osmo Pocket 3 User Manual</p> <p>Comprehensive user manual for the DJI Osmo Pocket 3, covering setup, operation, features, accessories, and maintenance. Learn how to use the camera, its intelligent modes, and the DJI Mimo app.</p>
	<p>DJI Osmo Pocket User Manual</p> <p>Comprehensive user manual for the DJI Osmo Pocket handheld gimbal camera, covering features, operation, charging, firmware updates, maintenance, and specifications. Learn how to capture stable video and photos with this compact device.</p>



[DJI Pocket 2 User Manual](#)

Comprehensive user manual for the DJI Pocket 2 handheld gimbal camera, detailing its features, operation, specifications, maintenance, and accessories. Learn how to capture high-quality photos and videos with this compact device.



[DJI Osmo Pocket 3 User Manual: Features, Operation, and Specifications](#)

Comprehensive user manual for the DJI Osmo Pocket 3 handheld gimbal camera. Learn about its features, setup, operation, accessories, and technical specifications.