

NEEWER X12

NEEWER X12 14" Aluminum Alloy Teleprompter Instruction Manual

Model: X12

1. OVERVIEW

This manual provides detailed instructions for the assembly, operation, and maintenance of your NEEWER X12 14" Aluminum Alloy Teleprompter. Designed for use with iPhone, iPad, DSLR cameras, phones, and tablets, this teleprompter facilitates smooth and professional video recording for online teaching, streaming, and other content creation needs. Please read this manual thoroughly before using the product to ensure optimal performance and safety.

2. WHAT'S IN THE BOX

Verify that all components are present upon unboxing:

- 1 x X12 Teleprompter
- 1 x Remote Control (RT-110)
- 1 x Carry Case
- 1 x Cleaning Cloth
- Various mounting accessories (screws, adapters)

3. KEY FEATURES

- **High Definition Display:** Features a premium beam splitter glass with 75% light transmittance, ensuring clear text reflection for reading up to 10 feet (3 meters) away. The adjustable hood further enhances readability.

Note: Not compatible with wide-angle lenses. Camera lens focal length must be more than 28mm.



Image: The teleprompter's high-definition display and light transmittance specifications.

- **Smart Control:** Control the teleprompter via the included RT-110 remote control or the dedicated NEEWER teleprompter app (iOS/Android). Functions include pausing, speeding up, slowing down, and turning pages.
- **Foldable Design:** The support frame is foldable for quick setup, compact storage, and easy transport. The cloth hood uses touch fasteners for simple assembly and removal. Constructed from lightweight yet sturdy aluminum alloy.



Image: The teleprompter's collapsible design for portability and camera mounting.

WIDE COMPATIBILITY

Dual cold shoe mounts and 1/4" female threads allow you to mount microphones, video lights, and other small photography accessories

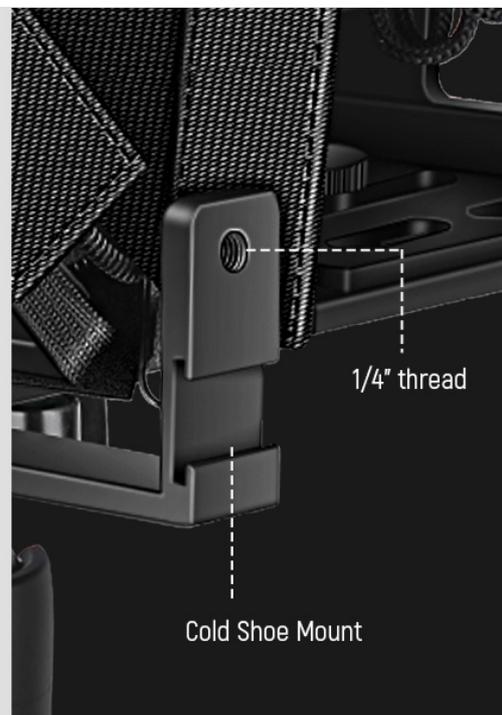


Image: The teleprompter's convenient carry case for storage and transport.

- **Wide Compatibility:** Accommodates smartphones and tablets up to 9.84" x 8.68" (25cm x 22cm), including iPhone, iPad, iPad Air, and iPad Pro 11". The lens hood is adjustable for various camera and mobile phone lens sizes.

Note: Not compatible with iPad Pro 12". The NEEWER teleprompter app requires iOS 11.0 or later / Android 6.0 or later.

- **Multiple Accessory Mounts:** Equipped with dual 1/4"-20 threads and dual cold shoe mounts for attaching accessories such as video lights, microphones, LED ring lights, and magic arms.

WIDE COMPATIBILITY

Dual cold shoe mounts and 1/4" female threads allow you to mount microphones, video lights, and other small photography accessories



● NOTE: Microphone and ring light are not included.

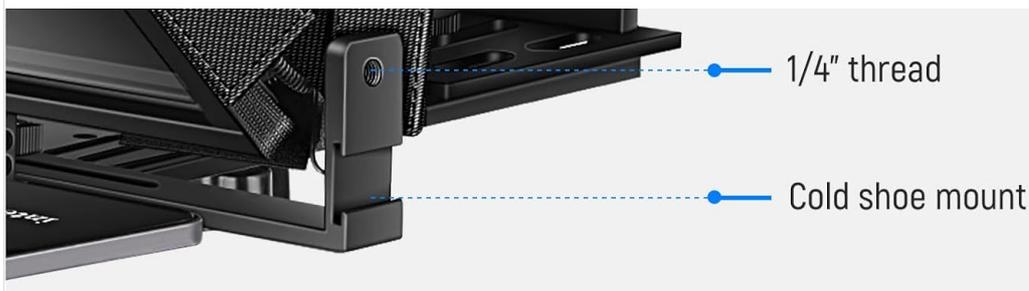


Image: The teleprompter's accessory mounting options, including 1/4" threads and cold shoe mounts.

4. SETUP & INSTALLATION

Follow these steps to assemble and set up your NEEWER X12 Teleprompter:

1. **Install on Tripod/Light Stand:** Securely mount the teleprompter onto a compatible tripod or light stand using the 1/4"-20 thread at its base.
2. **Adjust Adapter:** Loosen the screw and remove the adapter plate from the teleprompter frame.
3. **Position Glass:** Raise the beam splitter glass and position it at a 45-degree angle within the frame.
4. **Attach Hood:** Zip the cloth hood onto the teleprompter frame. Ensure the zipper is not pulled down completely to prevent the hood from falling off. Secure the hood on all four sides using the touch fasteners.
5. **Mount Camera:** Attach your DSLR camera to the camera mounting plate using the provided screw. Adjust the position of the camera on the plate and tighten the knob to secure it. Ensure the camera lens is centered with the teleprompter glass.
6. **Insert Tablet/Phone:** Place your smartphone or tablet into the adjustable tray at the bottom of the teleprompter. Ensure it is securely held.
7. **Final Adjustments:** Make any necessary adjustments to the height and position of the camera and tablet to achieve optimal alignment and viewing.



EASY TO OPERATE

Easily control the scrolling speed, play, pause, and turn pages with the remote

Note: The remote control needs to be linked **IN THE APP** instead of linking it directly via bluetooth of your smartphone or tablet.




Image: Detailed step-by-step visual guide for assembling the NEEWER X12 Teleprompter.

5. OPERATING INSTRUCTIONS

Once assembled, operate the teleprompter using the NEEWER app and remote control:

- **Prepare Script:** Load your script into the NEEWER teleprompter app on your smartphone or tablet.
- **Mirror Text:** Within the app, activate the mirror/flip function so the text appears correctly when reflected by the teleprompter glass.
- **Connect Remote:** Pair the RT-110 remote control with your smartphone/tablet via Bluetooth within the NEEWER teleprompter app. Do not attempt to pair directly through your device's Bluetooth settings.
- **Control Playback:** Use the remote control to manage script playback.
 - **Play/Pause:** Start or stop the script scrolling.
 - **Speed Adjustment:** Increase or decrease scrolling speed.
 - **Page Up/Down:** Navigate through the script.
 - **Zoom In/Out:** Adjust text size.

INSTALLATION STEPS

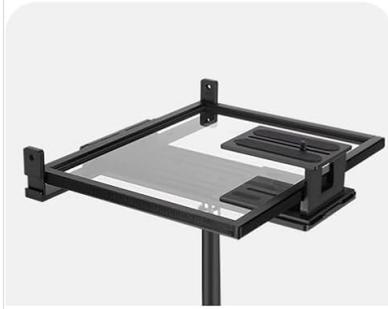

- 1 Install the teleprompter on a tripod or light stand



- 2 Loosen the screw and then remove the adapter



- 3 Raise the glass and position it at the 45° angle



- 4 Zip the hood
Do not pull the zipper down to the bottom, or it will fall off



- 5 Attach the hood to the glass.
Be sure the hood is securely attached on four sides



- 6 Loosen the screw to pull out the bracket and adjust its position. Then tighten the screw



- 7 Fix the adapter with the knob



- 8 Mount the camera and fix it with the knob



- 9 Zip the hood to complete installation

Image: Illustration of the remote control and its functions for easy operation.

6. NEEWER TELEPROMPTER APP CONTROL

The NEEWER Teleprompter App provides advanced control over your script. It is compatible with iOS 11.0 or later and Android 6.0 or later.

- **Script Management:** Write and edit scripts directly within the app.
- **Import Scripts:** Upload pre-prepared scripts from your device or receive text files via Wi-Fi.
- **Customization:** Adjust playback speed, text size, background color, and document alignment for optimal readability.
- **Mirror Mode:** Essential for teleprompter use, this function reverses the text on your device screen so it appears correctly in the teleprompter's reflective glass.

Download the app:

[Download for iOS](#)

[Download for Android](#)

UPGRADED APP
SUPPORTS MORE FUNCTIONS

Adjustable playback speed, text size, background color, document alignment, etc.

IOS Android Teleprompter

Image: Visual representation of the NEEWER Teleprompter App's features and download options.

7. COMPATIBILITY

The NEEWER X12 Teleprompter offers broad compatibility with various devices:

- **Tablets & Smartphones:** Fits devices up to 9.84" x 8.68" (25cm x 22cm). Compatible with iPhone, iPad, iPad Air, iPad Pro 11", and various Android phones/tablets (e.g., Samsung, Huawei).
- **Cameras:** Designed for use with DSLR cameras. Ensure your camera lens focal length is more than 28mm.
- **Accessories:** Dual 1/4"-20 threads and cold shoe mounts support external accessories like microphones, video lights, and LED ring lights.

Important Note: This teleprompter is NOT compatible with iPad Pro 12" or wide-angle camera lenses.

COMPATIBILITY

Compatible with any phone or tablet up to
12" x 8.7" / 30.5cm x 22cm



✓ Samsung / Huawei



✓ iPad / iPad Air / iPad Pro 11"



✗ iPad Pro 12.9"

Image: Visual guide to device compatibility for the teleprompter.

8. SPECIFICATIONS

Feature	Detail
Model Number	X12
Brand	NEEWER
Material	Aluminum Alloy
Beam Splitter Glass Light Transmittance	75%
Reading Distance	Up to 10' / 3m
Max Tablet/Phone Size	9.84" x 8.68" (25cm x 22cm)
Connectivity	Bluetooth (for remote control)
Accessory Mounts	Dual 1/4"-20 threads, Dual Cold Shoe Mounts
Item Weight	6.53 pounds

Feature	Detail
Package Dimensions	15.63 x 13.86 x 3.98 inches

9. MAINTENANCE

Proper maintenance ensures the longevity and performance of your teleprompter:

- **Cleaning the Glass:** Use the provided cleaning cloth or a soft, lint-free microfiber cloth with a specialized glass cleaning solution (if necessary) to gently wipe the beam splitter glass. Avoid abrasive materials or harsh chemicals.
- **General Cleaning:** Wipe down the aluminum alloy frame and plastic components with a dry or slightly damp soft cloth.
- **Storage:** When not in use, store the teleprompter in its carry case to protect it from dust, moisture, and physical damage.
- **Handle with Care:** Avoid dropping the teleprompter or subjecting it to strong impacts, especially the glass component.

10. TROUBLESHOOTING

If you encounter issues, refer to the following common solutions:

- **Text Appears Backwards:** Ensure the mirror/flip function is activated within the NEEWER teleprompter app. This reverses the text on your device so it appears correctly in the teleprompter's reflective glass.
- **Remote Control Not Connecting:**
 - Ensure the remote control has fresh batteries.
 - Pair the RT-110 remote control directly within the NEEWER teleprompter app, not through your smartphone or tablet's general Bluetooth settings.
 - Restart both the app and the remote control, then attempt pairing again.
- **Text Not Clear/Visible:**
 - Adjust the brightness of your smartphone/tablet screen to maximum.
 - Ensure the teleprompter's hood is properly installed to block ambient light.
 - Verify that your camera lens focal length is greater than 28mm, as wide-angle lenses are not compatible.
 - Clean the beam splitter glass using the provided cleaning cloth.
- **Camera Not Fitting:** Ensure your camera is properly mounted on the adjustable plate. Adjust the height and position as needed.
- **Tablet/Phone Not Fitting:** Verify that your device's dimensions are within the maximum supported size of 9.84" x 8.68" (25cm x 22cm). Note that iPad Pro 12" is not compatible.

For further assistance, please contact NEEWER customer support.

11. WARRANTY & SUPPORT

NEEWER products are designed for reliability and performance. For information regarding warranty coverage, product registration, or technical support, please visit the official NEEWER website or contact

their customer service department. Keep your purchase receipt as proof of purchase for any warranty claims.

You may also consider purchasing extended protection plans for your product, if available, to cover potential issues beyond the standard warranty period.