

[Manuals.plus](#) /

› [JAYEGT](#) /

› JAYEGT Motorized Rotating Display Stand User Manual

JAYEGT JY-22-b

JAYEGT Motorized Rotating Display Stand User Manual

Model: JY-22-b

1. PRODUCT OVERVIEW

The JAYEGT Motorized Rotating Display Stand is designed for showcasing products, photography, live shows, and creating 360-degree videos. It features a robust design, remote control operation, and multiple power options for versatile use.

Key Features:

- **Wireless Operation:** Built-in 5000mAh rechargeable battery provides 20-24 hours of continuous use on a single charge (5-6 hours charging time). Can also be powered via USB cable or power bank.
- **High Load Capacity:** Supports up to 30 kg (66 lbs) for the 8.66-inch diameter model.
- **Remote Control:** Infrared remote allows adjustment of rotation speed (5 gears, 25-60 seconds per cycle), direction (clockwise/counter-clockwise), and rotation modes (45°, 90°, 180° angle circulation, continuous, or intermittent).
- **Smooth and Quiet Operation:** Equipped with a motor that operates at ≤50db, minimizing noise and shaking during video recording.
- **Versatile Use:** Ideal for product photography, still life, live product displays, and 3D scanning.

Package Contents:

- 8.66-inch Turntable (1 pc)
- Remote Controller (1 pc)
- USB Cable (1 pc)
- USB Adapter (1 pc)
- User Manual (1 pc)



Figure 1: JAYEGT Motorized Rotating Display Stand and Accessories. This image shows the black 8.66-inch turntable, its remote control, USB charging cable, and power adapter. A statue is displayed on the turntable, and a battery icon indicates its rechargeable nature.

2. SAFETY INFORMATION

Please read all safety instructions carefully before using the product to ensure safe and proper operation.

- Do not expose the device to water or excessive moisture.
- Avoid disassembling or modifying the product, as this may void the warranty and pose safety risks.
- Use only the provided USB cable and adapter for charging.
- Ensure the turntable is placed on a stable, flat surface before placing items on it.
- Do not exceed the maximum load capacity of 30 kg (66 lbs). Overloading can damage the motor.
- If the product has not been used for a long time, ensure it is fully charged before resuming use to maintain battery health.

3. SETUP

3.1 Charging the Device

The display stand comes with a built-in rechargeable battery. Before first use or after prolonged storage, fully charge the device.

1. Connect the provided USB cable to the charging port on the side of the turntable.
2. Connect the other end of the USB cable to the provided USB adapter, and plug the adapter into a standard wall outlet.
3. Alternatively, you can connect the USB cable to a power bank or a computer's USB port for charging.
4. A full charge typically takes 5-6 hours and provides 20-24 hours of continuous operation.

3 Power Supply Modes



Mobile Power Bank



USB Cables



Rechargeable Battery



Figure 2: Power Supply Modes. This image demonstrates the three ways to power the turntable: via a mobile power bank, direct USB cable connection, or using its internal rechargeable battery.

3.2 Initial Placement

Place the JAYEGT Motorized Rotating Display Stand on a flat, stable, and level surface to ensure smooth and balanced

rotation.

4. OPERATING INSTRUCTIONS

4.1 Power On/Off

Locate the On/Off switch on the side of the turntable base. Toggle the switch to turn the device on or off.

4.2 Using the Remote Control

The included infrared remote control provides comprehensive control over the turntable's functions:

- **Speed Adjustment:** Use the speed buttons to cycle through 5 different speed gears. The rotation speed ranges from 25 seconds per cycle (fastest) to 60 seconds per cycle (slowest).
- **Direction Control:** Press the direction buttons to switch between clockwise and counter-clockwise rotation.
- **Angle Circulation Modes:** Select specific rotation angles for intermittent display: 45°, 90°, or 180° angle circulation.
- **Continuous/Intermittent Rotation:** Choose between continuous rotation or a mode where the turntable rotates for a set period and then pauses.

4.3 Placing Items on the Turntable

Carefully place the item you wish to display or photograph onto the center of the turntable. Ensure the weight does not exceed 30 kg (66 lbs). If the object is larger than the turntable or placed off-center, the effective maximum load capacity may be reduced.

4.4 Noise Level

The turntable is designed with a smooth motor that operates quietly (≤ 50 db). At slower speeds, the operation is nearly silent. A slight motor sound may be audible at higher speeds.



Figure 3: Turntable in a Photography Setup. This image shows the rotating display stand in use within a typical product photography studio, surrounded by softbox lighting.

5 COLORS PVC BACKGROUNDS



Figure 4: Included Background Options. This image displays the JAYEGT turntable along with five interchangeable PVC backgrounds in various colors, suitable for diverse product display needs.

Silent Design

High quality movement makes the product more quite



Figure 5: Quiet Operation. This image visually represents the low noise level of the turntable, suggesting it operates quietly enough not to disturb a sleeping person, with a decibel range of 20-30db indicated.

5. MAINTENANCE

- **Cleaning:** Wipe the surface of the turntable with a soft, dry cloth. Do not use abrasive cleaners or immerse the device in water.
- **Storage:** Store the turntable in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** If the device will not be used for an extended period, charge it periodically (e.g., every 3 months) to maintain battery health and prolong its lifespan.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Turntable does not rotate.	Device is off; Battery is low; Remote control battery is dead; Obstruction.	Ensure the On/Off switch is in the 'On' position; Charge the turntable; Replace remote control battery; Check for any objects blocking rotation.
Rotation is uneven or jerky.	Overloaded; Item is off-center; Unstable surface.	Reduce the weight of the item; Re-center the item on the turntable; Place the turntable on a flat, stable surface.
Remote control is unresponsive.	Remote control battery is dead; Remote not pointed at sensor; Obstruction between remote and sensor.	Replace the remote control battery; Ensure the remote is pointed directly at the infrared sensor on the turntable; Remove any obstructions.
Unusual noise during operation.	Overloaded; Internal issue.	Reduce the weight of the item; If noise persists after reducing load, contact customer support.

7. SPECIFICATIONS

Feature	Detail
Diameter	22 cm / 8.66 inches
Height	6 cm / 2.4 inches
Net Weight	1 kg / 2.2 lbs
Maximum Load Capacity	30 kg / 66 lbs
Material	ABS + Motor + PCBA
Speed Range	25-60 seconds per cycle (5 adjustable gears)
Power Supply	Built-in 5000mAh rechargeable battery, USB cable
Battery Life (Full Charge)	20-24 hours
Charging Time	5-6 hours
Noise Level	≤50db
Model Number	JY-22-b

8. WARRANTY AND SUPPORT

JAYEGT provides a one-year warranty for this product, covering manufacturing defects and malfunctions under normal use. We also offer online technical guidance to assist you with any questions or issues you may encounter.

For warranty claims, technical support, or any inquiries, please contact JAYEGT customer service through the platform where you purchased the product or refer to the contact information provided on the product packaging.

Please retain your proof of purchase for warranty validation.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0F9T7BT8S>

More documents and user manuals: <https://manuals.plus/>