

FRIC-PL-APP-TP-22052025-026734

Kenmore 11022332510 HD Washer Main Drive Belt Instruction Manual

Compatible Model: Kenmore 11022332510

1. INTRODUCTION

This manual provides essential instructions for the installation, maintenance, and troubleshooting of the replacement main drive belt for Kenmore 11022332510 HD washing machines. Please read this manual thoroughly before attempting any installation or repair to ensure safe and correct operation.

This replacement part is designed to restore the functionality of your washing machine's drive system.

2. SAFETY INFORMATION

Always prioritize safety when working with appliances. Failure to follow these safety guidelines may result in personal injury or damage to the appliance.

- **Disconnect Power:** Always unplug the washing machine from the electrical outlet before beginning any repair or maintenance.
- **Wear Protective Gear:** Use appropriate personal protective equipment, such as gloves and safety glasses.
- **Consult a Professional:** If you are unsure about any step or uncomfortable performing the repair, consult a qualified appliance technician.
- **Proper Tools:** Use the correct tools for the job to prevent damage to parts or injury.
- **Ventilation:** Ensure adequate ventilation if using any cleaning agents or lubricants.

3. PACKAGE CONTENTS

Verify that all components are present and undamaged upon opening the package.

- 1 x Kenmore 11022332510 HD Washer Main Drive Belt



Image: The replacement main drive belt for Kenmore 11022332510 HD washers. This black, multi-ribbed belt is designed to transmit power from the motor to the washer's drum mechanism.

4. INSTALLATION INSTRUCTIONS

This section outlines the general procedure for replacing a washer drive belt. Specific steps may vary slightly depending on your exact washing machine configuration. Always refer to your washing machine's service manual for detailed instructions if available.

4.1. Preparation

1. **Disconnect Power:** Unplug the washer from the electrical outlet. Turn off the water supply valves.
2. **Access the Belt:** Depending on your washer model, you may need to remove the back panel, front panel, or tilt the washer to access the motor and drive system.
3. **Locate Old Belt:** Identify the existing drive belt connecting the motor pulley to the transmission pulley or drum pulley.

4.2. Belt Removal

1. **Release Tension:** Some washers have a tensioning pulley or motor mount that can be loosened to release tension on the belt. If not, you may need to carefully pry the old belt off one of the pulleys.
2. **Remove Old Belt:** Once tension is released, carefully remove the old drive belt from both pulleys.

4.3. New Belt Installation

1. **Position New Belt:** Place the new drive belt around the smaller motor pulley first.
2. **Route Belt:** Route the belt around the larger transmission or drum pulley.

- 3. Apply Tension:** While holding the belt firmly on the motor pulley, rotate the larger pulley by hand. The belt should gradually seat itself onto the larger pulley. Ensure the belt is properly aligned in the grooves of both pulleys.
- 4. Check Tension:** The belt should be snug but not overly tight. It should have a small amount of deflection when pressed.

4.4. Reassembly and Test

- 1. Reassemble:** Reattach any panels or components that were removed to access the belt.
- 2. Reconnect Power:** Plug the washer back into the electrical outlet and turn on the water supply.
- 3. Test Operation:** Run a short cycle (e.g., spin cycle) to ensure the belt operates smoothly and the washer functions correctly. Listen for any unusual noises.

5. MAINTENANCE

Regular inspection of the drive belt can help prevent future issues and extend the life of your washing machine.

- Visual Inspection:** Periodically inspect the drive belt for signs of wear, cracking, fraying, or glazing.
- Proper Tension:** Ensure the belt maintains proper tension. A loose belt can slip, while an overly tight belt can strain the motor and pulleys.
- Cleanliness:** Keep the area around the belt and pulleys free from lint, debris, and grease, which can cause premature wear.
- Replacement:** Replace the belt if any signs of significant wear or damage are observed, or if the washer exhibits symptoms of a failing belt.

6. TROUBLESHOOTING

If your washing machine is experiencing issues related to the drive system, the following table may help identify and resolve common problems.

Problem	Possible Cause	Solution
Washer not spinning or agitating	Broken or slipped drive belt	Inspect and replace the drive belt if broken or worn. Re-seat if slipped.
Loud squealing or grinding noise during operation	Worn, loose, or misaligned drive belt	Inspect belt for wear and proper tension/alignment. Replace if necessary.
Burning rubber smell	Slipping drive belt due to wear or overload	Replace the drive belt. Avoid overloading the washer.

If troubleshooting steps do not resolve the issue, it is recommended to contact a qualified service technician.

7. SPECIFICATIONS

- Product Part Number:** FRIC-PL-APP-TP-22052025-026734 (Fricpart-073097)
- Compatible Model:** Kenmore 11022332510 HD Washer
- Color:** Black/White
- Item Package Quantity:** 1

- **Manufacturer:** Fricparts

8. WARRANTY AND SUPPORT

This product is a replacement part. For specific warranty information, please refer to the terms provided by the seller at the time of purchase. If you encounter any issues or require further assistance, please contact the seller directly through your purchase platform.

Always ensure you have your purchase details and model number readily available when seeking support.