

SEVERIN FR 2461

SEVERIN Black Line FR 2461 Single Hot Air Fryer

Model: FR 2461 | Brand: SEVERIN

1. INTRODUCTION

The SEVERIN Black Line FR 2461 is a compact hot air fryer designed for healthy and versatile cooking. Utilizing hot air technology, it allows for fast preparation of various dishes without the need for excessive oil or fat. With its intuitive touch control and 8 automatic programs, it simplifies the cooking process for fries, bacon, chicken, steak, vegetables, fish, frozen foods, and cakes. This manual provides essential information for safe operation, maintenance, and troubleshooting.



Figure 1.1: SEVERIN Black Line FR 2461 Single Hot Air Fryer, front view.

2. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the appliance to prevent personal injury or damage to the appliance.

- Always place the appliance on a stable, heat-resistant surface, away from walls or other appliances to allow for proper ventilation.
- Do not immerse the appliance, cord, or plug in water or other liquids.
- Keep children and pets away from the appliance during operation.
- Do not block the air inlet or outlet vents during operation.
- Do not fill the basket with oil or fat, as this can cause a fire hazard.
- Always unplug the appliance when not in use and before cleaning. Allow it to cool down completely before handling or cleaning.
- Do not operate the appliance if the cord or plug is damaged, or if the appliance malfunctions or has been damaged in

any way.

- Use only original accessories and spare parts.
- Hot steam is released through the air outlet opening during hot air frying. Keep your hands and face at a safe distance from the steam and the air outlet openings.

3. PRODUCT OVERVIEW

3.1 Components

- Main Unit
- Removable Frying Basket
- Control Panel with Digital Display
- Air Inlet and Outlet Vents



Figure 3.1: The air fryer with its removable frying basket.

3.2 Control Panel

The intuitive touch control panel allows for easy adjustment of settings and selection of programs.



Figure 3.2: Detailed view of the digital touch control panel.

- **Digital Display:** Shows temperature, time, and program icons.
- **Temperature Control (+/-):** Adjusts cooking temperature (60°C to 200°C).
- **Time Control (+/-):** Adjusts cooking time.
- **MENU Button:** Cycles through the 8 preset cooking programs.
- **Power/Start/Pause Button:** Turns the appliance on/off and starts/pauses cooking.
- **Shake Reminder Icon:** Illuminates when it's time to shake the basket for even cooking.

4. SETUP AND FIRST USE

Before using your air fryer for the first time, follow these steps:

1. **Unpack:** Remove all packaging materials, stickers, and labels from the appliance.
2. **Clean:** Wash the frying basket thoroughly with hot water, dish soap, and a non-abrasive sponge. Wipe the inside and outside of the appliance with a damp cloth. Do not immerse the main unit in water.
3. **Placement:** Place the air fryer on a stable, level, and heat-resistant surface. Ensure there is at least 10 cm of free space at the back and sides, and above the appliance for proper air circulation.

4. **Pre-heating (First Use):** For the first use, it is recommended to run the appliance empty for about 10-15 minutes at 180°C to burn off any manufacturing residues. A slight odor may be present, which is normal. Ensure good ventilation during this process.

5. OPERATING INSTRUCTIONS

5.1 Basic Operation

1. **Prepare Food:** Place the ingredients into the frying basket. Do not overfill the basket to ensure even cooking.
2. **Insert Basket:** Slide the frying basket back into the main unit until it clicks into place.
3. **Power On:** Plug the appliance into a grounded wall outlet. The display will light up.
4. **Set Temperature and Time:** Use the temperature (+/-) buttons to set the desired cooking temperature (e.g., 180°C). Use the time (+/-) buttons to set the desired cooking time (e.g., 15 minutes).
5. **Start Cooking:** Press the Power/Start/Pause button to begin the cooking process. The fan and heating element will activate.
6. **Shake Reminder:** For certain foods like fries, the

Related Documents - FR 2461

	SEVERIN PG 8575 Quickstart Guide A concise guide to setting up and operating the SEVERIN PG 8575 air fryer oven, covering unboxing, cleaning, basic functions, and pizza baking.
	SEVERIN FR2445 Low-Fat Air Fryer XXL User Manual - Instructions and Safety Guide Comprehensive user manual for the SEVERIN FR2445 Low-Fat Air Fryer XXL. Includes operating instructions, safety precautions, cleaning guide, and troubleshooting tips.
	SEVERIN Heißluftfritteuse FR 2460 Bedienungsanleitung & Informationen Entdecken Sie die SEVERIN Heißluftfritteuse FR 2460. Diese Anleitung bietet detaillierte Informationen zur sicheren Bedienung, Reinigung und Wartung Ihres Geräts für gesunde und köstliche Mahlzeiten.
	SEVERIN FR 2446 Heißluftfritteuse - Gebrauchsanleitung und Bedienung Umfassende Anleitung für die SEVERIN FR 2446 Heißluftfritteuse. Erfahren Sie mehr über Anschluss, Komponenten, Sicherheitshinweise, Zubereitung und Fehlerbehebung für Ihr Küchengerät.



SEVERIN FR 2408 Mini-Friteuse mit Fondue Bedienungsanleitung

Umfassende Bedienungsanleitung für die SEVERIN FR 2408 Mini-Friteuse mit Fondue.
Erfahren Sie alles über sichere Handhabung, Zubereitung und Pflege dieses vielseitigen
Küchengeräts.



SEVERIN Wasserkocher WK 3472 - Bedienungsanleitung und Sicherheitshinweise

Finden Sie detaillierte Anleitungen und wichtige Sicherheitshinweise für den SEVERIN Wasserkocher WK 3472. Erfahren Sie mehr über Anschluss, Bedienung, Reinigung und Wartung.