

[Manuals.plus](#) /

› [Coleman](#) /

› Coleman Instant Tent 4-Person Instruction Manual

Coleman Colema Cabin Tent with Instant Setup

Coleman Instant Tent 4-Person Instruction Manual

Model: FPS-136929

Your guide to quick and easy tent setup, use, and care.

PRODUCT OVERVIEW

The Coleman Instant Tent is designed for rapid deployment, featuring pre-attached poles for a quick 60-second setup. Its WeatherTec system with patented welded floors and inverted seams provides protection against the elements, ensuring a dry interior. Constructed with rugged Polyguard 2X double-thick fabric, this tent offers durability for enduring use. Integrated air vents and multiple windows enhance airflow, while internal storage pockets help keep your gear organized. The tent comfortably accommodates up to 4 people and fits one queen-size air bed, making it ideal for camping trips or backyard adventures.



Front view of the Coleman Instant Tent, showcasing its design and pre-attached pole structure.

SETUP INSTRUCTIONS

Setting up your Coleman Instant Tent is designed to be quick and straightforward, typically taking around 60 seconds for the main structure.

1. **Unpack the Tent:** Remove the tent from its expandable carry bag and lay it flat on the ground at your desired campsite. Ensure the tent is fully spread out.
2. **Extend the Poles:** Locate the pre-attached poles. Begin by extending the central hub upwards. Then, extend each of the four corner poles outwards and upwards until they click into place. Each pole segment will lock automatically.
3. **Secure the Tent:** Once the main structure is standing, use the included stakes to secure the tent's base to the ground at each corner and along the sides. This provides stability, especially in windy conditions.
4. **Attach the Rainfly (Optional but Recommended):** Drape the vented rainfly over the top of the tent. Secure the rainfly to the tent poles using the integrated clips or straps. Adjust for proper tension to ensure optimal water shedding and airflow.



Initial steps of setting up the tent, showing the pre-attached poles being extended.



Raising the tent poles to their full height, demonstrating the instant setup mechanism.



The Coleman Instant Tent fully erected and ready for use.

Setup Videos:

How to Set up and Pack Away the Coleman Instant 4

Your browser does not support the video tag.

This video provides a comprehensive guide on setting up and packing away the Coleman Instant Tent, demonstrating the ease of use for a 4-person model.

Coleman Camping Tent with Instant Setup Is Quick And Easy

Your browser does not support the video tag.

Watch this video to see how quickly and easily the Coleman Instant Tent can be set up, highlighting its user-friendly design.

Coleman Cabin Tent with Instant Setup: Easy Peasy Setup!

Your browser does not support the video tag.

This video demonstrates the simple and efficient setup process for the Coleman Cabin Tent, emphasizing its "easy peasy" nature.

OPERATING THE TENT

Ventilation and Airflow:

The tent features a vented rainfly and multiple windows to ensure optimal airflow and reduce condensation. The windows can be zipped open or closed to adjust ventilation and privacy. The rainfly is designed to improve air circulation without requiring extra assembly.



The tent with its door open, illustrating the spacious interior and ventilation options.

Interior Space and Organization:

With broad dimensions of 8 x 7 feet and a center height of 4-foot 11-inch, the tent offers ample room for comfortable movement. It is designed to fit one queen-size air bed. Integrated storage pockets are available to keep small items like phones, keys, or flashlights organized and easily accessible.

Weather Protection:

The WeatherTec system incorporates patented welded floors and inverted seams to prevent water from entering the tent, keeping the interior dry even during rain. The rugged Polyguard 2X double-thick fabric provides enhanced durability and resistance to wear and tear.

MAINTENANCE AND CARE

Cleaning:

To clean your tent, use mild soap and lukewarm water. Apply with a soft sponge and rinse thoroughly. Do not use harsh detergents, bleach, or machine wash, as this can damage the fabric and waterproof coating. Air dry completely before packing away.

Storage:

Ensure the tent is completely dry before folding and storing it in the provided carry bag. Storing a damp tent can lead to mildew and fabric degradation. The carry bag expands for easy packing, making it simple to fit the tent back in after use.



Folding the tent for storage in its carry bag.

Packing Away Video:

How to Set up and Pack Away the Coleman Instant 4

Your browser does not support the video tag.

This video demonstrates the process of packing away the Coleman Instant Tent efficiently into its carry bag.

TROUBLESHOOTING

- **Water Leaks:** While the tent features WeatherTec technology, extreme weather conditions or improper setup can sometimes lead to leaks. Ensure all seams are properly sealed and the rainfly is taut and correctly positioned. Consider applying a seam sealer for added protection in heavy rain.

- **Difficulty with Pole Extension/Retraction:** If poles are stiff, ensure buttons are fully depressed when extending or retracting. Clean any dirt or debris from the pole joints. Avoid forcing the poles.
- **Condensation Inside Tent:** Ensure adequate ventilation by opening windows and ensuring the rainfly's vents are clear. Condensation is natural, especially in humid conditions, but proper airflow can minimize it.
- **Tent Instability in Wind:** Always use all provided stakes and guylines to secure the tent. Position the tent with the narrowest side facing the prevailing wind direction if possible.

PRODUCT SPECIFICATIONS

Feature	Detail
Brand	Coleman
Model Name	Coleman Cabin Tent with Instant Setup
Product Dimensions	96"L x 84"W x 59"H
Item Weight	19.1 Pounds
Occupancy	4 Person
Seasons	3 Season
Material	Polyester, Polyethylene, Alloy Steel, Fabric
Special Feature	Rainfly
Water Resistance Level	Waterproof
Number of Doors	1
Number of Windows	5



Visual representation of the tent's dimensions: 96"L x 84"W x 59"H.

WARRANTY AND SUPPORT

This Coleman Instant Tent comes with a Limited Warranty. For specific details regarding warranty coverage, claims, or product support, please refer to the warranty information included with your purchase or visit the official Coleman website. You can also contact Coleman customer service for assistance.

For additional resources and product information, visit the [Coleman Store on Amazon](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question