

TABU 440015

TABU 10 Cu Ft Chest Deep Freezer

USER MANUAL

1. Introduction

Thank you for choosing the TABU 10 Cu Ft Chest Deep Freezer. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read this manual thoroughly before use and retain it for future reference.

This chest freezer is designed to provide ample storage for your perishable goods, featuring a compact design, adjustable temperature control, and quiet operation. Its top-opening design and removable storage basket enhance convenience for food organization.

2. Safety Information

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury.

- Ensure the freezer is properly grounded.
- Do not operate the freezer with a damaged power cord or plug.
- Keep ventilation openings clear of obstruction.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- Unplug the freezer before cleaning or performing maintenance.
- Allow the appliance to stand upright for at least 24 hours before initial use to allow refrigerants to settle.

3. Parts Identification

Familiarize yourself with the key components of your TABU Chest Deep Freezer.



Figure 3.1: Front view of the TABU 10 Cu Ft Chest Deep Freezer. Note the external temperature control dial on the lower right.



Details Determine Quality

Chest Freezer is designed with user convenience in mind.

Figure 3.2: Key features include a robust door gasket for sealing, a built-in door handle for easy opening, a hinged door design allowing angles between 45° and 90°, and a movable storage basket for organizing smaller items.

- **Main Unit:** The primary freezer body.
- **Lid/Door:** Top-opening lid with a hinged design for easy access.
- **Temperature Control Dial:** Located on the front for adjusting cooling levels.
- **Removable Storage Basket:** For convenient organization of smaller items.
- **Adjustable Leveling Legs:** To ensure stability on uneven surfaces.

4. Setup

Proper setup is crucial for optimal performance and longevity of your freezer.

4.1 Unpacking

Carefully remove all packaging materials. Inspect the freezer for any shipping damage. Report any damage to your retailer immediately.

4.2 Placement

- Place the freezer on a firm, level surface away from direct sunlight and heat sources (e.g., stove, heater).
- Ensure adequate air circulation around the freezer. Maintain at least 4 inches (10 cm) of space from walls and other appliances.
- The freezer is designed for indoor use. Avoid placing it in excessively humid or dusty environments.

4.3 Leveling

Adjust the leveling legs at the bottom of the freezer to ensure it is stable and level. A level appliance operates more efficiently and quietly.

4.4 Initial Power-On

After placement, allow the freezer to stand upright for at least 24 hours before plugging it into a power outlet. This allows the refrigerant to settle, preventing potential damage to the cooling system. Plug the freezer into a dedicated, grounded electrical outlet. Do not use extension cords or adapters.

5. Operating Instructions

Your TABU Chest Deep Freezer is designed for simple and effective food preservation.

5.1 Temperature Control

The freezer features a 7-level adjustable temperature control dial located on the front. The temperature can be controlled from -7.6°F to 6.8°F (-14°C to -22°C).

7-Level Temp Control

7 Temperature Control Chest Freezer,
the ultimate solution for all your cooling needs.
From 7.6 °F to 6.8 °F



Figure 5.1: The 7-level temperature control dial allows precise temperature adjustments for different types of frozen goods.

1. Rotate the dial to select your desired temperature setting.
2. A higher number on the dial indicates a lower (colder) temperature.
3. For initial startup or rapid freezing, set the dial to the coldest setting (e.g., '7') for a few hours, then adjust to your preferred long-term storage temperature.

5.2 Food Storage

10.0 CU.FT Large Capacity

It offers ample storage for all your perishables.

10.0



Figure 5.2: The 10.0 cubic foot capacity provides ample space for a variety of frozen foods.

- Always package food properly in airtight containers or freezer bags to prevent freezer burn and maintain quality.
- Do not overload the freezer. Allow space for air circulation around items for efficient freezing.
- Utilize the removable storage basket for frequently accessed or smaller items.

6. Maintenance

Regular maintenance ensures your freezer operates efficiently and extends its lifespan.

6.1 Cleaning

- Unplug the freezer before cleaning.
- Clean the interior with a mild detergent and warm water. Avoid abrasive cleaners or sharp objects.
- Wipe down the exterior with a soft, damp cloth.
- Ensure the door gasket is clean and free of debris to maintain a proper seal.

6.2 Defrosting

Over time, frost will accumulate on the interior walls. Defrost the freezer when the frost layer is about 0.2 inches (5 mm) thick.

1. Unplug the freezer.
2. Remove all food items and store them in another freezer or cooler.
3. Leave the lid open to allow the frost to melt naturally. You can place towels at the bottom to absorb water.
4. Once defrosted, clean and dry the interior thoroughly before plugging the freezer back in and returning food.

7. Troubleshooting

Before contacting customer support, try these common troubleshooting steps.

Problem	Possible Cause	Solution
Freezer does not operate.	No power; power cord unplugged; circuit breaker tripped.	Check power supply; ensure plug is securely in outlet; reset circuit breaker.
Freezer is not cold enough.	Temperature setting too high; lid not closed properly; excessive frost buildup; too much warm food added.	Adjust temperature dial to a colder setting; ensure lid is sealed; defrost freezer; allow newly added food to cool gradually.
Freezer runs too frequently.	High ambient temperature; frequent lid opening; poor ventilation.	Ensure proper ventilation around the unit; minimize lid openings; consider relocating to a cooler area if ambient temperature is consistently high.
Excessive noise.	Freezer is not level; objects vibrating against the unit.	Adjust leveling legs; ensure nothing is touching the freezer. Normal operating sounds include gurgling, hissing, or clicking.

8. Specifications

Feature	Detail
Brand	TABU
Model Number	440015
Capacity	10 Cubic Feet
Product Dimensions	22"D x 25"W x 34"H (55.9 x 63.5 x 86.4 cm)
Item Weight	59 pounds (26.7 kg)

Feature	Detail
Color	Black
Installation Type	Freestanding
Temperature Range	-7.6°F to 6.8°F (-14°C to -22°C)
Noise Level	≤ 40dB
Refrigerant	R600a
Included Components	Side Handle, Removable Storage Basket

9. Warranty and Support

This product is packaged with a user manual. For any assistance or inquiries regarding your TABU Chest Deep Freezer, please feel free to contact our customer support team. We are committed to providing timely responses and support within 24 hours.

Please refer to your purchase documentation or the retailer's website for specific warranty terms and conditions.

For support, please contact the seller directly via the platform where the purchase was made.