

[Manuals.plus](#) /

> [Gotrax](#) /

> Gotrax GKS Mini Electric Scooter User Manual

Gotrax GKS MINI

Gotrax GKS Mini Electric Scooter User Manual

Model: GKS MINI

INTRODUCTION

Welcome to the Gotrax GKS Mini Electric Scooter user manual. This guide provides essential information for the safe assembly, operation, and maintenance of your new electric scooter. Please read this manual thoroughly before first use to ensure optimal performance and safety.

The Gotrax GKS Mini is designed for children aged 6-12, offering a fun and safe riding experience with a 150W motor, a maximum speed of 7.5 mph, and a range of up to 3.75 miles. It features 6-inch solid wheels and supports a load of up to 120 lbs.





Image: The Gotrax GKS Mini Electric Scooter in blue, showcasing its compact design.

SAFETY INFORMATION

Your safety is paramount. Always adhere to the following guidelines:

- **Helmet Use:** Always wear a properly fitted helmet and other protective gear (knee pads, elbow pads) when riding the scooter.
- **Certification:** The Gotrax GKS Mini is UL-2272 and CPC certified, ensuring it meets safety standards.
- **Supervision:** Children should always be supervised by an adult while riding.
- **Riding Environment:** Ride in safe, open areas away from traffic, pedestrians, and obstacles. Avoid wet surfaces, steep inclines, and uneven terrain.
- **Weight Limit:** Do not exceed the maximum weight limit of 120 lbs.
- **Age Recommendation:** Suitable for ages 6-12.



Image: Two children riding Gotrax GKS Mini scooters, demonstrating safe riding practices with helmets.

WHAT'S IN THE BOX

Upon opening your Gotrax GKS Mini Electric Scooter package, you should find the following components:

- Electric Scooter (main body)
- Charger
- User Manual (this document)

SETUP AND ASSEMBLY

The Gotrax GKS Mini Electric Scooter requires minimal assembly. Follow these steps to get your scooter ready for use:

1. **Attach the Front Wheel:** Securely attach the front wheel to the deck using the provided screws.
2. **Connect the Pole:** Connect the handlebar pole to the wheel assembly. Ensure the handlebar and controller wires are properly matched and connected.
3. **Secure the Handlebar:** Fasten the handlebar in place with the remaining screws.

Assembly typically takes 5-10 minutes. Ensure all connections are tight and secure before riding.

Your browser does not support the video tag.

Video: Official Gotrax video demonstrating the assembly and features of the GKS Mini Electric Scooter for kids.

OPERATING INSTRUCTIONS

Operating the Gotrax GKS Mini is designed to be simple and intuitive for young riders:

Starting the Scooter:

- **Safe Start Feature:** The motor will not engage from a standstill. To activate the motor, kick off with your foot to reach a speed of approximately 1.87 mph.
- **Acceleration:** Once moving, press the thumb control button on the handlebar to accelerate. The scooter will reach speeds up to 7.5 mph.

Effortless Parking & Braking for Kids



Image: Close-up view of the thumb control button on the handlebar, used for acceleration.

Braking:

- **Electronic Brake:** Release the thumb control to instantly stop acceleration.
- **Rear Foot Brake:** For additional stopping power, press down on the rear fender with your foot.

Rear Foot Brake

Active Fast Brake

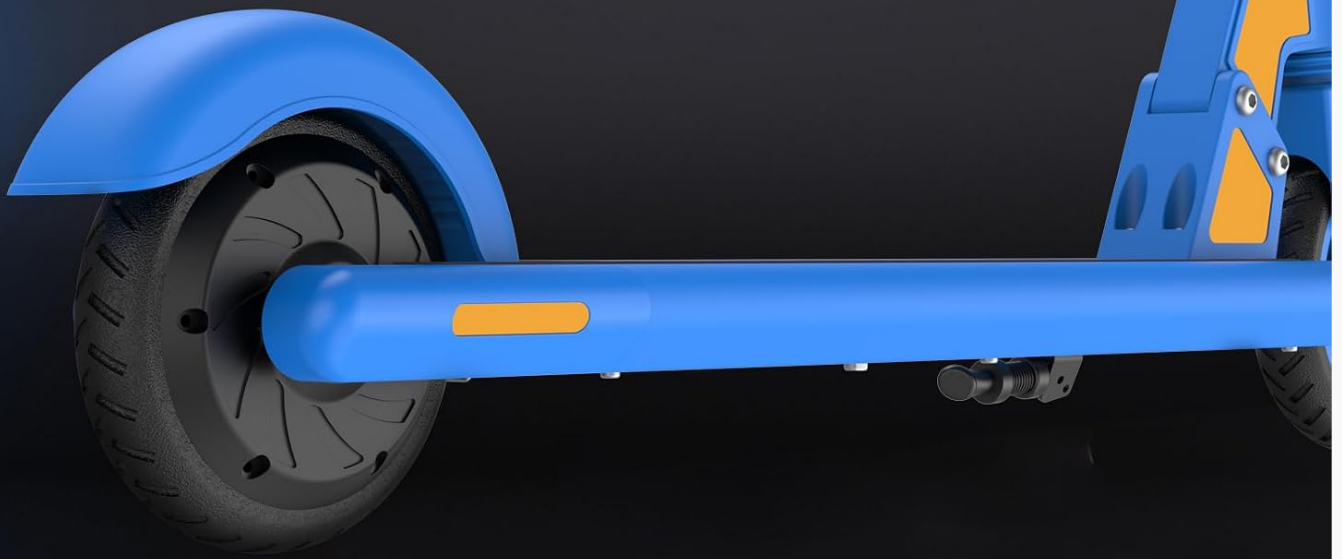


Image: Close-up view of the rear foot brake, located on the rear fender.

MAINTENANCE

Regular maintenance ensures the longevity and safe operation of your Gotrax GKS Mini Electric Scooter:

- **Cleaning:** Wipe the scooter with a damp cloth after use. Avoid using harsh chemicals or direct water spray.
- **Tires:** The scooter features 6-inch solid rubber tires, which are anti-puncture and require no inflation. Periodically check them for wear and tear.
- **Battery Charging:** Charge the battery fully after each use. The battery charge time is approximately 6 hours. Do not overcharge.
- **Storage:** Store the scooter in a cool, dry place away from direct sunlight and extreme temperatures.
- **Fasteners:** Periodically check all screws and fasteners to ensure they are tight.

Long Lasting Battery

18V 2.6Ah Battery / 7.5MPH Speed / 6H Fast Charging

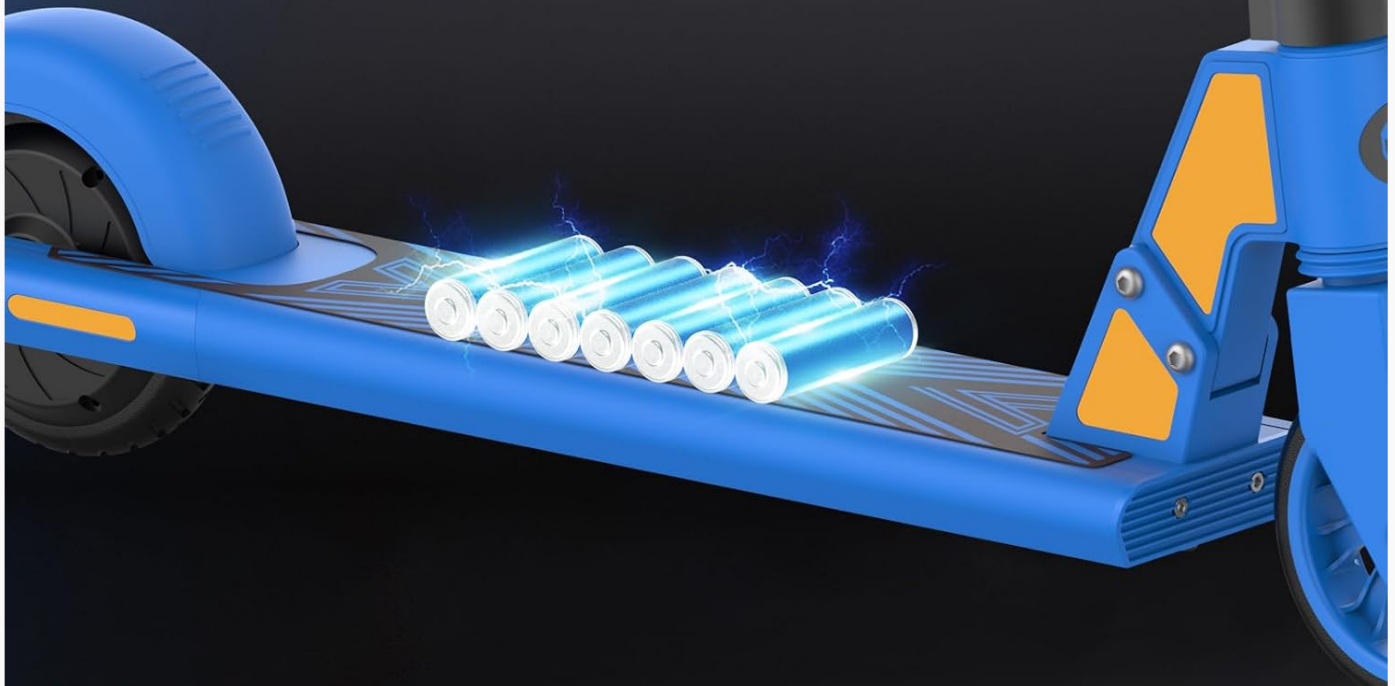


Image: Visual representation of the scooter's long-lasting battery, highlighting its 18V 2.6Ah capacity and 6-hour fast charging.

TROUBLESHOOTING

If you encounter any issues with your Gotrax GKS Mini Electric Scooter, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Scooter does not start or accelerate.	Battery is low or depleted; Safe Start feature not engaged.	Charge the battery fully. Ensure you kick off to at least 1.87 mph before pressing the thumb throttle.
Reduced performance or range.	Low battery; riding on inclines or rough terrain; heavy load.	Ensure battery is fully charged. Ride on flat, smooth surfaces. Verify rider weight is within limits.

Problem	Possible Cause	Solution
Unusual noises during operation.	Loose components; debris in wheels.	Check all screws and fasteners for tightness. Inspect wheels for any obstructions.

If these solutions do not resolve the issue, please contact Gotrax customer support.

SPECIFICATIONS

- **Model Name:** GKS MINI
- **Motor Size:** 150W
- **Max Speed:** 7.5 mph
- **Max Range:** 3.75 miles
- **Battery:** 25.2V 2.0Ah (Lithium-ion)
- **Battery Charge Time:** 6 hours
- **Tire Size:** 6 inches
- **Wheel Type:** Solid Rubber (Anti-Puncture)
- **Max Load Capacity:** 120 lbs
- **Item Weight:** 16.3 pounds
- **Frame Material:** Metal
- **Brake Style:** Electronic Brake, Rear Foot Braking
- **Certifications:** UL-2272, CPC



Image: The Gotrax GKS Mini Electric Scooter with an overlay of its key specifications including motor, max load, speed, range, and wheel type.

WARRANTY AND SUPPORT

Gotrax offers a **1-year limited warranty** on all components of the GKS Mini Electric Scooter. This warranty covers manufacturing defects and ensures worry-free ownership.

For warranty claims, technical assistance, or any concerns regarding your scooter, please contact Gotrax customer support. Our reliable after-sales support team is available to assist you.

For more information, visit the official Gotrax store: [Gotrax Store on Amazon](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0F9W3TZJB>

More documents and user manuals: <https://manuals.plus/>