

MAXLEGEN M40

MAXLEGEN M40 14-inch Android 14 Tablet User Manual

Model: M40 | Brand: MAXLEGEN

1. INTRODUCTION

This manual provides essential information for the proper use and maintenance of your MAXLEGEN M40 Android 14 Tablet. Please read this guide thoroughly before operating the device to ensure optimal performance and longevity. The MAXLEGEN M40 features a 14-inch 2.5K FHD display, powered by an Octa-Core processor, with 36GB RAM and 256GB internal storage, expandable up to 1TB. It supports 4G LTE and 5G Wi-Fi connectivity and includes a large 11580mAh battery.

2. WHAT'S IN THE BOX

Verify that all items are present in the package:

- MAXLEGEN M40 Tablet
- Protective Case
- Stylus
- Earphones
- Type-C Cable
- Charger (18W Fast Charger)
- SIM Card Tray Eject Tool

14 Pollici Display da 2,5K



14-inch Screen Size
IPS Display



Blue Light
Certification



2240*1400
FHD Resolution



350nits
typ Brightness



16:10
Screen Ratio



6.5mm*
Lunetta ultrasottile



62% Più grande

area di visualizzazione superiore a uno schermo da 11 pollici



44% Più grande

area di visualizzazione superiore a uno schermo da 12 pollici



Schermo Brillante Vista Eccellente



TDDI
Fully Laminated



Incell
Sensitive Touch



Image: MAXLEGEN M40 Tablet with its protective case, stylus, and other accessories.

3. PRODUCT OVERVIEW

The MAXLEGEN M40 tablet features a sleek metallic design with a thickness of 7.8mm. Familiarize yourself with the device's physical components:

- **Front Camera:** Located at the top center when held horizontally.
- **Power Button:** Typically on the side.
- **Volume Buttons:** Adjacent to the power button.
- **USB Type-C Port:** For charging and data transfer.
- **3.5mm Headphone Jack:** For audio output.
- **SIM/MicroSD Card Tray:** For inserting Nano SIM cards and a MicroSD card.
- **Quad Speakers:** Strategically placed for immersive audio.
- **Rear Camera:** Dual AI camera system with LED flash.



4 Altoparlanti

Uscita audio orizzontale



3.5mm

Headset interface



**Brilla in
ogni scatto**



13MP Rear



8MP Front



Messa a fuoco automatica



AI Sub-camera
Optimized Imaging



LED Flash
Low Light Capture

Image: Side profile of the MAXLEGEN M40 tablet, highlighting its slim design and port locations.

4. SETUP

4.1 Charging the Tablet

Before first use, fully charge your tablet. Connect the provided Type-C cable to the tablet's charging port and the other end to the 18W fast charger. Plug the charger into a power outlet. The battery indicator on the screen will show charging status. A full charge provides ample power for daily use.

Voir et utiliser Plusieurs applications à la fois

Parcourez, prenez des notes et faites plus en même temps.

Effectuez plusieurs tâches de manière transparente en utilisant plusieurs applications¹ sur un seul écran.

¹ Certaines applications peuvent ne pas prendre en charge l'utilisation de fenêtres multi-actives

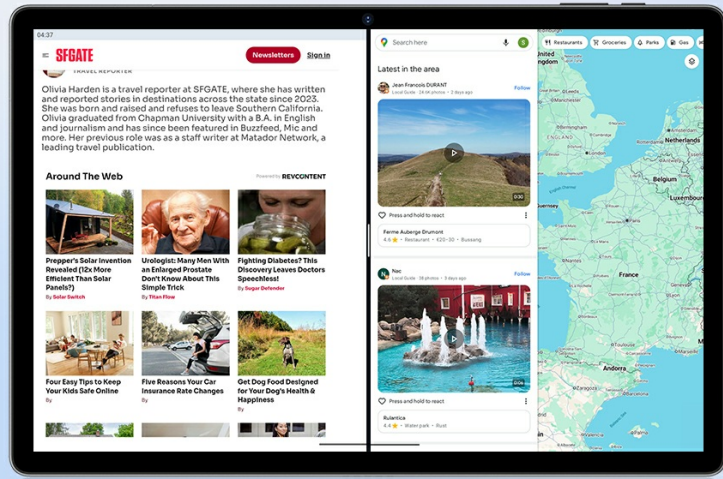


Image: The MAXLEGEN M40 tablet connected to its charger via a Type-C cable, illustrating the charging process.

4.2 Power On/Off

- **To Power On:** Press and hold the Power button until the MAXLEGEN logo appears on the screen.
- **To Power Off:** Press and hold the Power button until the power options appear. Select "Power off" and confirm.
- **To Restart:** Press and hold the Power button until the power options appear. Select "Restart" and confirm.

4.3 SIM Card and MicroSD Card Installation

The tablet supports dual Nano SIM cards and a MicroSD card for expanded storage up to 1TB.

1. Locate the SIM card tray on the side of the tablet.
2. Insert the provided SIM eject tool into the small hole next to the tray and press gently until the tray pops out.
3. Place your Nano SIM card(s) and/or MicroSD card into the designated slots on the tray, ensuring correct orientation.
4. Carefully push the tray back into the tablet until it clicks into place.

4.4 Initial Setup

Upon first power-on, follow the on-screen instructions to complete the initial setup:

- Select your language.
- Connect to a Wi-Fi network (supports 2.4G/5G dual-band Wi-Fi).
- Sign in with your Google account or create a new one.
- Set up screen lock (PIN, pattern, password, or face unlock).
- Review and accept privacy settings.

5. OPERATING INSTRUCTIONS

5.1 Display Features

The MAXLEGEN M40 features a 14-inch 2.5K FHD (2240 x 1400) IPS Incell display. This technology provides clear images, rich colors, and wide viewing angles. The display is designed to protect your eyes from harmful blue light, reducing eye fatigue during extended use.



Image: The MAXLEGEN M40 tablet displaying vibrant content on its 14-inch 2.5K screen.

5.2 Android 14 Features

Your tablet runs on the latest Android 14 operating system, offering enhanced privacy settings and greater control over app permissions. Key features include:

- **Taskbar:** For efficient multitasking and quick app switching.
- **Privacy Dashboard:** Monitor and manage app access to your data.
- **Parental Controls:** Set screen time limits, monitor app usage, and remotely lock devices using Google Family Link.
- **Split Screen:** Use two applications simultaneously for improved productivity.



Image: The MAXLEGEN M40 tablet displaying the Android 14 interface with features like taskbar and privacy settings.



Contrôle Parental

Configurez-le avec le contrôle parental intégré de Google appelé Family Link. Définissez la limite de temps d'écran, surveillez l'utilisation des applications, verrouillez les appareils à distance et consultez l'emplacement de la tablette de votre enfant.

Image: A child using the MAXLEGEN M40 tablet, illustrating the parental control features.

5.3 Connectivity

- **Wi-Fi:** Supports dual-band 2.4G/5G Wi-Fi for fast and stable internet connection. Go to Settings > Network & internet > Wi-Fi to connect.
- **Bluetooth 5.0:** For connecting wireless accessories like headphones or keyboards. Go to Settings > Connected devices > Connection preferences > Bluetooth.
- **4G LTE:** With dual Nano SIM support, you can stay connected on the go. Ensure your SIM card is active and configured correctly.
- **Wireless Screen Mirroring:** Connect your tablet to a compatible TV or display wirelessly. Access this feature from the quick settings panel or display settings.

5.4 Camera Usage

The tablet is equipped with an 8MP front camera for clear video calls and a 16MP rear camera with AI features and LED flash for capturing photos and videos. Open the Camera app to access various modes and settings.



Image: Close-up of the MAXLEGEN M40's dual AI camera system on the rear, highlighting its features.

5.5 Audio


Experience immersive audio with four stereo speakers and noise reduction technology. The tablet also includes a 3.5mm headphone jack for private listening and an FM radio for entertainment.



Image: A person using the MAXLEGEN M40 tablet with headphones, demonstrating the 3.5mm headphone jack.

5.6 GPS Navigation

The MAXLEGEN M40 is equipped with GPS, BDS, Galileo, and GLONASS satellite positioning systems, allowing you to use navigation apps like Google Maps and access offline maps for your travels.

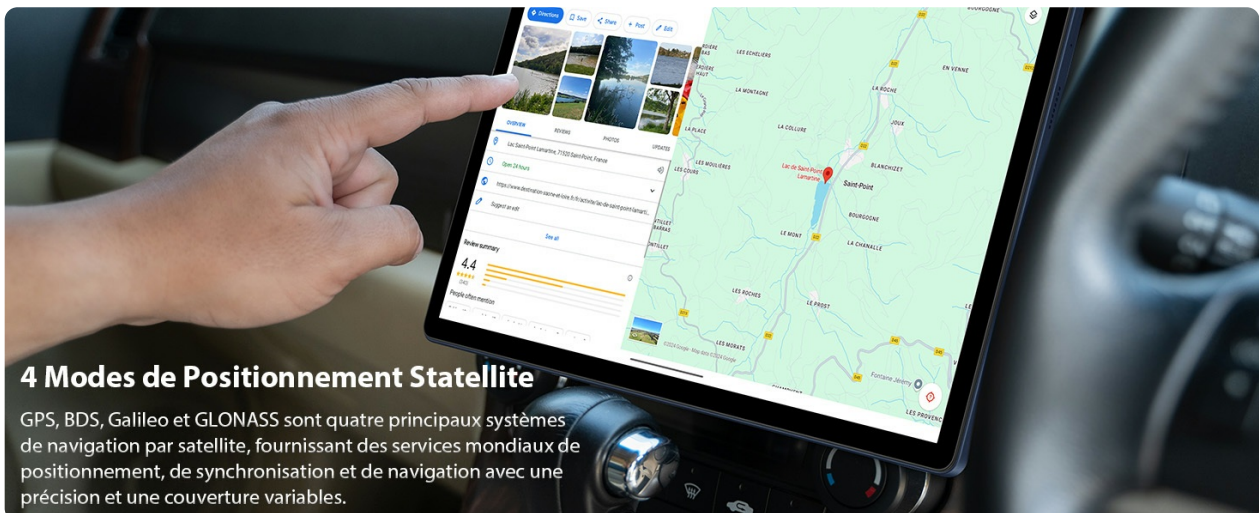

4 Modes de Positionnement Satellite

GPS, BDS, Galileo et GLONASS sont quatre principaux systèmes de navigation par satellite, fournissant des services mondiaux de positionnement, de synchronisation et de navigation avec une précision et une couverture variables.

Image: The MAXLEGEN M40 tablet mounted in a car, displaying a navigation map, illustrating its GPS capabilities.

5.7 Face Unlock

For convenient and secure access, the tablet supports facial recognition unlock. Set this up in Settings > Security & privacy > Device unlock.

6. MAINTENANCE

6.1 Battery Care

- Avoid exposing the tablet to extreme temperatures.
- Use only the original charger and cable provided.
- Do not let the battery drain completely frequently.
- For long-term storage, charge the battery to about 50% and power off the device.

6.2 Cleaning

- Use a soft, lint-free cloth to clean the screen and body.

- Do not use harsh chemicals or abrasive materials.
- Avoid getting moisture into ports or openings.

6.3 Software Updates

Regularly check for and install software updates to ensure your tablet has the latest features, security patches, and performance improvements. Go to Settings > System > System update.

7. TROUBLESHOOTING

If you encounter issues with your MAXLEGEN M40 tablet, refer to the following common solutions:

Problem	Solution
Tablet does not power on	Ensure the battery is charged. Connect the charger and wait a few minutes before attempting to power on again. If unresponsive, press and hold the power button for 10-15 seconds to force a restart.
Cannot connect to Wi-Fi	Check if Wi-Fi is enabled in settings. Restart your router and the tablet. Ensure you are entering the correct Wi-Fi password. Try connecting to a different network if available.
Apps are crashing or freezing	Close and reopen the app. Clear the app's cache (Settings > Apps > [App Name] > Storage & cache > Clear cache). Restart the tablet. Ensure sufficient storage space is available.
Slow performance	Close unused apps running in the background. Clear cache and temporary files. Restart the tablet. Consider uninstalling rarely used apps or moving large files to external storage.
SIM card not detected	Ensure the SIM card is correctly inserted into the tray. Restart the tablet. Verify that the SIM card is active with your carrier.

8. SPECIFICATIONS

Key technical specifications for the MAXLEGEN M40 Tablet:

Feature	Detail
Brand	MAXLEGEN
Model Name	M40
Screen Size	14 Inches
Display Resolution	2240 x 1400 (2.5K FHD)
RAM	36 GB (12GB + 24GB Expansion)
Internal Storage	256 GB
Expandable Storage	Up to 1 TB via MicroSD

Feature	Detail
Processor	Octa-Core 2.0 GHz
Operating System	Android 14
Rear Camera	16 Megapixels
Front Camera	8 Megapixels
Battery Capacity	11580 mAh
Charging	18W Fast Charging, Type-C
Connectivity	4G LTE, 5G Wi-Fi (802.11ac/b/g/n), Bluetooth 5.0
GPS	GPS, BDS, Galileo, GLONASS
Audio	Quad Stereo Speakers, 3.5mm Headphone Jack, FM Radio
Dimensions (Thickness)	7.8 mm

9. WARRANTY AND SUPPORT

The MAXLEGEN M40 Tablet comes with a limited warranty. For specific warranty terms and conditions, please refer to the documentation included with your purchase or contact MAXLEGEN customer support.

If you require further assistance or have questions not covered in this manual, please contact MAXLEGEN customer support through their official website or the retailer where you purchased the product.