

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [M-Amazup](#) /

› [M-Amazup L-CD211 Portable Desktop CD Player User Manual](#)

## M-Amazup L-CD211

# M-Amazup L-CD211 Portable Desktop CD Player

User Manual

---

## 1. INTRODUCTION

Thank you for purchasing the M-Amazup L-CD211 Portable Desktop CD Player. This device offers versatile audio playback options, including CD, Bluetooth, FM radio, USB, AUX, and TF card support, along with an optical output for high-fidelity sound. Designed for both home and portable use, it features a rechargeable battery and a user-friendly interface. Please read this manual thoroughly to ensure proper operation and to maximize your listening experience.

Your browser does not support the video tag.

**Video 1:** Overview of the M-Amazup L-CD211 Portable CD Player. This video demonstrates the product's appearance and some of its key features, including its multi-functional capabilities.

## 2. PACKAGE CONTENTS

Please check the package for the following items:

- CD Player x1
- Cable x1 (Type-C charging cable)
- Remote Control x1
- User Manual x1



Image 1: The M-Amazup L-CD211 CD Player shown with its packaging, user manual, remote control, and cables.

### 3. PRODUCT OVERVIEW

The M-Amazup L-CD211 features a classic square design with a tactile volume knob and a translucent dust cover. The front panel includes dual speakers and an LCD display for track information and mode selection.

#### Key Features:

- **7-in-1 Multi-Function:** CD Playback, Bluetooth, FM Radio, USB, AUX, TF Card, Optical Output.
- **High-Fidelity Sound:** Dual speakers with 5 EQ modes (POP/JAZZ/CLASSIC/ROCK/FLAT).
- **Rechargeable Battery:** Built-in 4000mAh battery for portable use.
- **Bluetooth 5.3:** Supports both receiving and transmitting audio.
- **Optical Output:** For lossless audio connection to external systems.

# Equipped with A Complete Adapter

Does Not Include Built-In Battery



CD Play



USB play



TF play



Bluetooth play



**Image 2:** The M-Amazup L-CD211 CD Player showcasing its various playback modes including CD, AUX, FM Radio, USB, Bluetooth, and 3.5mm Audio Input/Output.

## 4. SETUP

1. **Unpack:** Carefully remove all components from the packaging.
2. **Power Connection:** Connect the provided Type-C cable to the DC 5V port on the back of the CD player and the other end to a USB power adapter (not always included, but a standard USB charger can be used) or a computer USB port. The device can operate while charging.
3. **Initial Charge:** For optimal battery life, fully charge the device before first use. The LCD display may indicate charging status.

## 5. OPERATING INSTRUCTIONS

### 5.1. CD Playback

1. **Open Cover:** Gently lift the translucent dust cover.
2. **Insert CD:** Place a CD onto the spindle, label side up, ensuring it clicks into place.
3. **Close Cover:** Close the dust cover.

4. **Select Mode:** Press the **MODE** button until "CD" appears on the LCD display. The player will automatically begin reading the disc.
5. **Controls:** Use the **PLAY/PAUSE** button to start or pause playback. Use the **PREV/NEXT** buttons to skip tracks. Adjust volume with the rotary knob or remote control.



**Image 3:** The M-Amazup L-CD211 CD Player with a CD inserted and playing, demonstrating its primary function.

## 5.2. Bluetooth Mode

The device supports Bluetooth 5.3 for both receiving and transmitting audio.

### Bluetooth Receiver (Connect to Phone/Tablet):


1. **Select Mode:** Press the **MODE** button until "BT" appears on the LCD display. The device will enter pairing mode.
2. **Pair:** On your smartphone or tablet, enable Bluetooth and search for "M-Amazup BT211" (or similar). Select it to pair.
3. **Play Audio:** Once connected, play audio from your device, and it will stream through the CD player's speakers.

### Bluetooth Transmitter (Connect to Bluetooth Headphones/Speakers):

1. **Select Mode:** Ensure the CD player is in CD, USB, or TF card mode.
2. **Activate Transmitter:** Press and hold the **BT** button (if available, or refer to specific button for transmit function in manual) to activate Bluetooth transmission. The device will search for nearby Bluetooth audio devices.
3. **Pair:** Put your Bluetooth headphones or speaker into pairing mode. The CD player should connect automatically.
4. **Listen:** Audio from the CD player will now be transmitted to your connected Bluetooth device.

# 7-in-1 Portable CD Player

Compact size, full functionality - take your music anywhere.

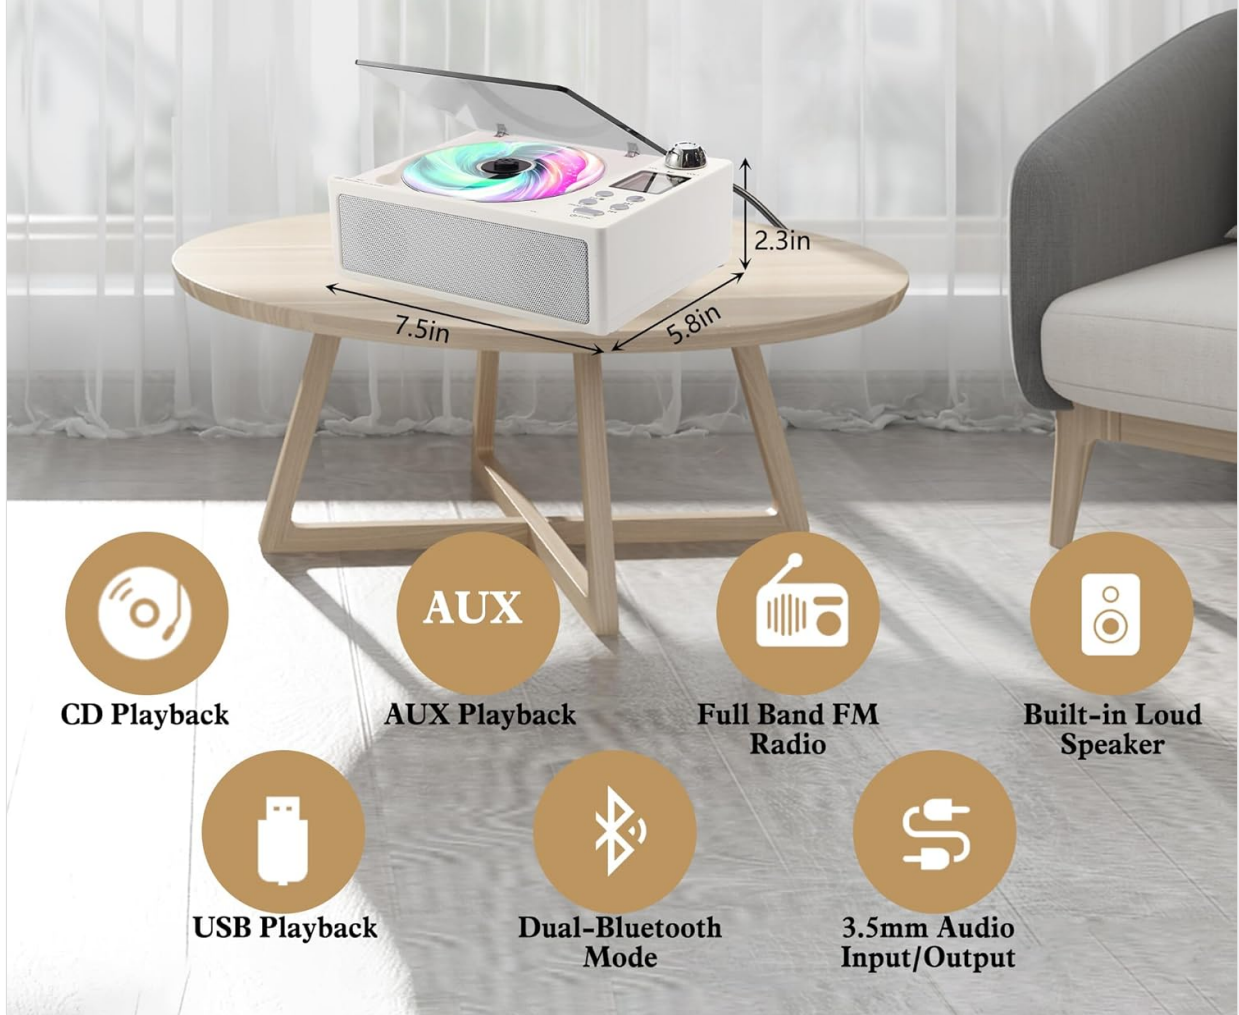

**Image 4:** The M-Amazup L-CD211 CD Player illustrating its dual Bluetooth functionality, allowing connection to smartphones (receiver) and Bluetooth headphones/speakers (transmitter).

## 5.3. FM Radio

1. **Select Mode:** Press the **MODE** button until "FM" appears on the LCD display.
2. **Auto Scan:** Press the **PLAY/PAUSE** button to initiate an automatic scan for available FM stations. The player will save detected stations.
3. **Manual Tuning:** Use the **PREV/NEXT** buttons to navigate through saved stations or fine-tune the frequency.
4. **Antenna:** Extend the built-in antenna for improved reception.

## Simplified Operation

Control your music easily with the provided remote



**Image 5:** The M-Amazup L-CD211 CD Player highlighting its extended FM reception capabilities, supporting a full band from 76Hz to 108MHz.

### 5.4. USB/TF Card Playback

1. **Insert Media:** Insert a USB flash drive into the USB port or a TF card into the TF card slot.
2. **Select Mode:** Press the **MODE** button until "USB" or "TF" appears on the LCD display. The player will automatically detect and begin playing audio files.
3. **Controls:** Use the **PLAY/PAUSE** and **PREV/NEXT** buttons to control playback.

### 5.5. AUX Input

1. **Connect Cable:** Use a 3.5mm audio cable (not included) to connect an external audio device (e.g., MP3 player, smartphone) to the AUX IN port on the CD player.
2. **Select Mode:** Press the **MODE** button until "AUX" appears on the LCD display.
3. **Play Audio:** Play audio from your external device. The sound will be output through the CD player's speakers.

### 5.6. Optical Output

For connecting to external audio systems or home theaters for lossless audio quality:

1. **Connect Cable:** Connect an optical audio cable (not included) from the OPTICAL OUT port on the CD player to the optical input on your amplifier or sound system.
2. **Select Input:** Select the corresponding optical input on your external audio system.
3. **Play Audio:** Play audio from the CD player (e.g., CD, USB, TF), and the sound will be routed through your connected audio system.

## 6. CHARGING THE BATTERY

The M-Amazup L-CD211 is equipped with a 4000mAh rechargeable Lithium Ion battery, providing extended playback time for portable use.

1. **Connect Charger:** Use the provided Type-C cable to connect the player to a standard USB power adapter (DC 5V) or a computer's USB port.
2. **Charging Indicator:** The LCD display will show a charging icon or status.
3. **Full Charge:** A full charge typically takes several hours. The indicator will change or turn off when charging is complete.
4. **Power Modes:** The device can be used while charging or powered solely by its internal battery.

### Bluetooth Receiver 5.3

Enjoy Your Wireless Music from Smartphone/  
MP3/MP4/Desktop PC/Laptop/Tablet PC



### Bluetooth Transmitter 5.3

Listen to CD Music/Audio with Wireless headphone  
or Bluetooth Speaker



**Image 6:** The M-Amazup L-CD211 CD Player highlighting its 4000mAh rechargeable battery and Type-C charging port,

indicating two power supply methods.

## 7. REMOTE CONTROL

The included remote control allows convenient operation from a distance. It provides access to functions such as power on/off, mode selection, play/pause, track skip, volume adjustment, and EQ settings.

- **Power:** Turn the device on or off.
- **Mode:** Switch between CD, Bluetooth, FM, USB, AUX, TF modes.
- **Play/Pause:** Start or pause playback.
- **Prev/Next:** Skip tracks or adjust FM frequency.
- **Vol +/-:** Adjust the volume level.
- **EQ:** Cycle through equalizer presets (POP/JAZZ/CLASSIC/ROCK/FLAT).



Image 7: The M-Amazup L-CD211 CD Player being operated with its remote control, demonstrating simplified music control.

## 8. SPECIFICATIONS

Feature	Detail
---------	--------

Model Name	L-CD211
Brand	M-Amazup
Product Dimensions	7.5 x 5.8 x 2.3 inches
Item Weight	2.02 pounds
Color	White
Connectivity Technology	Auxiliary, Bluetooth, Optical, USB
Special Features	Built-in Speaker, Built-In Bluetooth Receiver and Transmitter, Dust Cover, Headphone Jack Output, Portable
Battery	1 Lithium Ion battery (4000mAh, included)
FM Radio Frequency	87.5-108MHz

## 9. TROUBLESHOOTING

- **No Power/Device Not Turning On:**

- Ensure the charging cable is securely connected to both the player and a power source.
- Check if the power adapter is working correctly.
- Allow the battery to charge for at least 30 minutes if completely drained.

- **CD Not Playing/Skipping:**

- Ensure the CD is clean and free of scratches or smudges.
- Make sure the CD is inserted correctly, label side up, and fully seated on the spindle.
- Close the dust cover completely.
- Try a different CD to rule out disc issues.

- **Poor FM Radio Reception:**

- Fully extend the telescopic antenna.
- Relocate the player to an area with better signal reception, away from electronic interference.
- Perform an auto-scan again to find stronger stations.

- **Bluetooth Pairing Issues:**

- Ensure the CD player is in Bluetooth pairing mode (BT mode).
- Make sure the external device's Bluetooth is enabled and discoverable.
- Move the devices closer to each other (within 10 meters/33 feet).
- Forget previous pairings on your external device and try pairing again.

- **No Sound:**

- Check the volume level on both the CD player and any connected external devices.
- Ensure the correct mode (CD, BT, FM, USB, AUX, TF) is selected.
- If using AUX or Optical Out, ensure cables are securely connected and the correct input is selected on the external audio system.

## 10. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the player. Do not use abrasive cleaners or solvents.
- **CD Care:** Handle CDs by their edges. Clean dirty CDs with a soft, lint-free cloth, wiping from the center outwards.
- **Storage:** Store the player in a cool, dry place away from direct sunlight, extreme temperatures, and humidity.
- **Dust Cover:** Keep the dust cover closed when not in use to protect the CD mechanism from dust.

## 11. WARRANTY AND SUPPORT

M-Amazup products are designed for quality and reliability. For warranty information, technical support, or service inquiries, please refer to the contact details provided with your purchase documentation or visit the official M-Amazup website. Please retain your proof of purchase for warranty claims.