

[Manuals.plus](#) /

› [Jocoevol](#) /

› Jocoevol Modern LED 6-Drawer Dresser User Manual

Jocoevol W11813

Jocoevol Modern LED 6-Drawer Dresser

Model: W11813

Brand: Jocoevol

INTRODUCTION

Thank you for choosing the Jocoevol Modern LED 6-Drawer Dresser. This manual provides essential information for the safe assembly, operation, and maintenance of your new furniture. Please read it thoroughly before beginning assembly and retain it for future reference.

This dresser features a modern design with six spacious drawers, integrated RGB LED lighting, hidden handles for a sleek appearance, and smooth-gliding drawer rails. It is designed to provide ample storage and enhance the ambiance of your bedroom, living room, or entryway.



Image: The Jocoevol Modern LED 6-Drawer Dresser, showcasing its sleek design and ample storage capacity in a bedroom environment.

IMPORTANT SAFETY INFORMATION

WARNING: Furniture Tip-Over Hazard

Serious or fatal crushing injuries can occur from furniture tip-over. To help prevent tip-over:

- Always install the tip-over restraint provided with the dresser.
- Never allow children to climb or hang on drawers, doors, or shelves.
- Never open more than one drawer at a time.
- Place the heaviest items in the lowest drawers.

Failure to follow these warnings can result in death or serious injury.

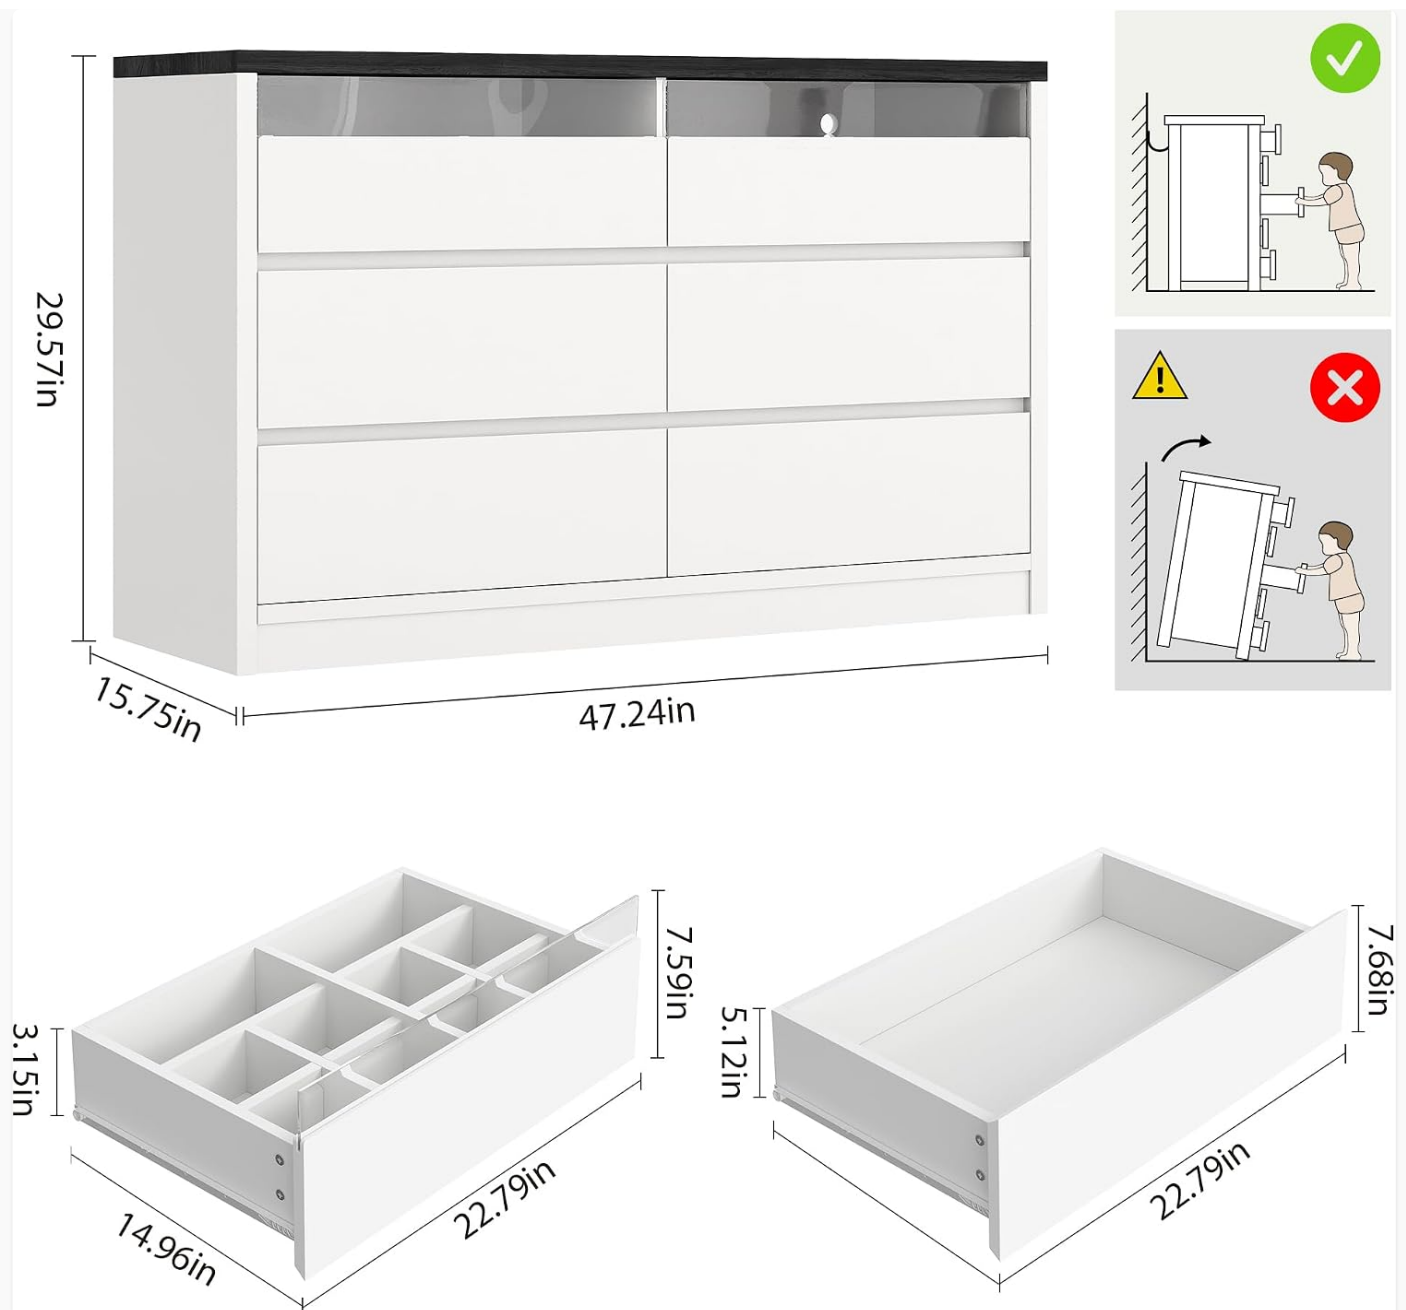


Image: A diagram illustrating the dresser's dimensions (15.94"D x 47.24"W x 29.72"H) and a visual guide for correctly installing the anti-tip restraint to prevent accidental tipping.

Always use appropriate tools and follow all assembly instructions carefully. Keep small parts away from children during assembly.

PACKAGE CONTENTS

Before beginning assembly, please verify that all components listed below are present and undamaged. If any parts are missing or damaged, do not proceed with assembly and contact customer support.

- Dresser components (panels, drawer parts)
- Installation tools (basic tools may be included, but a screwdriver is generally required)
- User Manual (this document)
- LED light kit with remote control
- Detachable jewelry and cosmetics organizer

SETUP AND ASSEMBLY

Assembly of this dresser is required. While designed for straightforward setup, it involves numerous parts and may take several hours. It is recommended to have a second person assist with assembly for easier handling of larger components.

Assembly Steps:

1. **Unpack and Organize:** Carefully unpack all components and lay them out on a clean, soft surface (e.g., a blanket or carpet) to prevent scratches. Group similar parts together.
2. **Identify Hardware:** Refer to the hardware list in the included assembly guide to identify all screws, dowels, and other fasteners.
3. **Assemble Frame:** Follow the step-by-step diagrams in the separate assembly guide to construct the main frame of the dresser. Ensure all connections are secure.
4. **Install Drawer Rails:** Attach the drawer rails to the dresser frame according to the instructions. Ensure they are level and aligned for smooth drawer operation.
5. **Assemble Drawers:** Construct each drawer box. Pay close attention to the orientation of the drawer fronts and sides.
6. **Insert Drawers:** Carefully slide the assembled drawers into their respective slots. Ensure they glide smoothly.



Image: A diagram illustrating the recommended order for installing the drawer surfaces (L, M, N, O, P, Q) from left to right and top to bottom. Following this order helps ensure proper alignment and prevents uneven drawer surfaces.

7. **Install LED Lighting:** Follow the specific instructions for installing the RGB LED light strip. This typically involves adhering the strip to designated areas and connecting it to the power supply.

8. **Attach Anti-Tip Kit:** Securely attach the anti-tip restraint to the back of the dresser and to a wall stud, following the provided instructions. This is a critical safety step.

OPERATING INSTRUCTIONS

LED Light Operation:

The integrated RGB LED lighting system can be controlled via a smart app or the included remote control, offering over 6000 vivid colors and various modes.

- **Remote Control:** Point the remote control at the LED receiver on the dresser. Use the color buttons to select static colors, or the mode buttons to cycle through dynamic lighting effects. Adjust brightness using the designated buttons.
- **Smart App Control:** Download the recommended smart app (refer to the LED light kit's specific instructions for app name). Pair your device with the LED lights via Bluetooth or Wi-Fi. The app allows for more precise color selection, custom scene creation, music synchronization, and timer functions.



Large Storage Capacity



Coats



T-Shirts



Cosmetics



Socks



Underwear



Pants

Image: The dresser with its LED lights illuminated in blue, demonstrating control via a smartphone app interface, highlighting the extensive color options and smart features.

Drawer Usage:

The dresser features six large drawers with smooth sliding rails and hidden handles for a clean aesthetic.

- **Opening/Closing Drawers:** Gently pull or push the top edge of the drawer front to open or close. The smooth sliding rails ensure effortless movement even when drawers are full.
- **Storage Capacity:** Utilize the ample space for various items such as clothing (coats, T-shirts, socks, underwear, pants), cosmetics, and accessories.
- **Detachable Organizer:** The top drawer includes a detachable jewelry and cosmetics organizer. This can be removed or reconfigured to suit your storage needs.



Removable Jewelry & Makeup Organizer

(It does not contain a sponge.)

Image: The dresser with several drawers open, revealing neatly organized clothing items like folded shirts, socks, and pants, demonstrating its large storage capacity.

Hidden Handle

No handle, Anti-bumping



Smooth Slide Rail

Smooth push and pull,
Robust

Image: A close-up view of one of the dresser's top drawers, featuring a clear, removable organizer with compartments designed for jewelry and makeup, keeping small items tidy.

LARGE STORAGE SURFACE

Convenient for placing items



Image: A detailed view highlighting the dresser's hidden handle design for a seamless look and the robust, smooth-sliding rail mechanism that ensures effortless drawer operation.

Top Surface Usage:

The dresser's top surface provides additional space for frequently used items or decorative elements.



Image: The top surface of the dresser, adorned with decorative items, with a measurement overlay indicating its depth of 15.75 inches, suitable for various display or storage needs.

MAINTENANCE AND CARE

Proper care will help maintain the appearance and longevity of your dresser.

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid using harsh chemicals, abrasive cleaners, or polishes that may damage the finish.
- **Spills:** Clean spills immediately with a dry cloth to prevent staining or damage to the wood.
- **Drawer Rails:** Periodically check drawer rails for smooth operation. If they become stiff, a small amount of silicone lubricant can be applied.
- **LED Lights:** The LED lights are designed for long life and require minimal maintenance. If issues arise, refer to the troubleshooting section.
- **Hardware:** Periodically check and tighten all screws and fasteners to ensure the dresser remains stable and secure.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Drawers do not slide smoothly or are misaligned.	Incorrect rail installation; loose screws; obstruction in rail.	Check that drawer rails are installed correctly and are level. Tighten all screws on rails and drawer boxes. Remove any debris from the rails. Ensure drawers are inserted in the correct order as per assembly instructions.
LED lights are not working.	Power connection issue; remote control battery dead; app not paired.	Ensure the LED power adapter is securely plugged into an outlet and the light strip. Check remote control battery and replace if necessary. Re-pair the smart app with the LED lights if using app control.
Dresser feels wobbly or unstable.	Loose fasteners; uneven floor.	Tighten all assembly screws. Ensure the dresser is placed on a flat, level surface. Use furniture levelers if needed. Confirm the anti-tip kit is securely installed.
Missing or damaged parts upon arrival.	Shipping damage; packaging error.	Do not proceed with assembly. Contact Jocoevol customer support immediately with your purchase details and a description of the issue.

PRODUCT SPECIFICATIONS

Feature	Detail
Brand	Jocoevol
Model Name	6 drawer dresser
Item Model Number	W11813
Product Dimensions	15.94"D x 47.24"W x 29.72"H
Color	White
Item Weight	91.9 Pounds
Room Type	Bedroom, Home Office, Living Room, Nursery
Drawer Type	Under Mounted Slide
Assembly Required	Yes
Finish Types	Unfinished (refers to material, not surface finish)
Batteries Required	No (for dresser, but remote for LED may require)
Included Components	Dresser, Installation tools, User Manual

WARRANTY AND CUSTOMER SUPPORT

Jocoevol is committed to providing high-quality products. For specific warranty details regarding manufacturing defects or

missing parts, please refer to the documentation included with your purchase or contact Jocoevol customer support directly.

For assistance with assembly, troubleshooting, or any other product-related inquiries, please contact Jocoevol customer support. You can often find contact information on the product packaging, the brand's official website, or through your point of purchase.

For general inquiries or to explore other products, visit the [Jocoevol Store on Amazon](#).

© 2025 Jocoevol. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question