#### Manuals+

Q & A | Deep Search | Upload

#### manuals.plus /

- iScooter /
- > iScooter iK1 Electric Scooter User Manual Model IK1C

#### iScooter IK1C

# iScooter iK1 Electric Scooter User Manual

Model: IK1C Brand: iScooter

#### INTRODUCTION

This manual provides essential information for the safe operation and maintenance of your iScooter iK1 Electric Scooter. Please read it thoroughly before use and retain it for future reference.



Image: Two iScooter iK1 electric scooters, one black and one pink, showcasing their design.

#### **SAFETY INFORMATION**

Always prioritize safety when operating the electric scooter. Adult supervision is recommended for children aged 6-10. Ensure all riders wear appropriate safety gear, including a helmet and protective pads.

- Weight Limit: Do not exceed 110 pounds (50 kg).
- Age Range: Suitable for children aged 6-10.
- **Battery Warning:** The iK1C kids electric scooter will automatically power off after 5 minutes of inactivity. When the battery is low, a red warning light will flash to alert you.
- Charging Safety: Use only the original charger to charge the battery. The magnetic charging technology is TUV certified anti-touch for enhanced safety.
- **Riding Conditions:** Always ride in safe environments, away from traffic and obstacles. Adhere to local traffic laws and regulations.



Image: Two children riding iScooters, demonstrating appropriate age and safety gear.

# **PACKAGE CONTENTS**

Verify that all items are present in the package:

- iScooter iK1 Electric Scooter x 1
- Charger x 1
- Instruction Manual x 1 (This document)
- Brand Card x 1
- Tool Kit x 1
- Tag x 1

#### **SETUP**

#### **Handlebar Assembly**

- 1. Insert the handlebar stem into the main body of the scooter.
- 2. Align the holes and secure the stem using the provided tools and fasteners from the tool kit.
- 3. Ensure all connections are tight and secure before riding.

Your browser does not support the video tag.

Video: General overview of iScooter models, including assembly and features.

#### **CHARGING**

Before embarking on your first ride, make sure to fully charge your scooter for optimal performance. The iK1 features magnetic charging technology for safe and hassle-free connection.

- 1. Locate the magnetic charging port on the side of the scooter.
- 2. Connect the magnetic charger to the port. It will snap into place upon proximity.
- 3. The charging time is approximately 4.5 hours for a full charge.
- 4. Always unplug the charger when not in use.

# **Innovative & Magnetic Charging**



Image: Illustration of the magnetic charging feature of the iScooter iK1.



Image: The iScooter charger with a safety reminder.

# **OPERATING INSTRUCTIONS**

# **Power On/Off and Speed Modes**

• Power On/Off: Long press the power button to turn the scooter on or off.

- **Speed Modes:** The iK1C offers dual speeds of 4 mph and 6 mph. Press the power button once while the scooter is on to switch between speed modes.
- Non-Zero Start: The scooter adopts a non-zero-start mechanism for safer coasting. The motor will engage after a slight push-off.

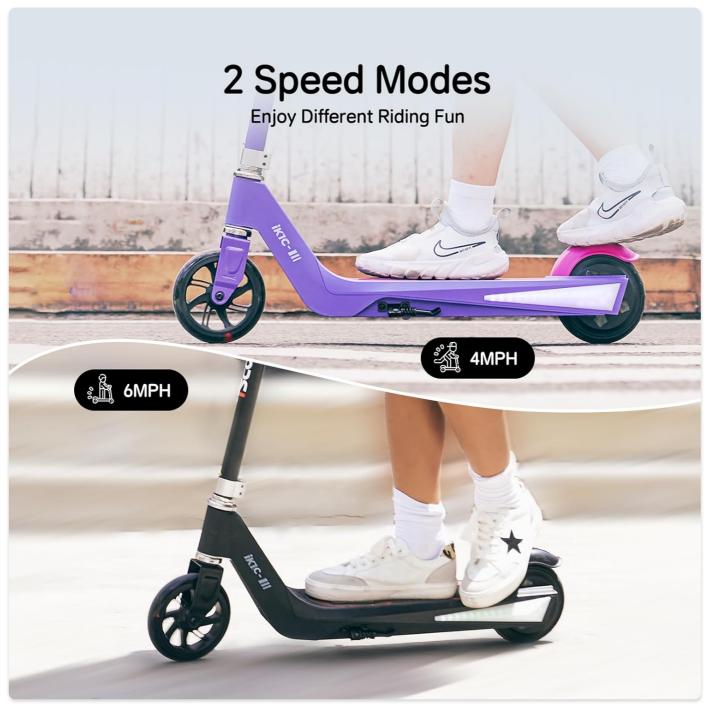


Image: Visual representation of the two speed modes available on the iK1C scooter.

# **Lighting Features**

The iK1 Electric Scooter features 7-color rims and side-board ambient lights for enhanced visibility and a fun riding experience.



Image: The iScooter iK1 showcasing its vibrant colored ambient lights on the wheels and deck.

Your browser does not support the video tag.

Video: A short clip demonstrating the iK1 electric scooter in use, highlighting its features.

#### **A**DJUSTMENTS

#### **Handlebar Height Adjustment**

The iK1C escooter features 3-level height adjustment to accommodate growing children.

- Available heights: 32 inches, 34.5 inches, and 37 inches.
- To adjust, loosen the clamp on the handlebar stem, slide the stem to the desired height, and securely tighten the clamp.



Image: Children with scooters set at different handlebar heights.

# MAINTENANCE

Regular maintenance ensures the longevity and safe operation of your iScooter iK1. Refer to the following guides for common maintenance tasks.

#### **Replacing the Battery**

Your browser does not support the video tag.

Video: Detailed guide on how to disassemble the iK1 scooter and replace the battery.

#### **Replacing the Fender**

Your browser does not support the video tag.

Video: Step-by-step instructions for disassembling and replacing the fender on the iK1 scooter.

#### **Replacing the Front Wheel**

#### Your browser does not support the video tag.

Video: Guide on how to remove and install the front wheel of the iK1 scooter.

#### **Replacing the Ambient Light**

Your browser does not support the video tag.

Video: Instructions for replacing the ambient light strips on the iK1 scooter.

#### **Replacing the Pedal Switch**

Your browser does not support the video tag.

Video: Guide on how to replace the pedal switch component of the iK1 scooter.

#### **S**PECIFICATIONS

Feature	Detail
Model Name	IK1C
Age Range	6-10 years
Weight Limit	110 Pounds
Product Dimensions	23.8"L x 11"W x 27.3"H
Item Weight	12.1 Pounds
Speed Modes	4 mph / 6 mph
Maximum Distance Range	4.3 Miles
Charging Time	4.5 Hours
Handlebar Type	Adjustable (3 levels: 32"/34.5"/37")
Brake Style	Rear Braking
Special Feature	Magnetic charging, Colorful Flashing Wheels & Deck Lights

### WARRANTY & SUPPORT

 
iScooter offers a 360-day or 180-day warranty on different parts of the scooter. For fast and professional service, please contact us:

• Call Center: +1 (855) 916-2366

• Live Chat/Email Support: support@iscooterglobal.com

If you experience any issues, please reach out via your Amazon order page. Our dedicated team is here to help promptly and professionally.

#### Related Documents - IK1C



#### iScooter iK1C/iK1S Electric Scooter for Kids User Manual

Comprehensive user manual for the iScooter iK1C and iK1S electric scooters for kids, covering setup, operation, safety, specifications, and charging.



#### iScooter Electric Scooter Q&A and Troubleshooting Guide

A comprehensive guide to the differences between iScooter electric scooter models and troubleshooting common issues, including speed, range, noise, and error codes.



#### Manual del Usuario iScooter iX6: Guía Completa y Seguridad del Patinete Eléctrico

Descarga el manual completo del iScooter iX6. Encuentra instrucciones detalladas sobre uso, seguridad, mantenimiento, especificaciones técnicas y garantía para tu patinete eléctrico.



#### iScooter W8 Electric Scooter User Manual

Comprehensive user manual for the iScooter W8 electric scooter, including setup, operation, specifications, and safety guidelines. Learn how to assemble, fold, unfold, and charge your iScooter W8.



#### iScooter iK3 Electric Scooter for Kids Owner's Manual

Comprehensive owner's manual for the iScooter iK3 electric scooter for kids, covering safety instructions, assembly, operation, charging, maintenance, and specifications. Learn how to safely operate and care for your iK3 scooter.



#### iScooter F3 User Manual and Specifications

Comprehensive user manual and specifications for the iScooter F3 electric scooter, covering package contents, product overview, quick setup, basic operations, error codes, charging, specifications, and safety information.