



Manuals.plus /

› Coowisty /

› Coowisty CW2 Portable Charger with Wall Plug - Instruction Manual

## Coowisty CW2

# Coowisty CW2 Portable Charger with Wall Plug

## INSTRUCTION MANUAL

### Introduction

Thank you for choosing the Coowisty CW2 Portable Charger. This all-in-one power bank is designed for convenience and efficiency, featuring a foldable AC wall plug, built-in charging cables, and multiple output ports to keep your devices powered on the go. Please read this manual carefully to ensure proper use and to maximize the product's lifespan.

### Product Features

- **Foldable AC Wall Plug and Built-in Cables:** Equipped with a foldable AC wall plug, a built-in USB-C cable, and a built-in Lightning cable (compatible with iPhone devices), eliminating the need for extra adapters and cables.
- **Compact & Travel-Ready Design:** Measuring 5.3 × 2.6 × 0.8 inches and weighing 8.7 oz, its slim profile and foldable plug make it ideal for travel. Features an LED power display for battery status.
- **22.5W Ultra-Fast Charging:** The USB-A port delivers 22.5W output, capable of charging compatible phones from 0% to 50% in approximately 25 minutes.
- **Multiple Charging Modes:** Recharge the power bank via the foldable AC wall plug, USB-C input, or USB-A input. Supports pass-through charging, allowing simultaneous charging of the power bank and connected devices.
- **Premium Safety with 5-Layer Protection:** High-quality lithium-ion cells and an intelligent chip provide protection against overcharge, overvoltage, overcurrent, short circuits, and overheating.
- **Universal Compatibility:** Seamlessly compatible with iPhones, Android phones, tablets, and other USB-powered devices.

### Setup

Before initial use, fully charge your Coowisty CW2 Portable Charger. This ensures optimal battery performance and longevity.



Image: The Coowisty CW2 Portable Charger, highlighting its foldable wall plug and integrated cables for convenience.

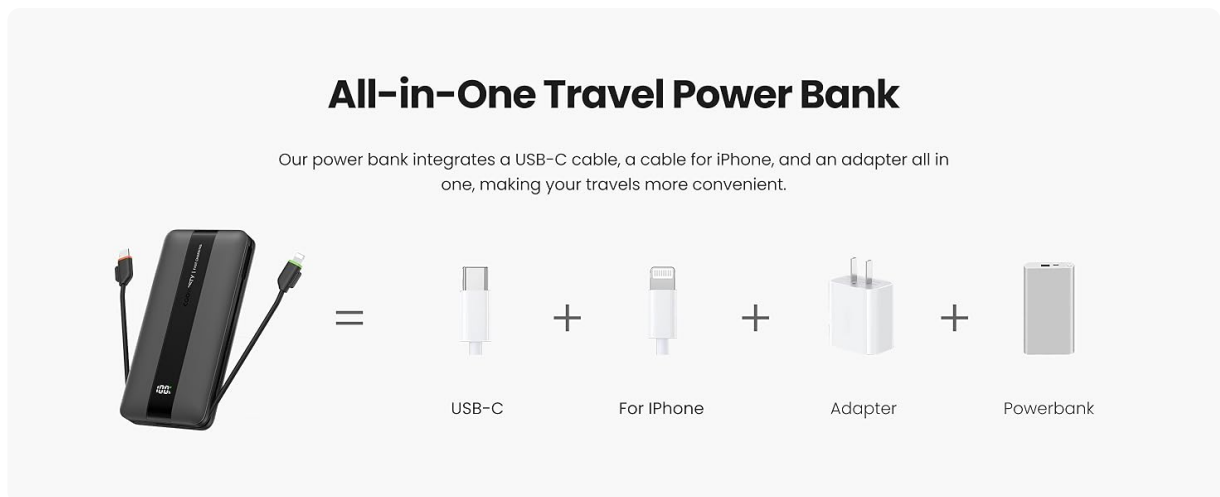 


Image: A visual breakdown of the Coowisty CW2's integrated features, including USB-C, Lightning, adapter, and power bank.

## Operating Instructions

### Checking Battery Level

Press the power button once to activate the LED display, which shows the remaining battery percentage.

### Charging the Power Bank

The Coowisty CW2 offers three methods for recharging:

1. **Via Foldable AC Wall Plug:** Flip out the integrated AC prongs and plug the power bank directly into a wall outlet.
2. **Via USB-C Input:** Connect a USB-C cable to the USB-C input port on the power bank and to a compatible power source.
3. **Via USB-A Input:** Connect a USB-A cable to the USB-A input port on the power bank and to a compatible power source.

## 3 Ways to Recharge the Power Bank



Image: Illustration of the three ways to recharge the power bank: using the built-in wall plug, a USB-C port, or a USB-A port.

### Charging External Devices

Connect your devices to the power bank using one of the following methods:

- **Built-in USB-C Cable:** Pull out the integrated USB-C cable and connect it to your USB-C compatible device.
- **Built-in Lightning Cable:** Pull out the integrated Lightning cable and connect it to your iPhone or other Lightning-compatible device.
- **USB-A Output Port:** Use your device's own USB-A cable and plug it into the USB-A output port on the power bank.
- **USB-C Output Port:** Use your device's own USB-C cable and plug it into the USB-C output port on the power bank.

The power bank supports charging up to four devices simultaneously. Note: The built-in USB-C cable ceases to function when the AC plug is in use.

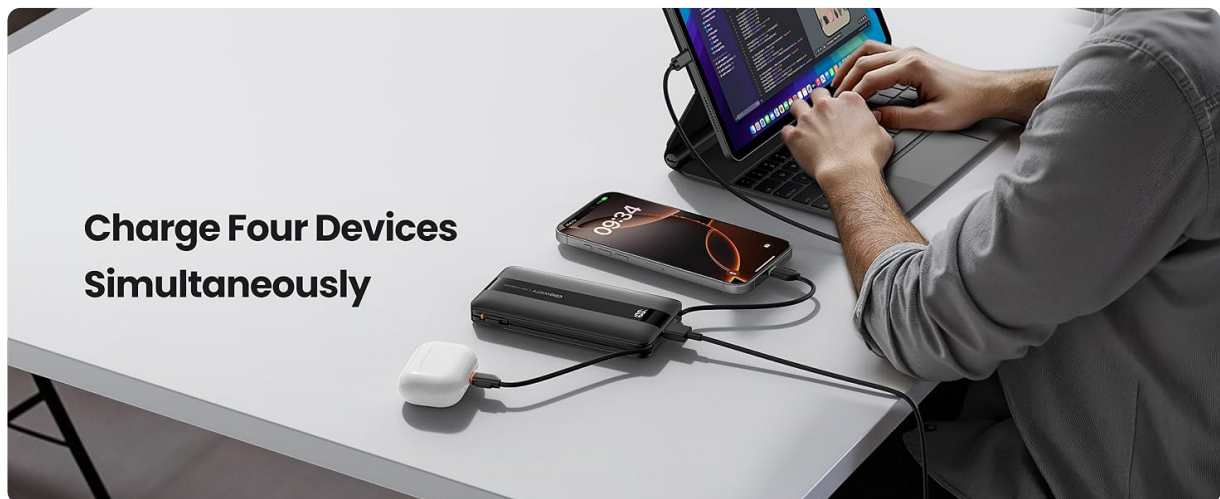 


Image: The Coowisty CW2 Portable Charger connected and charging multiple devices at once, demonstrating its versatility.

### Safety Information

The Coowisty CW2 Portable Charger incorporates an intelligent chip with 5-layer protection to ensure safe charging for all your devices:

- Overcharge Protection
- Overvoltage Protection
- Overcurrent Protection
- Short Circuit Protection
- Overheating Protection

To maintain safety and performance:

- Avoid dropping, disassembling, or attempting to repair the device.
- Keep away from extreme temperatures, direct sunlight, and liquids.
- Do not use if the device is damaged or swollen.
- Dispose of the product responsibly according to local regulations.

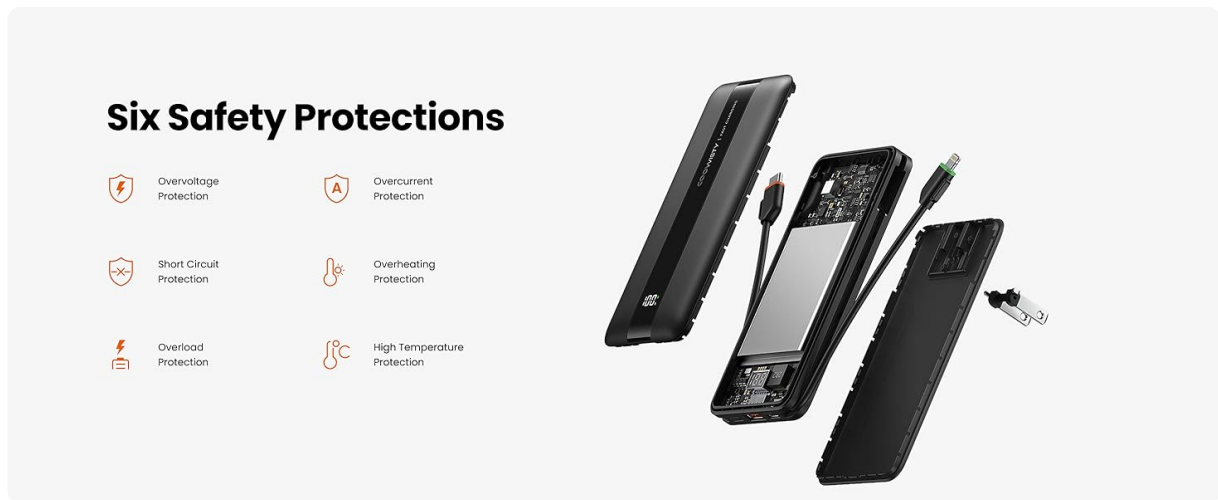 


Image: Visual representation of the multiple safety features built into the power bank, including protection against overvoltage, overcurrent, short circuit, overheating, and overload.

## Maintenance

- Clean the device with a soft, dry cloth. Do not use harsh chemicals or abrasive materials.
- Store the power bank in a cool, dry place when not in use.
- For optimal battery health, fully charge and discharge the power bank at least once every three months if stored for extended periods.

## Troubleshooting

- **Device not charging:** Ensure the power bank is charged. Check all cable connections. Try a different cable or port.
- **Slow charging:** Verify that your device supports fast charging and that the correct port (e.g., 22.5W USB-A) is being used. Ensure the cable is not damaged.
- **LED display not working:** Press the power button to activate the display. If it remains off, the battery may be fully depleted or the device may require service.

## Specifications

Product Dimensions	5.31 x 2.55 x 0.84 inches
Item Weight	9.9 ounces
Battery Capacity	10500 Milliamp Hours
Output Power	22.5W (USB-A)
Input/Output Ports	USB Type A, USB Type C
Special Features	Built-in Cable, Built-in Wall Plug, Digital Display, Fast Charging, Slim

## Warranty and Support

---

Coowisty offers a **24-Month Replacement Promise** for this product. For any issues or support inquiries, please refer to the contact information provided with your purchase or visit the official Coowisty website.