

AOOSTAR WTR PRO

AOOSTAR WTR PRO AMD Ryzen 7 5825u 4 Bay NAS Mini PC User Manual

Model: WTR PRO

1. INTRODUCTION

Welcome to the user manual for your AOOSTAR WTR PRO AMD Ryzen 7 5825u 4 Bay NAS Mini PC. This document provides essential information for setting up, operating, maintaining, and troubleshooting your device. Please read this manual thoroughly before using the product to ensure optimal performance and longevity. The AOOSTAR WTR PRO is a versatile mini PC designed for various applications, including Network Attached Storage (NAS), home server, and desktop computing. It features an AMD Ryzen 7 5825U processor, support for multiple storage drives, and extensive connectivity options.

2. PRODUCT OVERVIEW

2.1 Key Features

- **Processor:** AMD Ryzen 7 5825U (8 Cores, 16 Threads, up to 4.5 GHz) with integrated Radeon Vega graphics.
- **Storage Bays:** 4 x 3.5" SATA bays (up to 22TB each) for NAS functionality.
- **M.2 Slots:** 2 x M.2 2280-NVMe slots for high-speed storage.
- **RAM:** Dual-channel DDR4 3200MHz RAM support (2 slots, up to 64GB).
- **Video Output:** Triple 4K display support via DP1.4 (144Hz), HDMI 2.1, and Type-C.
- **Network:** 2 x 2.5G LAN ports.
- **Connectivity:** 2 x USB 3.0, 2 x USB 2.0, 1 x 3.5mm Audio Jack, 1 x Micro SD Card Port, Type-C (100W power supply support).
- **Cooling:** Efficient cooling system with a 12CM fan and dustproof design.
- **Power Consumption:** Low power consumption (15W - 25W).

2.2 Component Identification

Familiarize yourself with the external and internal components of your AOOSTAR WTR PRO Mini PC.



Figure 1: Front view of the AOOSTAR WTR PRO Mini PC with the magnetic cover removed, revealing the four 3.5-inch drive bays. The "WTR PRO" logo is visible at the bottom.



Figure 2: Rear panel connectivity of the AOOSTAR WTR PRO. Ports include 2x USB 3.0, 2x USB 2.0, 1x DisplayPort, 1x HDMI, 2x 2.5G LAN, 1x Type-C, 1x Micro SD slot, 1x 3.5mm Audio Jack, and DC power input.

High Performance + Low Power Notebook

DDR4 3200Mhz RAM, Up to 32GB.

Rich configuration and powerful performance, to meet the user's needs for filesafe storage, backup, and more application functions.



Figure 3: Internal view of the AOOSTAR WTR PRO, illustrating the two DDR4 RAM slots and two M.2 NVMe SSD slots. The four 3.5-inch SATA drive bays are also visible.

3. SETUP GUIDE

3.1 Installing RAM and M.2 NVMe SSDs

The AOOSTAR WTR PRO is shipped without RAM or SSDs. Follow these steps to install them:

1. Carefully open the chassis to access the internal components.
2. Locate the two DDR4 SO-DIMM slots. Insert RAM modules firmly until the clips secure them.
3. Identify the two M.2 2280-NVMe slots. Insert your M.2 SSDs at an angle and secure them with the provided screw.
4. Ensure all components are seated correctly before proceeding.

3.2 Installing 3.5" SATA Hard Drives

The device supports up to four 3.5" SATA hard drives.

1. Open the front magnetic cover to reveal the drive bays.
2. Slide out an empty drive tray.
3. Mount your 3.5" SATA HDD onto the tray using the provided screws.
4. Carefully slide the tray back into the bay until it clicks into place.
5. Repeat for additional drives.

Large 90T Storage Capacity

Supports 4*22T 3.5" SATA HDD, M.2 slot supports up to 2T.
External Storage Expansion: Supports connection of hard disk cabinets, USB flash drives, etc.



Figure 4: The AOOSTAR WTR PRO showcasing its large storage capacity with four 3.5-inch SATA HDDs and M.2 SSDs.

3.3 Connecting Peripherals

1. **Power:** Connect the power adapter to the DC input port and then to a power outlet.
2. **Display:** Connect your monitor(s) to the HDMI, DisplayPort, or Type-C video output ports. The device supports up to three 4K displays simultaneously.
3. **Network:** Connect an Ethernet cable from your router/switch to one of the 2.5G LAN ports.
4. **USB Devices:** Connect your keyboard, mouse, and other USB peripherals to the available USB 2.0 or USB 3.0 ports.

4. OPERATING INSTRUCTIONS

4.1 Power On/Off

- **Power On:** Press the power button located on the front panel. The power indicator light will illuminate.
- **Power Off:** Perform a proper shutdown through your operating system. Alternatively, press and hold the power button for 5 seconds to force a shutdown.
- **Wake on LAN (WOL):** The Mini PC supports WOL. Ensure this feature is enabled in the BIOS/UEFI settings and your network adapter properties for remote wake-up.

4.2 Operating System Installation

The AOOSTAR WTR PRO is compatible with various operating systems, including Windows 11 Pro, Linux, and other server operating systems. You will need to install your preferred operating system onto an M.2 NVMe SSD or a SATA HDD. Refer to your chosen operating system's installation guide for detailed steps.

4.3 NAS Functionality

With its four drive bays, the WTR PRO is ideal for Network Attached Storage (NAS) setups. You can install NAS-specific operating systems like TrueNAS, Unraid, or FreeNAS to manage your storage, create RAID configurations, and share files across your network.

Your browser does not support the video tag.

Video 1: An overview of the AOOSTAR WTR PRO Mini PC, highlighting its features and potential uses as a NAS or mini PC.

4.4 Multi-Display Setup

The Mini PC supports connecting up to three 4K displays simultaneously. Connect your monitors to the available HDMI, DisplayPort, and Type-C video outputs. Configure your display settings within your operating system to extend or duplicate your desktop across multiple screens.

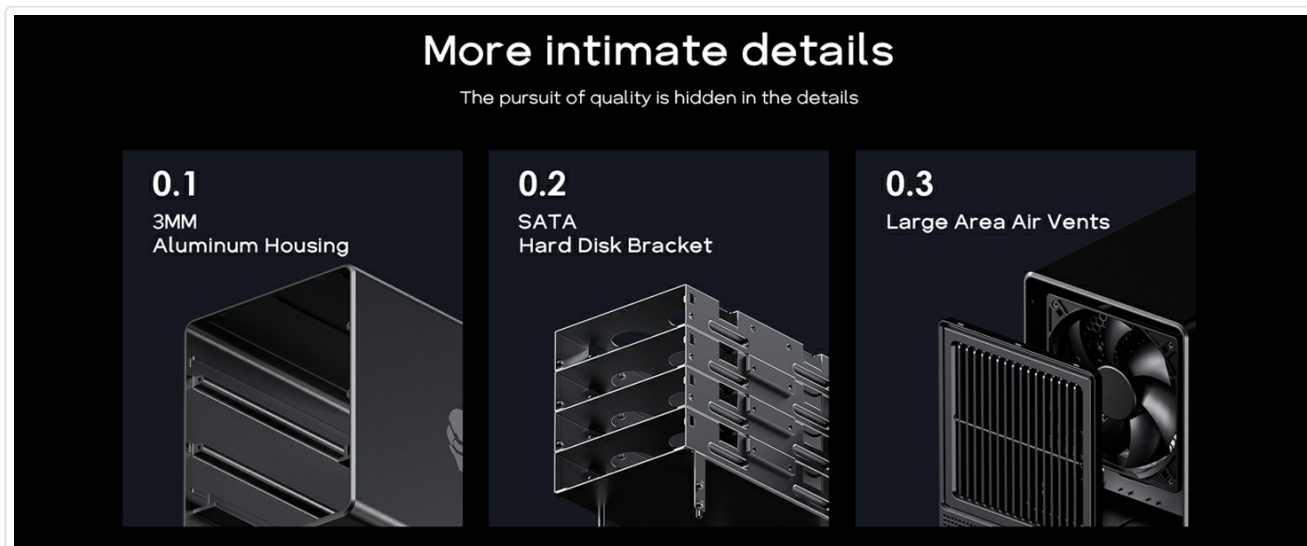


Figure 5: The AOOSTAR WTR PRO Mini PC configured with a triple 4K display setup, suitable for multitasking and enhanced productivity.

5. MAINTENANCE

5.1 Cleaning

To ensure optimal cooling and prevent dust buildup, regularly clean the exterior of the Mini PC and the ventilation grilles.

- Use a soft, dry cloth to wipe down the exterior.
- For ventilation grilles, use a can of compressed air to gently remove dust. Ensure the device is powered off and unplugged before cleaning.
- Avoid using liquid cleaners directly on the device.

Large silent Fan

Pass-through construction + large 12 CM cooling fan accelerates heat to unleash greater performance!

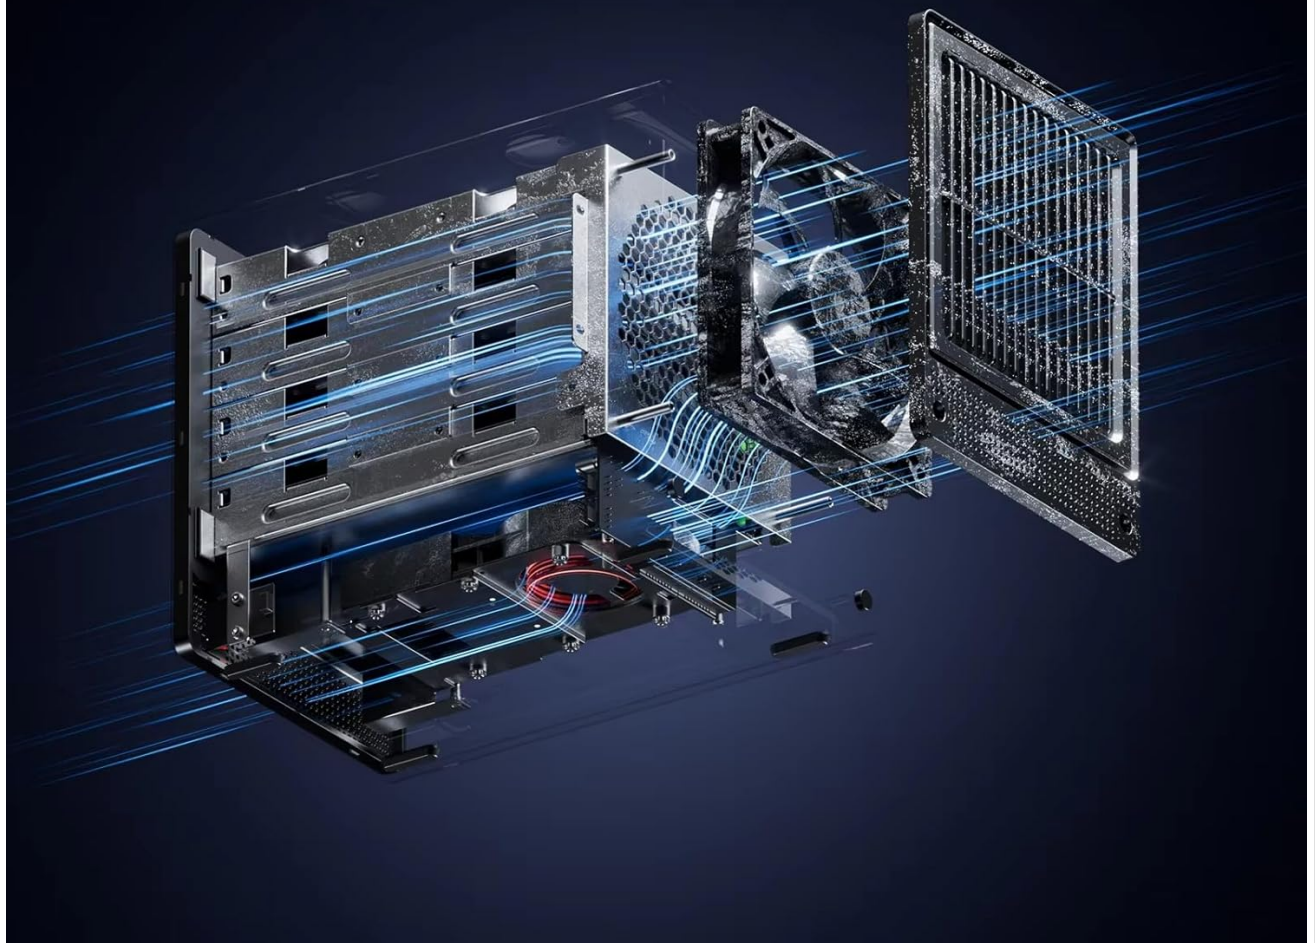


Figure 6: Internal cooling system of the AOOSTAR WTR PRO, highlighting the 12CM fan and airflow path for efficient heat dissipation.

5.2 Environmental Considerations

Operate the Mini PC in a well-ventilated area, away from direct sunlight, heat sources, and excessive moisture. Ensure adequate space around the device for proper airflow.

6. TROUBLESHOOTING

If you encounter issues with your AOOSTAR WTR PRO, refer to the following common troubleshooting steps:

- **No Power:**

- Ensure the power adapter is securely connected to both the device and a working power outlet.
- Verify the power button is pressed correctly.
- **No Display Output:**
 - Check all display cable connections (HDMI, DisplayPort, Type-C).
 - Ensure your monitor is set to the correct input source.
 - If using multiple displays, try connecting only one display at a time.
- **Hard Drive Overheating:**
 - Ensure the device is in a well-ventilated area.
 - Verify that the internal fan is operating correctly and not obstructed by dust.
 - Consider reducing the number of active drives or improving ambient cooling if temperatures remain high.
- **Network Connectivity Issues:**
 - Check Ethernet cable connections.
 - Verify your router/switch is functioning correctly.
 - Ensure network drivers are properly installed in your operating system.
- **System Instability:**
 - Ensure RAM and SSDs are correctly installed and seated.
 - Update your operating system and device drivers to the latest versions.

If the issue persists, please contact AOOSTAR customer support for further assistance.

7. SPECIFICATIONS

Brand aoostar		Wireless NET	
WTR Pro		2*2.5G LAN Ports+WIFI 6 (Wireless WIFI card not included) +Bluetooth 5.2	
CPU		OS	
AMD Ryzen 7 5825U (2.0Ghz–4.5Ghz)		Support for linux,istoreos, windows and other systems	
ROM		Connector	
dual DDR4–3200MHz Up to 64G RAM		USB3.0x2 USB2.0x2 HDMI2.1x1 DPx1 Full–featured Type–Cx1 TF card slot x 1 2.5G LAN ports x 2 audio interface x 1	
SSD		Power	
M.2 2280–NVMEx2 3.5 SATAx4		120W 19V–6.32A	
GPU		Size	Weights
【AMD Radeon Graphics】 2000 MHz		22.8cm*15cm*18.5cm	5.0KG

Figure 7: Detailed technical specifications of the AOOSTAR WTR PRO Mini PC.

AOOSTAR WTR PRO Technical Specifications

Feature	Detail
Brand	AOOSTAR
Model Name	WTR PRO 5825U
Processor	AMD Ryzen 7 5825U (8 Cores, 16 Threads, 2.0 GHz Base, 4.5 GHz Max Boost)
Graphics	Integrated Radeon Vega Graphics (2000 MHz Graphics Clock)
RAM Type	DDR4 3200MHz (Dual Channel, 2 slots, up to 64GB)
Storage Bays	4 x 3.5" SATA (up to 22TB each)
M.2 Slots	2 x M.2 2280-NVMe (up to 4TB total)

Feature	Detail
Video Output	1 x HDMI 2.1, 1 x DisplayPort 1.4 (4K@144Hz), 1 x Type-C (Triple 4K Display Support)
LAN Ports	2 x 2.5G LAN
USB Ports	2 x USB 3.0, 2 x USB 2.0
Other Ports	1 x 3.5mm Audio Jack, 1 x Micro SD Card Port, 1 x DC Power Input
Operating System Compatibility	Windows 11 Pro, Linux, etc.
Dimensions (LxWxH)	7.3 x 5.9 x 9 inches (18.5 x 15 x 22.8 cm)
Item Weight	11 pounds (5.0 KG)

8. WARRANTY AND SUPPORT

8.1 Warranty Information

AOOSTAR provides 12 months of after-sales service from the date of purchase. Please retain your proof of purchase for warranty claims.

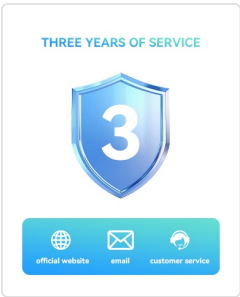


Figure 8: AOOSTAR's commitment to service. (Note: Product description states 12 months, A+ content image shows "THREE YEARS OF SERVICE".)

8.2 Customer Support

For any questions or issues regarding your AOOSTAR WTR PRO Mini PC, you can contact customer support through the following methods:

- **Amazon Support:** Log in to your Amazon account, check your order, and click "Get Help" to request support for this product.
- **Email Support:** Send your inquiries to the official after-sales email address:aoostar-shop@outlook.com.
- **Online Customer System:** Contact us using the desktop client. If the after-sales service system client is not installed, you can reach out via email or Amazon, and they will provide the client.

Please contact us on AMAZON

Log in with your Amazon account to check your order and click "Get Help." Here, you can request support for this product.

Please contact us via the after-sales email

Please send your questions to the following email address:
aostar-shop@outlook.com

Communication through the online customer system

Please contact us using the desktop client. If the after-sales service system is not installed, please reach out via email or Amazon, and we will send you the client.

© 2025 AOOSTAR. All rights reserved.


 <p>Printables</p> <p>Top shell for AooStar GODxx, Tian Bei MN5X, MN18A and clone mini PCs</p> <p>Download</p> <p>Summary</p> <p>Information page and file</p> <p>Options > Categories</p> <p>Tags</p> <p>This is a custom top shell for AooStar GODxx and Tian Bei MN5X and MN18A mini PCs, and providing other shells that use the same model.</p> <p>There is another GODxx and Tian Bei MN5X shell, which is made of acrylic, so when you print the top of the AooStar GODxx, it can be used to replace the shell, which is made of acrylic, and it can be used to replace the shell.</p> <p>When using the top of a mini PC, please make sure that the shell is not too tight, and it can be used to replace the shell.</p> <p>For detailed custom top shell, please see the description.</p>	<p>Custom 3D Printable Top Shell for AooStar and Tian Bei Mini PCs</p> <p>Enhance the cooling performance of your AooStar GODxx, Tian Bei MN5X, MN18A, and clone mini PCs with this custom 3D printable top shell. Designed to improve ventilation and reduce thermal throttling, it offers various height and cutout options for optimal airflow and quieter operation.</p>
	<p>AOOSTAR MN78 Mini PC User Manual</p> <p>Comprehensive user manual for the AOOSTAR MN78 Mini PC, covering setup, operation, environment, installation, and warranty information.</p>
<p>Vollwertiger Mini-PC in Handlängsgröße mit Intel N100:</p> <p>Aoostar T8 Mini-PC</p> <p>Intel N100</p> <p>Das Aoostar T8 ist ein Mini-PC mit Intel N100 und 8 GB RAM. Es ist ein vollwertiger Mini-PC, der in Handlängsgröße ist. Es ist ein vollwertiger Mini-PC, der in Handlängsgröße ist. Es ist ein vollwertiger Mini-PC, der in Handlängsgröße ist.</p>	<p>Aoostar T8 Mini-PC im Test: Kompakter Rechner mit Intel N100</p> <p>Umfassender Testbericht zum Aoostar T8 Mini-PC. Erfahren Sie mehr über die kompakte Bauweise, die Ausstattung und die Leistung des Intel N100 Prozessors.</p>
 <p>MINI PC 製品マニュアル User manual</p>	<p>AOOSTAR GEM12 Max Mini PC User Manual & Specifications</p> <p>Comprehensive user manual for the AOOSTAR GEM12 Max Mini PC (R7 8845HS). This guide provides detailed information on unpacking, product interfaces, operating environment, important precautions, troubleshooting slow boot issues, and warranty terms.</p>



NOTES

[HP EliteBook 645 G9 Maintenance and Service Guide](#)

Detailed maintenance and service guide for the HP EliteBook 645 14 inch G9 Notebook PC, covering component identification, removal and replacement procedures, troubleshooting, specifications, and setup.

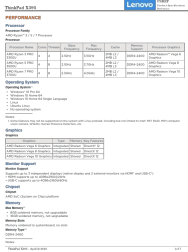

[Lenovo ThinkPad X395 Product Specifications](#)

Detailed specifications for the Lenovo ThinkPad X395 laptop, covering performance, design, connectivity, security, and service information. Features AMD Ryzen processors, integrated AMD Radeon graphics, and various display and storage options.