

[Manuals.plus](#) /

› [KYBOLT](#) /

› KYBOLT 10x10 Ft Aluminum Pergola User Manual

KYBOLT 308BUC3PC61IrEQT2TJJqQbMbj

KYBOLT 10x10 Ft Aluminum Pergola User Manual

Model: 308BUC3PC61IrEQT2TJJqQbMbj

INTRODUCTION

Thank you for choosing the KYBOLT 10x10 Ft Aluminum Pergola. This manual provides essential information for the safe assembly, operation, and maintenance of your new outdoor structure. Please read this manual thoroughly before beginning assembly and retain it for future reference.



Image: The KYBOLT 10x10 Ft Aluminum Pergola, featuring a wood-grain finish and a retractable gray canopy, installed on a wooden deck. The pergola shades a seating area with wicker furniture, and a golden retriever rests nearby.

SAFETY INFORMATION

- Ensure all components are present and undamaged before assembly. Do not proceed with assembly if any parts are missing or broken.
- Assembly requires at least two adults.

- Wear appropriate safety gear, such as gloves and eye protection, during assembly.
- Choose a level and stable surface for installation. Secure the pergola to the ground using appropriate anchoring methods to prevent tipping in windy conditions.
- Do not hang heavy objects from the pergola frame.
- Retract the canopy during strong winds, heavy rain, or snow to prevent damage.
- Keep children and pets away from the assembly area.

PARTS LIST

Before starting assembly, verify that all parts listed below are included in your package. Refer to the assembly diagram for visual identification of each component.

OUTDOOR PERGOLA

10FT x 10FT



Image: A detailed diagram illustrating the overall dimensions of the KYBOLT 10x10 Ft Aluminum Pergola. Key measurements are provided in both inches and centimeters, showing the height, width, and depth of the structure.

Note: A complete list of fasteners and small components will be provided in the detailed assembly instructions included in your product packaging.

SETUP AND ASSEMBLY

Follow these steps carefully for proper assembly. It is recommended to have at least two people for this

process.

1. **Prepare the Site:** Choose a flat, level, and stable area for installation. Clear any debris or obstacles.
2. **Unpack Components:** Carefully unpack all boxes and lay out the components. Identify each part using the provided parts list and diagrams.
3. **Assemble Posts and Beams:** Connect the vertical posts to the horizontal beams according to the visual guide. Ensure all connections are secure.
4. **Install Base Columns:** Attach the upgraded base columns to the bottom of each post. These bases are designed for enhanced stability.



UPGRADED BASE COLUMN DESIGN

Reinforced on all four sides for comprehensive stability
increasing stability by 50%

Image: A close-up view of the upgraded base column design for the pergola. The image highlights the reinforced four-sided anchoring system, demonstrating how the post is secured to the base for increased stability.

5. **Secure the Frame:** Once the main frame is assembled, ensure all bolts and fasteners are tightened. The aluminum frame features a wood-grain finish and is powder-coated for durability.



Image: A detailed view of the pergola's wood-grain aluminum frame. The image emphasizes three key features: its wood appearance, all-aluminum material, and powder coating reinforcement, indicating durability and aesthetic appeal.

6. **Install Retractable Canopy:** Attach the retractable canopy system to the top beams. Follow the specific instructions for threading and securing the canopy fabric.

RETRACTABLE CANOPY

Easy to slide and control the shaded area



Image: A close-up of the retractable canopy mechanism, illustrating the sliding function. Arrows indicate the direction of movement, demonstrating how the canopy can be easily adjusted to control the shaded area.

7. **Anchor the Pergola:** Securely anchor the pergola to the ground using appropriate hardware (not always included, depending on surface type). This is critical for stability, especially in windy conditions.



Image: The KYBOLT 10x10 Ft Aluminum Pergola, featuring a wood-grain finish and a retractable gray canopy, installed on a paved patio. The pergola shades a seating area with two wicker chairs and a small table.

OPERATING THE RETRACTABLE CANOPY

The KYBOLT pergola features a retractable canopy for adjustable shade.

- To extend the canopy, gently pull the fabric outwards from the frame until it reaches the desired position.
- To retract the canopy, push the fabric inwards towards the frame. The canopy is designed to slide smoothly along the tracks.
- Always retract the canopy during strong winds, heavy rain, or snow to prevent damage to the fabric and

frame.

MAINTENANCE

Regular maintenance will extend the life and appearance of your pergola.

- **Cleaning the Frame:** Clean the aluminum frame with a mild soap and water solution. Rinse thoroughly with clean water and dry with a soft cloth. Avoid abrasive cleaners or harsh chemicals.
- **Cleaning the Canopy:** The canopy fabric can be cleaned with a soft brush and mild soap and water. Allow it to air dry completely before retracting or storing.
- **Inspecting Connections:** Periodically check all bolts and fasteners to ensure they remain tight. Re-tighten as necessary.
- **Winter Care:** In areas with heavy snow, it is recommended to retract and secure the canopy, or remove it entirely, to prevent snow accumulation and potential damage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Pergola feels unstable.	Loose fasteners; inadequate anchoring; uneven ground.	Check and tighten all bolts. Ensure the pergola is properly anchored to a level surface.
Canopy is difficult to retract/extend.	Debris in tracks; misaligned fabric; damaged mechanism.	Clean tracks of any dirt or debris. Check if fabric is properly aligned. If mechanism is damaged, contact customer support.
Water pooling on canopy.	Canopy not fully extended or pitched correctly.	Ensure canopy is fully extended and taut. Adjust tension if possible. Retract canopy during heavy rain.

SPECIFICATIONS

Brand: KYBOLT

Model Number: 308BUC3PC61IrEQT2TJJqQbMbJ

Product Dimensions: 152.5L x 42.5W x 25H Centimetres (Approx. 10x10 Ft footprint)

Item Weight: 88.63 Pounds (Approx. 40.2 kg)

Frame Material: Aluminum (Wood-Grain Finish)

Style: Wood-Grain Aluminum Pergola with Retractable Canopy

ASIN: B0F9WL7C35

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your product packaging or contact KYBOLT customer service directly. Keep your purchase receipt as proof of purchase.

Customer Support: Please refer to the contact information provided on the product packaging or the seller's website for assistance with parts, assembly, or warranty claims.

© 2025 KYBOLT. All rights reserved.