

Kisonli G103

Kisonli G103 Wooden Retro Portable Speaker Instruction Manual

Model: G103

INTRODUCTION

Thank you for purchasing the Kisonli G103 Wooden Retro Portable Speaker. This speaker combines a classic aesthetic with modern audio technology, offering versatile playback options and powerful sound. Please read this manual carefully before using the product to ensure proper operation and to maximize your listening experience. Keep this manual for future reference.

SAFETY INFORMATION

- Do not expose the speaker to water or excessive moisture. This product is not water-resistant.
- Avoid placing the speaker near heat sources, such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Use only attachments/accessories specified by the manufacturer.
- Clean only with a dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

PACKAGE CONTENTS

Please check that all items are present:

- Kisonli G103 Wooden Retro Portable Speaker
- Power Cable (for charging)
- Instruction Manual (this document)

PRODUCT OVERVIEW

The Kisonli G103 speaker features a classic wooden design with a 20W internal speaker for clear and powerful audio. It supports multiple input sources and is designed for portability.



Image 1: Front view of the Kisonli G103 speaker, showcasing its wooden finish and central speaker grille with the Kisonli logo.



Image 2: Top view of the Kisonli G103 speaker, highlighting the control panel with the rotary volume knob and input ports.



Image 3: Angled view of the Kisonli G103 speaker, showing its compact size and retro design with small feet.



Image 4: Diagram illustrating the internal 3.5-inch, 20W horn speaker, emphasizing its powerful sound capabilities including super volume, echo sound, and shock bass.

SETUP

1. Initial Charging

Before first use, it is recommended to fully charge the speaker. Connect the provided power cable to the charging port on the speaker and plug the other end into a suitable power source (e.g., USB wall adapter, computer USB port). The charging indicator light will illuminate. Once fully charged, the light may change color or turn off.

2. Placement

Place the speaker on a stable, flat surface. Its tabletop design ensures optimal sound projection in most environments. Avoid placing it in enclosed spaces that might obstruct sound or ventilation.

OPERATING INSTRUCTIONS



Image 5: Close-up of the speaker's control panel, showing the rotary volume knob and various function buttons for easy operation.

1. Power On/Off

- To power on: Press and hold the Power button (usually integrated with the Mode button or a dedicated button) for a few seconds until an indicator light illuminates or an audible prompt is heard.
- To power off: Press and hold the Power button again for a few seconds.

2. Volume Control

The speaker features a prominent rotary knob for volume adjustment. Turn the knob clockwise to increase the volume and counter-clockwise to decrease it.

3. Mode Selection

The Kisonli G103 supports multiple playback modes:

- **USB Flash Drive Mode:** Insert a USB flash drive containing MP3 audio files into the USB port. The speaker should automatically switch to USB mode and begin playback.
- **TF Card Mode:** Insert a TF (MicroSD) card containing MP3 audio files into the TF card slot. The speaker should automatically switch to TF card mode and begin playback.
- **AUX Mode:** Connect an external audio device (e.g., smartphone, tablet, laptop) to the 3.5mm AUX input port using a 3.5mm audio cable (not included). Use the Mode button to switch to AUX mode if it doesn't switch automatically.

Press the "M" (Mode) button on the control panel to cycle through available input modes (USB, TF, AUX).



Image 6: Rear panel of the Kisonli G103 speaker, showing the USB port, TF card slot, and AUX input for various connectivity options.

4. Playback Controls

Use the buttons on the control panel for playback management:

- **Play/Pause:** Press the Play/Pause button (often indicated by a triangle/two vertical bars icon) to start or pause playback.
- **Next Track:** Press the "Next" button (often indicated by a double arrow or skip icon) to skip to the next track.
- **Previous Track:** Press the "Previous" button (often indicated by a double arrow or skip icon) to go back to the beginning of the current track or to the previous track.

CHARGING THE BATTERY

The Kisonli G103 speaker has a built-in 1800mAh rechargeable battery, providing approximately 2-8 hours of wireless playback depending on volume levels and usage. To charge the speaker:

1. Connect the small end of the provided power cable to the charging port on the speaker.
2. Connect the larger USB end of the cable to a USB power adapter (e.g., smartphone charger, computer USB port) or a power bank.
3. The charging indicator light will show the charging status. Refer to the speaker's specific indicator behavior (e.g., red light for charging, off/blue for full).
4. A full charge typically takes a few hours.

The speaker can also be used while connected to a power source via the power cable.

SPECIFICATIONS

Feature	Description
Brand	Kisonli
Model Name	G103
Max Speaker Output Power	20 Watts
Connectivity Technology	USB, AUX
Audio Output Mode	Stereo (2.0 Channel)
Mounting Type	Tabletop
Material	Wood
Speaker Type	Portable
Recommended Uses	Smartphones, Tablets, Computers, TVs, Music Players
Compatible Devices	Tablet, Laptop, MP3 Player, Smartphone
Water Resistant	No
Control Method	Manual (Rotary Knob, Buttons)
Specific Product Uses	Portable Personal Audio, Home/Office Decor
Battery Life	2-8 hours (depending on usage)
Battery Capacity	1800 mAh
Included Components	Power Cable
Product Dimensions (D x W x H)	30 cm x 19 cm x 17 cm
Item Weight	1020 grams
Power Source	Corded Electric, Battery Powered

TROUBLESHOOTING

- **No Power:**
 - Ensure the speaker is charged. Connect it to a power source using the provided cable.
 - Press and hold the Power button for a few seconds to ensure it's properly turned on.
- **No Sound:**
 - Check the volume level on both the speaker and the connected device (if using AUX).
 - Ensure the correct input mode (USB, TF, AUX) is selected. Press the "M" button to cycle through modes.
 - If using USB or TF card, ensure the audio files are in a compatible format (e.g., MP3) and the storage device is properly inserted.
 - If using AUX, ensure the 3.5mm audio cable is securely connected to both the speaker and the external device.
- **Distorted Sound:**

- Reduce the volume on both the speaker and the connected device.
- Ensure the audio source file is not corrupted or of low quality.
- **Speaker Not Responding:**
 - Try turning the speaker off and then on again.
 - If the issue persists, allow the battery to fully discharge and then recharge it.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the speaker. Do not use liquid cleaners or abrasive materials.
- **Storage:** When not in use for extended periods, store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Recharge it regularly, even if not in constant use.
- **Avoid Impact:** Handle the speaker with care to prevent physical damage.

WARRANTY AND SUPPORT

According to the product specifications, this item is provided without a warranty. For any issues or inquiries, please contact your retailer or the point of purchase for assistance.