

[Manuals.plus](#) /

› [WLIVE](#) /

› WLIVE 54-inch Wide 9-Drawer Dresser and TV Stand (Model ASNG145DHS2) Instruction Manual

WLIVE ASNG145DHS2

WLIVE 54-inch Wide 9-Drawer Dresser and TV Stand

Model: ASNG145DHS2 | Brand: WLIVE

INTRODUCTION

Thank you for choosing the WLIVE 54-inch Wide 9-Drawer Dresser and TV Stand. This versatile furniture piece is designed to provide ample storage and serve as a stable platform for televisions up to 65 inches. Constructed with a sturdy metal frame, a durable wood top, and nine fabric drawers, it offers a practical and organized solution for your bedroom or living space. This manual provides essential information for assembly, operation, maintenance, and troubleshooting to ensure safe and effective use of your product.



Image: The WLIVE dresser functioning as a TV stand, showcasing its rustic brown finish and nine fabric drawers.

SAFETY INFORMATION

Please read and understand all safety instructions before assembly and use. Failure to follow these instructions may result in injury or damage to the product.

- **Anti-Tilt Device:** Always install the included anti-tilt device to securely fix the dresser to the wall. This prevents accidental tipping, especially important in households with children or pets.
- **Weight Capacity:** The dresser is designed to bear up to 160 lbs (72.5 kg) on its top surface. Do not exceed this weight limit to maintain stability and prevent damage.
- **Stable Placement:** Ensure the dresser is placed on a flat, level surface. Use the adjustable feet to stabilize the unit and prevent wobbling.
- **Assembly:** Follow the assembly instructions carefully. Do not overtighten screws. Ensure all components are correctly installed before use.
- **Children and Pets:** Keep children and pets away from the assembly area. Small parts can be a choking hazard.



Image: Illustration of the anti-tilt mechanism, demonstrating how it secures the dresser to the wall for safety.

PACKAGE CONTENTS

Before beginning assembly, verify that all parts are present and undamaged. If any parts are missing or damaged, please contact customer support.

- Metal Frame Components (various sizes)
- Wood Top Panel
- Fabric Drawers (9 units)
- Adjustable Feet (6 units)
- Anti-Tilt Device (wall anchor, strap, screws)
- Drawer Handles (9 units)
- Assembly Hardware (screws, Allen wrench)
- Instruction Manual

ASSEMBLY INSTRUCTIONS

Assembly typically takes less than one hour. It is recommended to assemble the unit on a soft, clean surface to prevent scratches. All screw parts are clearly marked, and reserved holes are provided for ease of assembly.

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a protected surface. Verify against the package contents list.
2. **Assemble Frame:** Connect the metal frame components using the provided screws and Allen wrench. Ensure all connections are secure but do not fully tighten until the frame is complete.
3. **Attach Adjustable Feet:** Screw the adjustable feet into the bottom of the frame.
4. **Install Wood Top:** Place the wood top panel onto the assembled frame and secure it with the designated screws.
5. **Prepare Drawers:** Insert the bottom panel into each fabric drawer and attach the handles.
6. **Insert Drawers:** Slide the assembled fabric drawers into their respective slots in the frame.
7. **Install Anti-Tilt Device:** Secure the anti-tilt device to the back of the dresser and to a wall stud using the provided hardware. This step is crucial for safety.
8. **Final Adjustments:** Adjust the feet to ensure the dresser is level and stable on your floor.

STURDY STEEL FRAME



Waterproof



Adjustable Feet



Anti-tilt Device

Image: Detailed view of the dresser's sturdy steel frame, highlighting the cross support rods, adjustable feet, and the anti-tilt device for

enhanced stability and safety.

OPERATING INSTRUCTIONS

This dresser is designed for easy and functional use.

- **Drawer Use:** The nine fabric drawers are designed for smooth operation. Use the curved handles to pull drawers open and push them closed. Avoid forcing drawers if they feel stuck.
- **Storage Capacity:** Utilize the spacious drawers for organizing clothing, accessories, toys, and other household items. The wood top provides additional display space for decorative items or media equipment.
- **TV Placement:** The dresser top can accommodate televisions up to 65 inches. Ensure the TV's base fits within the dimensions of the wood top (54.02"W x 11.73"D) and that the TV's weight does not exceed the 160 lbs (72.5 kg) capacity.
- **Adjustable Feet:** If the dresser is uneven or wobbles, rotate the adjustable feet at the bottom of the frame until the unit is stable. This also helps protect your floor from scratches.



Image: The dresser serving as an entertainment center, demonstrating its suitability for a large television and its integration into a living

room environment.

MAINTENANCE AND CARE

Proper care will extend the life and appearance of your dresser.

- **Cleaning the Wood Top:** The P2 grade artificial wood top is scratch-resistant and easy to clean. Wipe with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners.
- **Cleaning Fabric Drawers:** The breathable non-woven fabric drawers can be spot cleaned with a mild detergent and a damp cloth. Allow to air dry completely. Do not machine wash.
- **Frame Care:** Wipe the metal frame with a soft, dry cloth to remove dust.
- **Regular Checks:** Periodically check all screws and connections to ensure they remain tight. Re-tighten if necessary. Verify the anti-tilt device is still securely attached.
- **Avoid Excessive Moisture:** While the wood top is water-resistant, avoid prolonged exposure to liquids to prevent damage.

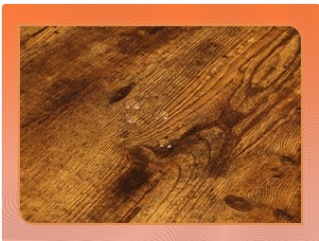


Image: Close-up of the rustic brown wood top, showing its water-resistant properties.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Dresser wobbles or is unstable.	Uneven floor; loose adjustable feet.	Adjust the leveling feet until the dresser is stable. Ensure all frame connections are tight.
Drawers do not slide smoothly.	Drawer bottom not fully inserted; items obstructing movement.	Ensure the drawer's bottom panel is fully seated. Check for any items blocking the drawer's path.
Missing parts during assembly.	Packaging error.	Contact WLIVE customer support with your purchase details and the specific missing parts.
Dresser appears tilted after assembly.	Anti-tilt device not properly installed or adjusted.	Re-check the installation of the anti-tilt device. Ensure it is securely fastened to both the dresser and a wall stud.

SPECIFICATIONS

- Brand:** WLIVE
- Model Name:** ASNG145DHS2
- Color:** Rustic Brown Wood Grain Print
- Product Dimensions (D x W x H):** 11.73" x 54.02" x 27.8"
- Item Weight:** 29.4 pounds
- Material:** Metal frame, P2 grade artificial wood top, non-woven fabric drawers
- Number of Drawers:** 9

Recommended TV Size: Up to 65 inches

Special Features: Adjustable Feet, Anti-tilt Device, Space Saving Design

Assembly Required: Yes



Image: Product dimensions and TV size compatibility reference, illustrating the dresser's overall size and its capacity to hold televisions up to 65 inches.

WARRANTY AND SUPPORT

WLIVE is committed to providing quality products and customer satisfaction. While specific warranty details are not provided in this manual, a professional after-sales team is available to assist you with any questions, concerns, or issues you may encounter with your product.

For support, please refer to the contact information provided with your purchase or visit the official WLIVE website.

We recommend keeping your purchase receipt for any warranty claims or support inquiries.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

Where can I find the assembly instructions for the WLIVE ASNG145DHS2 54-inch Wide 9-Drawer Dresser and TV Stand?

You can find the assembly instructions for your WLIVE ASNG145DHS2 54-inch Wide 9-Drawer Dresser and TV Stand below. Assembly typically takes less than one hour and should be performed on a soft surface to...

[Read full answer](#)