

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [XINFUTE](#) /

› [XINFUTE RM-L1210+H PRO Universal TV Remote Control User Manual](#)

## XINFUTE RM-L1210+H PRO

# XINFUTE RM-L1210+H PRO Universal TV Remote Control User Manual

## INTRODUCTION

---

This manual provides comprehensive instructions for the setup, operation, and maintenance of your XINFUTE RM-L1210+H PRO Universal TV Remote Control. Please read this guide carefully to ensure proper use and to maximize the functionality of your new remote.

## PRODUCT OVERVIEW

---

The XINFUTE RM-L1210+H PRO is a universal remote control designed to operate a wide range of television brands, including LG, Sony, Samsung, Sharp, and many others. It features a standard button layout for essential TV functions, along with dedicated buttons for popular streaming services.



This image shows the complete layout of the remote control, including power, number keys, navigation, volume, channel, and dedicated app buttons for Netflix and YouTube.

## SETUP

### 1. Battery Installation

The remote control requires two AAA batteries (not included) for operation. Follow these steps to install them:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals match the markings inside the compartment.
4. Replace the battery compartment cover until it clicks securely into place.



This image illustrates the open battery compartment on the back of the remote, indicating where to insert two AAA batteries.

## 2. Initial TV Setup (Brand Code Programming)

This universal remote can be programmed to control various TV brands. The back of the remote provides a guide for common brands. To set up your TV:

1. Turn on your television manually.
2. Locate the 'SET' button on your remote control.
3. Refer to the brand code list on the back of the remote (e.g., SET+1 for LG, SET+2 for Sony, SET+3 for Samsung).
4. Press and hold the 'SET' button, then simultaneously press the corresponding number key for your TV brand (e.g., 'SET' + '1' for LG).
5. Release both buttons. The indicator light on the remote should flash.
6. Point the remote at your TV and test its functions (e.g., power, volume). If it works, the setup is complete.
7. If the remote does not control your TV, repeat the process. For 'OTHER BRAND' TVs, press and hold 'SET' until the TV displays the volume bar, then release.



This image displays the back of the remote control, which features a printed guide for setting up common TV brands using specific number codes. It lists codes for LG, Sony, Samsung, Sharp, Panasonic, Toshiba, Philips, Hisense, Haier, TCL, and other brands.

## OPERATING INSTRUCTIONS

### Basic Functions

- **Power Button:** Turns the TV on or off.
- **Number Keys (0-9):** Directly select channels.
- **Volume (+/-):** Adjusts the TV volume.
- **Channel (CH +/-):** Changes TV channels.
- **Navigation (Up/Down/Left/Right/OK):** Navigates menus and confirms selections.
- **MENU/SOURCE:** Accesses the TV's main menu or input source selection.

- **RETURN/EXIT:** Goes back to the previous screen or exits a menu.

## Dedicated App Buttons

- **NETFLIX:** Directly launches the Netflix application on compatible smart TVs.
- **YouTube:** Directly launches the YouTube application on compatible smart TVs.

## MAINTENANCE

---

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA batteries.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.

## TROUBLESHOOTING

---

- **Remote not responding:**
  - Check if the batteries are installed correctly with the correct polarity.
  - Replace old batteries with new ones.
  - Ensure there are no obstructions between the remote and the TV's infrared receiver.
- **Specific TV brand not working after setup:**
  - Repeat the brand code programming steps carefully.
  - For 'OTHER BRAND' TVs, use the continuous 'SET' button press method until the volume bar appears.
  - Ensure your TV is compatible with universal remote controls.
- **Buttons not functioning correctly:**
  - Clean the remote control surface to remove any dirt or debris that might be affecting button presses.
  - If the issue persists, the remote may require replacement.

## SPECIFICATIONS

---

Feature	Detail
Model Number	RM-L1210+H PRO
Product Dimensions	6 x 3 x 1 inches
Item Weight	2.82 ounces
Batteries Required	2 AAA batteries (not included)
Compatible Devices	Television (Universal)
Material	ABS Material

## WARRANTY AND SUPPORT

---

This product comes with a one-year warranty from the date of purchase. If you encounter any issues or have questions regarding your XINFUTE RM-L1210+H PRO Universal TV Remote Control, please contact the seller within 24 hours of receipt for assistance. All goods are inspected before shipment to ensure quality.