



Manuals.plus /

› WLIVE /

› WLIVE ASNG143DHS2 12-Drawer Dresser TV Stand with LED Lights & Charging Station Instruction Manual

WLIVE ASNG143DHS2

WLIVE ASNG143DHS2 12-Drawer Dresser TV Stand Instruction Manual

Model: ASNG143DHS2

INTRODUCTION

This manual provides comprehensive instructions for the assembly, operation, and maintenance of your WLIVE ASNG143DHS2 12-Drawer Dresser TV Stand. Please read all instructions carefully before beginning assembly and retain this manual for future reference. This product is designed to provide organized storage and a functional media center for your living space.

SAFETY INFORMATION

- **Anti-Tip Device:** To prevent serious injury, this product must be securely attached to the wall using the provided anti-tip device. Children can be seriously injured by furniture tipping over.
- **Weight Capacity:** Do not exceed the maximum weight capacity of 120 lbs for the top surface. Ensure heavy items are placed in lower drawers or on the main shelf to maintain stability.
- **Electrical Safety:** The integrated charging station is UL/ETL certified. Do not overload the outlets. Ensure all cables are properly routed to avoid tripping hazards or damage.
- **Assembly:** Assemble the unit on a soft, clean surface to prevent scratches. Ensure all screws and fasteners are tightened securely before use. Do not use power tools for assembly unless specified, as overtightening may damage components.
- **Placement:** Place the dresser on a level surface. Adjust the feet as necessary to ensure stability.
- **Children:** Keep small parts and packaging materials away from children during assembly.



Figure 1: Anti-Tilt Device installation for enhanced safety.

PACKAGE CONTENTS

Before assembly, verify that all parts listed below are present and undamaged. If any parts are missing or damaged, please contact customer support.

Your browser does not support the video tag.

Video 1: Installation Video for WLIVE LED Dresser with Charging Station. This video provides a visual guide to the assembly process and shows all included components.

Refer to the assembly video (Video 1) for a visual representation of all parts and hardware. The package typically includes:

- Metal frame components
- Wooden top panels and shelves
- Fabric drawers (12 units)
- Handles for drawers
- LED light strip with remote/APP control
- Built-in charging station (2 AC outlets, 2 USB ports)
- Adjustable feet
- Anti-tip kit
- Assembly hardware (screws, nuts, wrench, Allen key)

SETUP AND ASSEMBLY INSTRUCTIONS

Follow these steps for proper assembly. It is recommended to have two people for certain steps.

1. **Prepare the Workspace:** Clear a spacious area and lay out all components on a soft, clean surface to prevent damage.
2. **Assemble the Base Frame:** Connect the metal frame components according to the diagrams in the assembly video (Video 1, Steps 1-16). Ensure all screws are finger-tightened initially.
3. **Install Wooden Panels:** Attach the wooden top panels and internal shelves to the assembled frame using the provided hardware.
4. **Install Charging Station:** Secure the built-in charging station into its designated slot on the top panel (Video 1, Steps 18-19). Connect the power cable.
5. **Install LED Lights:** Adhere the LED light strip to the underside of the top shelf in the open compartment. Connect it to the power source.

6. **Insert Drawers:** Assemble the fabric drawers by inserting the bottom panel and placing the handles. Slide the assembled drawers into their respective slots (Video 1, Steps 20-22).
7. **Attach Anti-Tip Device:** Securely attach the anti-tip device to the back of the dresser and to a wall stud using the provided hardware. This is a critical safety step.
8. **Final Tightening:** Once all components are in place, carefully tighten all screws and fasteners.
9. **Adjust Feet:** Adjust the 9 adjustable feet at the bottom to ensure the dresser is level and stable on your floor.

OPERATING INSTRUCTIONS

LED Lights

The integrated LED lights offer multiple modes and colors to enhance your environment.

- **Control Methods:** The LED lights can be controlled via the included remote control or a dedicated smartphone application. Refer to the LED light kit's separate instructions for APP download and pairing.
- **Color and Brightness:** Adjust from over 60,000 colors and various brightness levels to suit your preference.
- **Modes:** Explore different modes including music synchronization, timing functions, and various dynamic lighting effects.

MULTIPLE MODES SMART-LED LIGHT




Figure 2: LED Light features and control options.

Charging Station

The built-in charging station provides convenient power access for your devices.

- **AC Outlets:** Two standard AC outlets (125V/12A) are available for powering electronics such as TVs, game consoles, or other appliances.
- **USB Ports:** Two USB ports (5V/2A) are provided for charging smartphones, tablets, and other USB-powered devices.
- **Power Cable:** The charging station features a 5-ft flexible power cable for easy connection to a wall outlet.

BUILT-IN CHARGING STATION

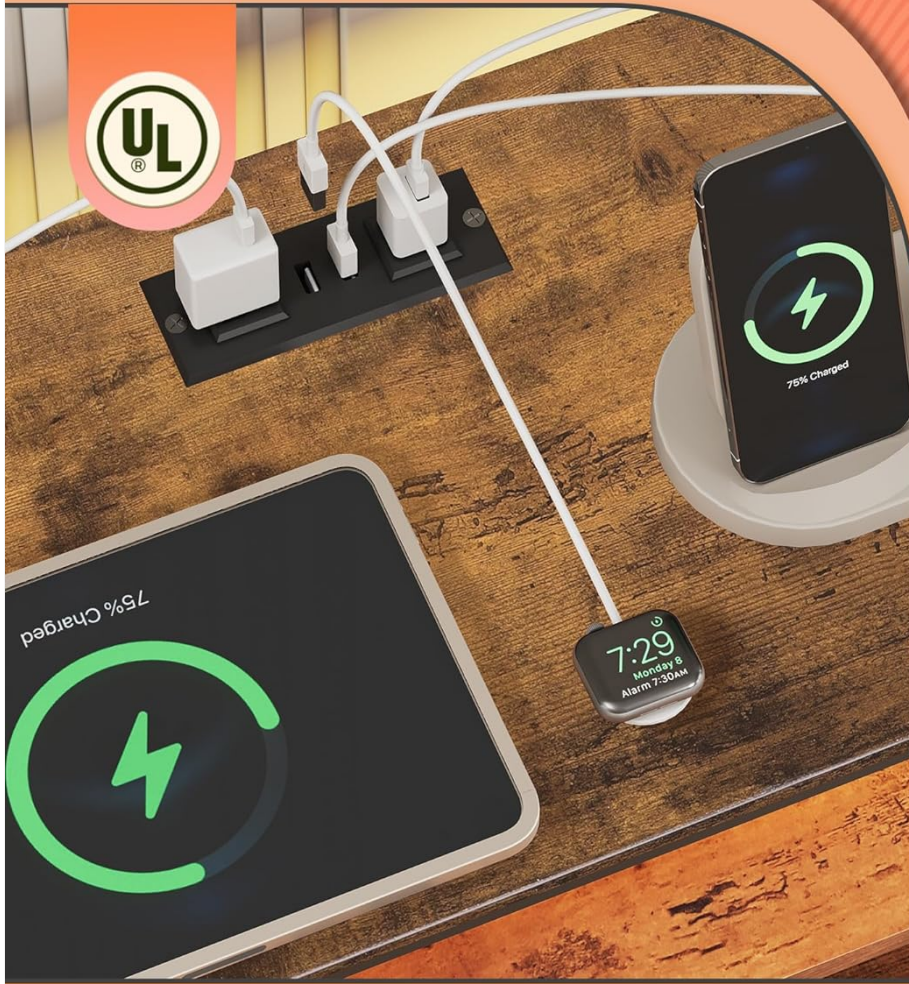

2 AC Outlets
125V/12A



2 USB Ports
5V/2A



Power Cord
5-Ft

Figure 3: Built-in Charging Station for electronic devices.

MAINTENANCE

- **Cleaning:** Wipe the wooden surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners. For fabric drawers, spot clean with a mild detergent and allow to air dry.
- **Spills:** The wood top is water-resistant. Promptly wipe up any spills to prevent damage.
- **Hardware:** Periodically check all screws and fasteners to ensure they remain tight. Retighten if necessary.
- **Drawer Care:** Avoid overloading drawers to ensure smooth operation and prevent damage to the fabric or frame.



Figure 4: Water-resistant wood surface for easy cleaning.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Dresser is wobbly.	Uneven floor; loose fasteners.	Adjust the leveling feet at the bottom of the frame. Ensure all assembly screws are tightened.
Drawers do not slide smoothly.	Drawer overloaded; fabric caught; incorrect assembly.	Reduce contents of the drawer. Check for any fabric obstruction. Re-check drawer assembly steps.
LED lights not working.	Power connection loose; remote battery dead; APP not connected.	Ensure the LED strip is properly plugged into the power source. Check remote battery. Re-pair APP if necessary.
Charging station not providing power.	Power cable unplugged; wall outlet issue; device not compatible.	Verify the dresser's main power cable is securely plugged into a working wall outlet. Test the wall outlet with another device. Ensure your device is compatible with standard AC or USB charging.

SPECIFICATIONS

Model: ASNG143DHS2

Brand: WLIVE

Overall Dimensions: 13.78"D x 65.94"W x 26.38"H

Material: Fabric drawers, P2 grade artificial wood top, metal steel frame

Number of Drawers: 12

Weight Capacity (Top Surface): Up to 120 lbs

TV Compatibility: Suitable for TVs up to 75 inches

Charging Station: 2 AC Outlets (125V/12A), 2 USB Ports (5V/2A), 5-ft Power Cord (UL/ETL Certified)

LED Lights: 60000+ RGB Colors, Remote/APP Control, Music Sync, Timing Mode

Item Weight: 40 lbs

Assembly Required: Yes (Tools and instructions included)

PRODUCT SIZE



Figure 5: Product dimensions and TV size compatibility.

Your browser does not support the video tag.

Video 2: Overview of the WLIVE Wide TV Stand, showcasing its design and suitability for large TVs.

WARRANTY AND SUPPORT

For warranty information, missing parts, or any questions regarding your WLIVE ASNG143DHS2 dresser, please contact WLIVE customer support directly. Refer to the product packaging or the WLIVE official website for contact details.