

## PIIKAGO 3in1 Play Set-rainbow

# PIIKAGO 3-in-1 Kids Play Tent with Tunnel and Ball Pit Instruction Manual

Model: 3in1 Play Set-rainbow

## 1. INTRODUCTION AND OVERVIEW

Thank you for choosing the PIIKAGO 3-in-1 Kids Play Tent. This versatile play set is designed to provide a fun and engaging environment for children, encouraging active play and imagination. It includes a play tent, a crawl tunnel, and a pop-up ball pit, which can be used together or separately. This manual provides essential information for safe assembly, usage, maintenance, and troubleshooting.

## 2. SAFETY INFORMATION

- **CHOKING HAZARD:** Small parts. Not for children under 3 years. Adult supervision is required at all times.
- Keep all packaging materials (plastic bags, ties, etc.) away from children to prevent suffocation.
- Ensure the play tent is assembled on a flat, stable surface, away from stairs, heaters, and open flames.
- Regularly inspect all components for damage or wear. Discontinue use if any part is broken or compromised.
- Do not allow children to hang or climb on the tent structure.
- This product is for indoor and outdoor use. When used outdoors, ensure it is placed on a soft surface and protected from strong winds or extreme weather conditions.

### 3. PACKAGE CONTENTS

Please check the package to ensure all items are present:

- 1 x Play Tent Cover
- 1 x Tunnel
- 1 x Ball Pit
- Poles (for tent assembly)
- Connectors (for tent poles)

### 4. SETUP INSTRUCTIONS

The PIIKAGO 3-in-1 Play Tent features a pop-up design for easy assembly. No tools are required.

#### 4.1 Assembling the Play Tent

1. Carefully remove the play tent cover, poles, and connectors from the carrying bag.
2. Unfold the play tent cover. It will pop open automatically.
3. Assemble the poles by connecting the segments.
4. Insert the assembled poles into the fabric sleeves located along the edges of the tent cover.
5. Secure the poles at the corners using the provided connectors to form the tent's frame.

#### 4.2 Setting Up the Tunnel and Ball Pit

1. Unfold the tunnel and ball pit. They will pop open instantly.
2. To connect the tunnel to the play tent or ball pit, align the openings and use the toggle closures or ties to secure them firmly.
3. The components can be arranged in various configurations to create different play spaces.

# 3-In-1 Toddler Play Tunnel Set



Image: The complete 3-in-1 play set, showing the tent, tunnel, and ball pit connected.

# See-Through Mesh Design

Keep the fun visible and engaging



Image: A child demonstrating the crawl tunnel, illustrating how components connect.

## 5. OPERATING INSTRUCTIONS (USAGE)

- **Play Tent:** Provides a cozy space for reading, imaginative play, or quiet time. The tent features tie-back doors for easy access and ventilation.
- **Crawl Tunnel:** Encourages physical activity and exploration. Children can crawl through the tunnel to connect different sections of the play set.
- **Ball Pit:** Fill with play balls (not included) for a fun and stimulating sensory experience. The ball pit includes an innovative ball-toss game design on the side to enhance hand-eye coordination and motor skills.

# Multi-Fuction Play Set



## Ball-Toss Design

Image: A child engaging with the ball-toss game on the play tent.

## 6. MAINTENANCE AND CARE

- **Cleaning:** Wipe down the fabric surfaces with a damp cloth and mild soap. Do not use harsh chemicals or abrasive cleaners. Allow to air dry completely before folding or storing.
- **Storage:** The play set is designed for easy portability. To store, carefully twist and fold each component back into its compact shape and place it in the provided carrying bag.
- **Inspection:** Periodically check for any tears in the fabric, bent poles, or loose connectors. Replace damaged parts immediately.

## 7. TROUBLESHOOTING

- **Difficulty Folding:** If a component is difficult to fold, gently twist the frame in opposite directions until it collapses into a smaller circle. Refer to visual guides if available.
- **Loose Connections:** Ensure all toggle closures and ties are securely fastened when

connecting the tent, tunnel, and ball pit.

- **Tent Instability:** Verify that all poles are fully inserted into their sleeves and secured with connectors. Ensure the tent is on a flat surface.

## 8. SPECIFICATIONS

Feature	Detail
Product Dimensions (L x W x H)	47.24 x 120 x 51.18 inches (assembled)
Item Weight	5.24 pounds
Recommended Age	3 years and up
Material	Peachskin Polyester, Breathable Mesh Fabric



Image: Detailed product dimensions for each component.

## **9. WARRANTY AND SUPPORT**

For warranty information, product support, or to purchase replacement parts, please contact PIIKAGO customer service directly. Contact details can typically be found on the product packaging or the official PIIKAGO website.