

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- > [Deli](#) /
- > [Deli VS4501-BK Small Home and Office Safe Box Instruction Manual](#)

Deli VS4501-BK

Deli VS4501-BK Small Home and Office Safe Box Instruction Manual

Model: VS4501-BK | Brand: Deli

1. INTRODUCTION

Thank you for choosing the Deli VS4501-BK Small Home and Office Safe Box. This manual provides essential information for the safe and efficient operation of your new safe. Please read these instructions carefully before use and retain them for future reference. This safe is designed to protect your valuables with its robust steel construction and dual locking mechanism, offering both electronic password access and a backup key.

2. SAFETY INFORMATION

- Do not store the backup keys inside the safe. Keep them in a secure, separate location.
- Avoid exposing the safe to extreme temperatures or high humidity.
- Do not attempt to force the lock if it is jammed. Refer to the troubleshooting section.
- Keep the safe out of reach of children to prevent unauthorized access.
- Ensure the safe is placed on a stable, level surface.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- Deli VS4501-BK Safe Box
- Emergency Override Keys (2)
- Instruction Manual

4. SETUP

4.1. Unboxing and Placement

Carefully remove the safe from its packaging. Place the safe in your desired location, ensuring it is stable and discreet. The compact and lightweight design allows for versatile placement in bedrooms, offices, cabinets, or small storage areas.

Compact and discreet



Image: The Deli VS4501-BK Safe Box is compact and designed for discreet placement, as shown here on a shelf.

4.2. Battery Installation (for Electronic Keypad)

The electronic keypad requires batteries for operation. Locate the battery compartment, typically on the inside of the safe door. Insert the required number of AA batteries (not included), ensuring correct polarity. Close the battery compartment cover securely.

5. OPERATING INSTRUCTIONS

5.1. Unlocking Methods

The Deli VS4501-BK safe offers two methods for unlocking:

Two unlocking methods



Image: The safe features both a numeric keypad for password entry and a concealed keyhole for key access.

5.1.1. Using the Electronic Password

1. Enter your 3-8 digit password on the numeric keypad.
2. Press the 'E' or '#' key to confirm.
3. If the password is correct, an indicator light will illuminate (usually green), and you will hear a beep.
4. Within 5 seconds, turn the switch knob clockwise to open the safe door.

5.1.2. Using the Emergency Override Key

In case of forgotten password or battery failure, use the emergency override key:

1. Locate the concealed keyhole, usually behind a small cover on the front panel.
2. Insert the emergency key and turn it clockwise.
3. While holding the key turned, rotate the switch knob clockwise to open the safe door.
4. Remove the key once the door is open.

5.2. Setting and Changing the Password

The safe comes with a factory default password (refer to your specific model's documentation for the default, often '159' or '1234'). It is highly recommended to change this immediately.

Password setting, 3–8 digits can be set arbitrarily



Image: The keypad features a 'SET' button for programming your personal 3-8 digit password.

1. With the safe door open, press the 'SET' button located on the inside of the door or near the keypad. An indicator light (usually yellow) will illuminate.
2. Enter your new 3-8 digit password.
3. Press the 'E' or '#' key to confirm. The indicator light will flash and then turn off, indicating successful password change.
4. Test the new password with the door open before closing it.

5.3. Indicator Lights

The keypad features indicator lights to provide status feedback:

- **Green Light:** Indicates correct password entry and safe is ready to open.
- **Yellow Light:** Indicates programming mode (when setting a new password).
- **Red Light:** Indicates incorrect password entry or low battery.

5.4. Automatic Lock and Alarm

For enhanced security, the safe will automatically lock and may trigger an alarm after three consecutive incorrect password attempts. To reset, use the emergency key to open the safe, or wait for a short period (e.g., 5 minutes) before attempting to enter the password again.

6. MAINTENANCE

6.1. Cleaning

Wipe the exterior of the safe with a soft, damp cloth. Do not use abrasive cleaners or solvents, as these can damage the finish. Ensure the keypad and lock mechanism are kept clean and free of debris.

6.2. Battery Replacement

When the red indicator light illuminates during password entry, it signifies low battery power. Replace the batteries promptly to ensure continued operation. Follow the battery installation steps in Section 4.2.

6.3. Rust Prevention

The safe features a robust full steel structure with a rust-resistant plastic spray coating for long-lasting durability. To maintain this protection, avoid placing the safe in excessively humid environments or where it may come into contact with corrosive substances.



Image: The safe's phosphating anti-rust casing provides superior protection against corrosion compared to untreated metal.

7. TROUBLESHOOTING

- **Safe does not open with password:**
 - Ensure batteries are not low (check red indicator light). Replace if necessary.
 - Verify correct password entry.
 - Ensure the switch knob is turned within 5 seconds after correct password entry.
 - If multiple incorrect attempts, the safe may be in lockout mode. Wait or use the emergency key.
- **Forgotten Password:** Use the emergency override key to open the safe. Once open, you can reset the password following the instructions in Section 5.2.
- **Key does not turn:** Ensure the key is fully inserted and the keyhole is free of obstructions. Do not force the key.
- **Door does not close properly:** Check for any obstructions inside the safe or around the door frame. Ensure the locking bolts are fully retracted before attempting to close.

8. SPECIFICATIONS

The Deli VS4501-BK safe features a solid lock core and robust construction for reliable security.



Image: The safe is equipped with solid steel locking bolts, providing enhanced resistance against forced entry.

Feature	Detail
---------	--------

Feature	Detail
Model Number	VS4501-BK
Brand	Deli
Product Dimensions (D x W x H)	23 cm x 17 cm x 17 cm
Item Weight	2.1 kg
Material	Carbon Steel
Color	Black
Lock Type	Electronic Keypad (Password) & Key Override
Installation Type	Portable/Movable
Batteries Required	Yes (for keypad, not included)

The safe's construction includes a carbon alloy steel plate and a textured spray coating for enhanced durability and anti-rust properties.



Image: The safe's robust construction features a carbon alloy steel plate protected by a textured spray coating layer.

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided with your purchase or contact the seller directly. Keep your purchase receipt as proof of purchase.