

[Manuals.plus](#) /

› [HOMELIFE](#) /

› HOMELIFE Induction Cooktop 4-Burner 60cm Black Ceramic Glass Slider Control - 220-240V User Manual

HOMELIFE PK-B4606

HOMELIFE 4-Burner 60cm Induction Cooktop User Manual

Model: PK-B4606

IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using your new HOMELIFE Induction Cooktop. Keep this manual for future reference. Improper installation, maintenance, or use can cause serious injury or damage.

- **Electrical Safety:** Ensure the cooktop is connected to a properly grounded electrical outlet with the correct voltage (220-240V) and current rating. Do not use extension cords or adapters.
- **Cookware:** Only use induction-compatible cookware. Non-magnetic pots and pans will not heat.
- **Heat Surfaces:** The cooktop surface will be hot after use, even if the induction zones themselves do not glow. Avoid touching hot surfaces.
- **Children and Pets:** Keep children and pets away from the cooktop during operation and while it is cooling down.
- **Ventilation:** Ensure adequate ventilation around the cooktop as specified in the installation guidelines.
- **Cleaning:** Always disconnect power before cleaning. Use non-abrasive cleaners suitable for ceramic glass.
- **Foreign Objects:** Do not place metallic objects like knives, forks, spoons, or lids on the cooktop surface as they can become hot.

PRODUCT OVERVIEW

The HOMELIFE 4-Burner 60cm Induction Cooktop offers efficient and precise cooking with its ceramic glass surface and slider controls. Its sleek design integrates seamlessly into modern kitchens.

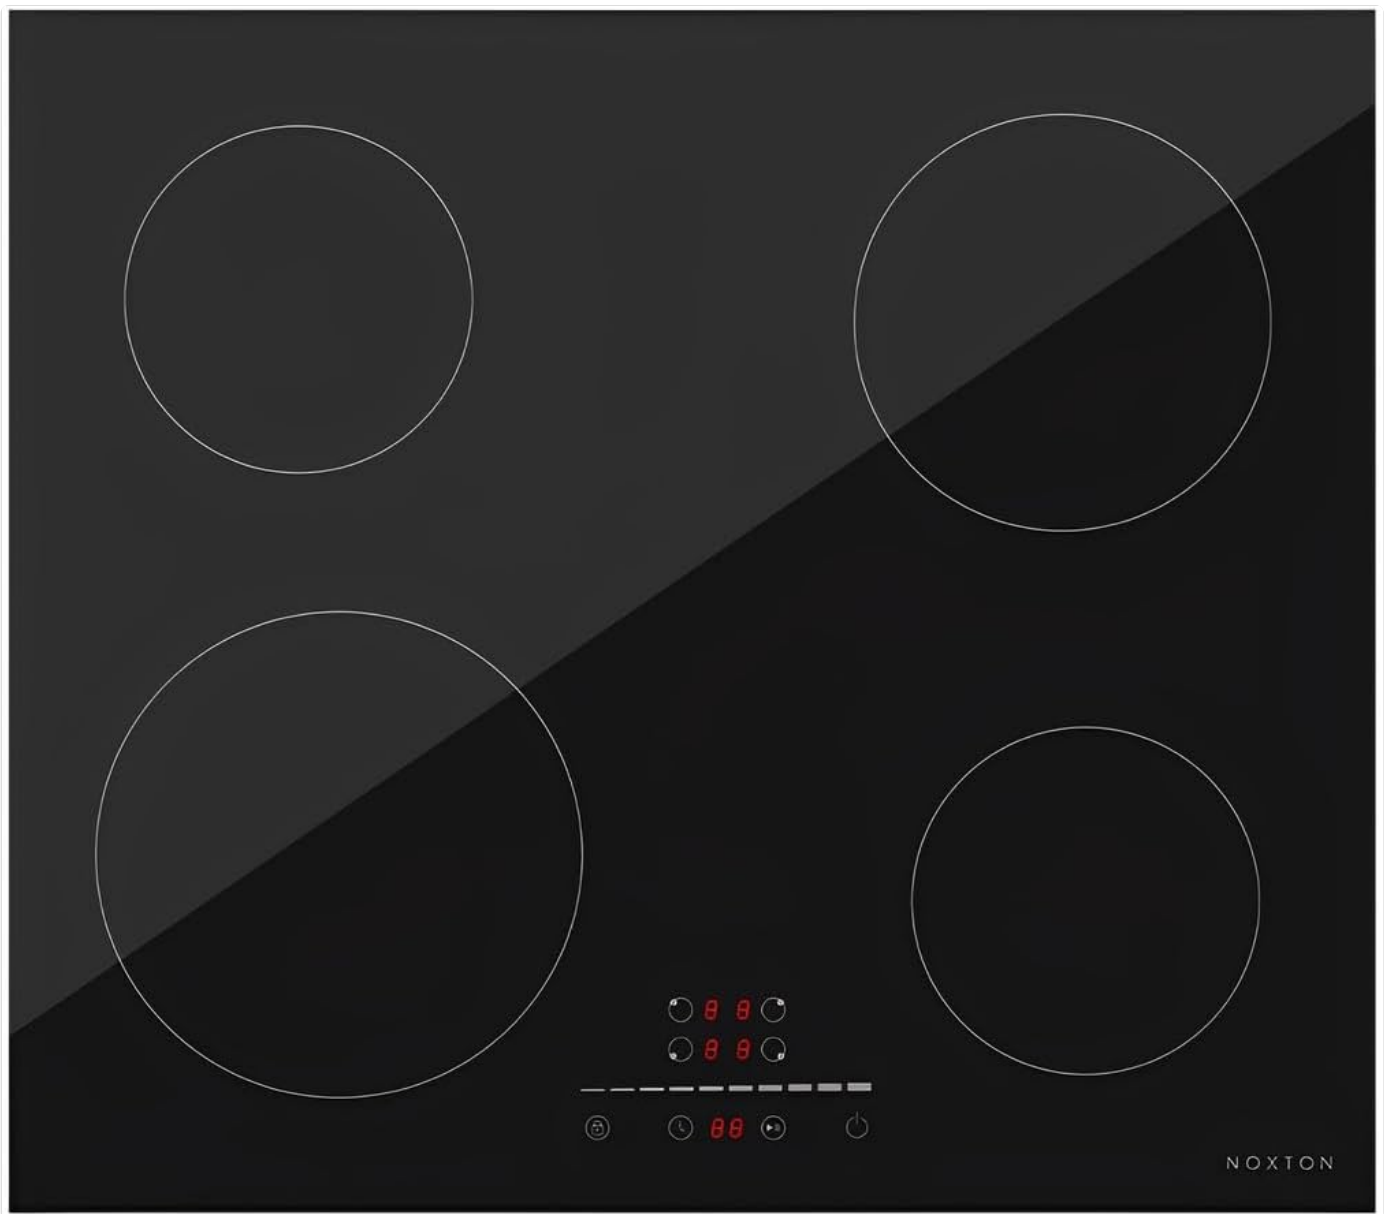


Figure 1: Top-down view of the HOMELIFE 4-burner induction cooktop, showcasing its four cooking zones and central touch control panel.



Figure 2: Angled view of the HOMELIFE induction cooktop, illustrating its slim profile and integrated design for countertop installation.

Key Features

- **Induction Technology:** Provides rapid and efficient heating by directly heating the cookware, saving energy.
- **4 Independent Cooking Zones:** Allows for simultaneous cooking of multiple dishes with individual control.
- **Ceramic Glass Surface:** High resistance to temperature changes and easy to clean.
- **Touch Slider Control:** Enables quick and precise adjustment of heat levels.

- **Safety Features:** Includes residual heat indicators and automatic shut-off for enhanced safety.
- **Modern Design:** 60cm width, ideal for built-in kitchen installations.

Tecnologia e elegância para sua cozinha



Tecnologia de indução



4 zonas independentes



Fácil limpeza



Controle Touch Slider



Segurança e economia de energia



Figure 3: Visual representation of the cooktop's key features, including induction technology, four independent zones, easy cleaning, touch slider control, and energy efficiency.

INSTALLATION AND SETUP

Proper installation is crucial for the safe and optimal performance of your induction cooktop. It is recommended that installation be performed by a qualified technician.

Unpacking

- Carefully remove the cooktop from its packaging.
- Inspect for any signs of damage during transit. Do not install if damaged.
- Retain packaging materials for potential future transport or service.

Placement

The cooktop is designed for drop-in installation into a countertop. Ensure the cutout dimensions match the cooktop's specifications (60cm width). Allow sufficient clearance around the appliance for ventilation as per local building codes and manufacturer guidelines.

Electrical Connection

The cooktop requires a dedicated 220-240V electrical supply. The electrical connection must comply with all local electrical codes. A qualified electrician should perform the wiring to ensure proper grounding and connection to the main power supply.



Figure 4: The HOMELIFE induction cooktop seamlessly integrated into a kitchen countertop, demonstrating its suitability for planned kitchens.

OPERATING INSTRUCTIONS

Control Panel Overview

The cooktop features a touch-sensitive control panel located at the front. Each cooking zone has its own controls for power

adjustment. The main power button controls the entire unit.

DIFERENCIAIS DO COOKTOP DE INDUÇÃO

Cozimento rápido e eficiente: aquece diretamente as panelas, economizando energia

Superfície em vidro cerâmico chinês; alta resistência a temperaturas e fácil limpeza

Controle touch slider permite ajustar a temperatura de forma rápida e precisa

Design moderno de 60cm: modelo PK-B4606 é elegante e ideal para embutir

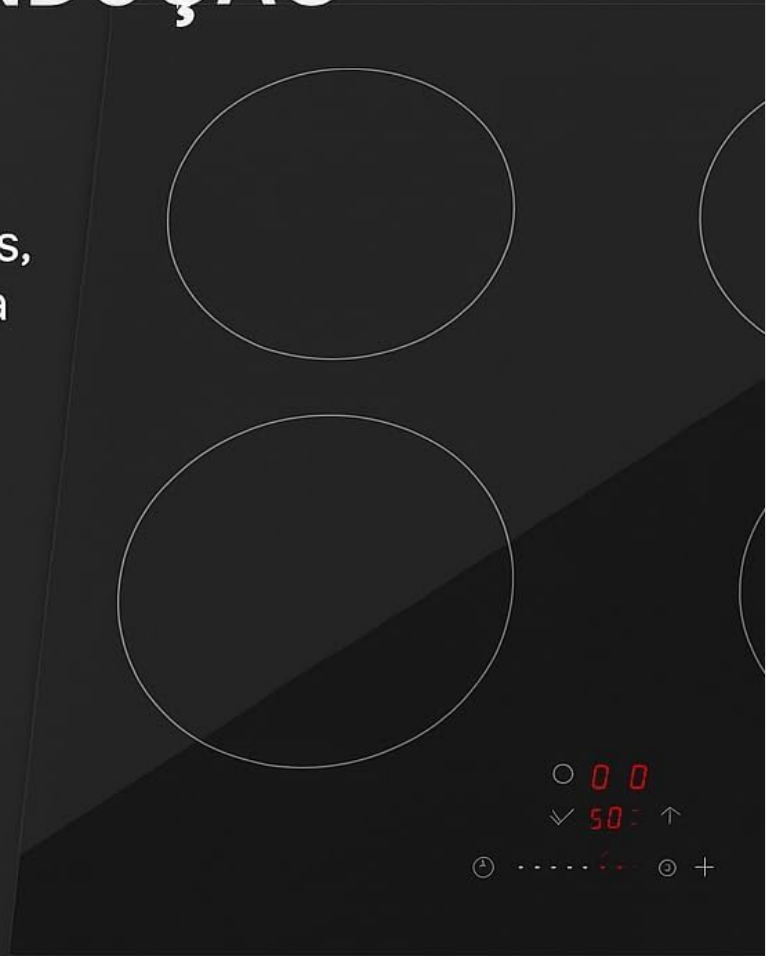


Figure 5: Detailed view of the induction cooktop's features, including the touch slider control for precise temperature adjustments and the ceramic glass surface.

Turning On/Off

1. To turn on the cooktop, press and hold the main power button (O) for a few seconds. The display will illuminate.
2. To turn off, press the main power button again.

Adjusting Heat Levels

1. Place an induction-compatible pot or pan on the desired cooking zone.
2. Select the cooking zone by touching its corresponding sensor.
3. Use the slider control (indicated by a series of dots or a line) to increase or decrease the heat level. Slide your finger along the control or tap at the desired level.
4. The display for that zone will show the selected power level (e.g., 1-9).

Compatible Cookware

Induction cooktops require cookware made of ferromagnetic material. To check if your cookware is compatible, hold a magnet to the bottom of the pot or pan. If the magnet sticks, the cookware is suitable for induction cooking. Flat-bottomed pots and pans are recommended for optimal contact and heating.

Maintenance and Cleaning

Regular cleaning and maintenance will ensure the longevity and optimal performance of your cooktop.

Daily Cleaning

- After each use, allow the cooktop to cool down completely.
- Wipe the ceramic glass surface with a damp cloth and a small amount of mild dish soap.
- Rinse with a clean, damp cloth and dry thoroughly with a soft, lint-free cloth to prevent water spots.

Deep Cleaning and Stain Removal

- For stubborn stains or burnt-on food, use a ceramic cooktop cleaner and a non-abrasive cleaning pad. Follow the product instructions.
- Avoid using abrasive sponges, steel wool, or harsh chemical cleaners, as these can scratch or damage the ceramic glass surface.
- For melted plastic or sugar, carefully scrape it off with a razor blade scraper designed for ceramic cooktops, holding the blade at a shallow angle. Do this only after the surface has cooled.

Care for Ceramic Glass

- Avoid dropping heavy or sharp objects on the cooktop surface, as this can cause cracks or chips.
- Do not slide rough-bottomed cookware across the surface, as it may cause scratches.

Troubleshooting

Before contacting customer support, please refer to the following troubleshooting guide for common issues.

Problem	Possible Cause	Solution
Cooktop does not turn on.	No power supply; main power button not pressed correctly.	Check circuit breaker. Ensure main power button is pressed and held until display illuminates.
Cooking zone not heating.	Cookware not induction-compatible; cookware too small or not centered; error code displayed.	Use induction-compatible cookware. Ensure cookware covers at least 70% of the zone. Reposition cookware. Refer to error code section (if applicable, not detailed here).
Cooktop makes buzzing noise.	Normal operation with certain cookware; fan noise.	This is often normal. Some cookware materials or construction can cause a slight buzzing. The cooling fan may also produce a sound.
Cooktop shuts off unexpectedly.	Overheating protection activated; liquid spill on controls; long cooking time.	Allow cooktop to cool. Clean any spills from controls. Some models have automatic shut-off after extended periods.

Problem	Possible Cause	Solution
Controls are unresponsive.	Controls are wet or dirty; child lock activated.	Clean and dry the control panel. Deactivate child lock if present (refer to specific model instructions).

SPECIFICATIONS

- **Brand:** HOMELIFE
- **Model:** PK-B4606
- **Type:** Induction Cooktop
- **Number of Burners:** 4
- **Installation Type:** Drop-In
- **Surface Material:** Ceramic Glass
- **Color:** Black
- **Power Source:** Electric
- **Voltage:** 220-240V
- **Dimensions (Packaging):** 66 x 59 x 12.5 cm
- **Weight:** 8.83 kg
- **Special Features:** Fingerprint resistant, Slider Control

WARRANTY AND SUPPORT

This HOMELIFE Induction Cooktop is covered by a manufacturer's warranty against defects in materials and workmanship. Please refer to your purchase documentation for specific warranty terms and duration. Keep your proof of purchase for warranty claims. For technical assistance, troubleshooting beyond this manual, or warranty service, please contact the retailer where the product was purchased or refer to the HOMELIFE official website for customer support contact information.

Extended Warranty Options: Extended warranty plans may be available for purchase, offering additional coverage for 12 or 24 months against failures and defects. Please inquire with your retailer for details.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question