### Manuals+

Q & A | Deep Search | Upload

#### manuals.plus /

- Logic /
- > Logic Z3L 4G Flip Phone User Manual

# Logic Z3L

# Logic Z3L 4G Flip Phone User Manual

Model: Z3L

# 1. Introduction

Thank you for choosing the Logic Z3L 4G Flip Phone. This manual provides essential information for setting up, operating, and maintaining your device. The Logic Z3L is designed for ease of use, featuring large buttons, clear display, and essential communication functions, making it ideal for users seeking a straightforward mobile experience.

# 2. PACKAGE CONTENTS

Please check the box for the following items:

- Logic Z3L 4G Flip Phone
- USB Cable
- Charging Dock (if included in your specific package)
- Battery (950mAh Lithium Ion)
- User Manual (this document)



Image: The Logic Z3L flip phone in open position, alongside its charging dock. This image illustrates the phone and its primary accessory.

# 3. DEVICE LAYOUT

Familiarize yourself with the key components of your Logic Z3L phone.



Image: The Logic Z3L flip phone in its closed, compact state. This view highlights the external display and camera module.

# 3.1 Front (Closed)

- External Display: Shows time, date, and notifications.
- Camera Module: Rear camera lens.
- LED Indicators: For notifications and charging status.

### 3.2 Internal (Open)

- Main Display: Color LCD screen for menu navigation and content.
- Navigation Keys: Directional pad and OK/Confirm button.
- Call/End Keys: Green button to answer/make calls, Red button to end calls/power off.
- Numeric Keypad: Large, backlit buttons for dialing and text input.
- Soft Keys: Context-sensitive buttons below the display.

### 3.3 Sides

- Volume Keys: Adjust call and media volume.
- SOS Button: Dedicated emergency button (side-mounted).
- Charging Port: USB Type C port for charging.
- Flashlight Button: Dedicated button to activate the flashlight.

### 4. SETUP

### 4.1 Installing the SIM Card and Battery

- 1. Open the back cover: Gently pry open the back cover of the phone.
- 2. **Insert SIM Card(s):** Locate the SIM card slots. The Logic Z3L supports dual SIM cards. Insert your SIM card(s) with the gold contacts facing down, ensuring they are correctly seated.
- 3. Insert MicroSD Card (Optional): If you wish to expand storage, insert a MicroSD card into the dedicated slot.
- 4. **Insert Battery:** Place the battery into the battery compartment, aligning the gold contacts on the battery with those in the phone.
- 5. Close the back cover: Press the back cover firmly until it clicks into place.

# 4.2 Charging the Phone

Before first use, fully charge the phone.

- **Using USB Cable:** Connect the USB cable to the phone's charging port and the other end to a compatible USB power adapter (not included) or a computer.
- **Using Charging Dock:** Place the phone into the charging dock, ensuring it is properly seated. The dock should be connected to power via the USB cable.

The battery indicator on the screen will show charging status. A full charge typically takes 2-3 hours.

# 5. OPERATING YOUR PHONE

#### 5.1 Power On/Off

- To Power On: Press and hold the End Call/Power button until the screen lights up.
- To Power Off: Press and hold the End Call/Power button until the power off options appear, then select "Power off".

# 5.2 Making and Receiving Calls

- To Make a Call:
  - a. Enter the phone number using the numeric keypad.
  - b. Press the Call button to dial.
- To Answer a Call: When the phone rings, press the Call button.
- To End a Call: Press the End Call button.

# 5.3 Sending and Receiving SMS Messages

- · Navigate to the "Messages" menu.
- Select "Write message" or "New message".
- Enter your message using the keypad.
- Enter the recipient's number or select from contacts.
- · Select "Send".

### **5.4 Contacts**

Store frequently called numbers in your phone's contacts.

- Navigate to the "Contacts" menu.
- · Select "Add new contact".
- Enter the name and phone number, then save.
- Speed Dial: Assign frequently used contacts to speed dial numbers (e.g., long-press '2' for a specific contact).

### 5.5 SOS Emergency Button

The dedicated SOS button provides quick access to emergency contacts.

- Setup: Go to "SOS Settings" in the menu to add up to 5 emergency contact numbers.
- Activation: In an emergency, press and hold the side-mounted SOS button for 3 seconds. The phone will automatically call and send an SMS to the pre-set emergency contacts until one answers.

# 5.6 FM Radio

The Logic Z3L includes a built-in FM radio.

· Navigate to the "FM Radio" menu.

- You may need to connect headphones (not included) to act as an antenna for optimal reception.
- Use the navigation keys to scan for stations or tune manually.

# 5.7 Flashlight

Activate the flashlight for illumination.

• Press the dedicated flashlight button on the side of the phone to turn it on/off.

# 5.8 Bluetooth Connectivity

Connect your phone to Bluetooth headsets or other devices.

- Navigate to "Settings" > "Bluetooth".
- Turn Bluetooth on.
- Search for available devices and pair with your desired device.

# 6. MAINTENANCE

- Cleaning: Use a soft, dry cloth to clean the phone's surface. Avoid liquid cleaners.
- Battery Care: Avoid extreme temperatures. Do not leave the battery fully discharged for long periods.
- Storage: Store the phone in a cool, dry place when not in use for extended periods.
- Protection: Protect the phone from drops and impacts.

### 7. TROUBLESHOOTING

Problem	Possible Cause / Solution
Phone does not power on.	Battery is drained. Charge the phone for at least 30 minutes. Ensure battery is correctly inserted.
Cannot make or receive calls.	SIM card not inserted correctly or not activated. Check network signal strength. Ensure you have sufficient credit/plan.
Poor call quality.	Weak network signal. Move to an area with better reception. Ensure speaker/microphone are not obstructed.
SOS button not working.	Emergency contacts not set up in SOS settings. Ensure numbers are valid and reachable.
Phone freezes or is unresponsive.	Remove and reinsert the battery to perform a soft reset.

### 8. SPECIFICATIONS

Feature	Detail
Model Name	Logic Z3L
Cellular Technology	4G LTE (Unlocked)
SIM Card Support	Dual SIM
Battery Capacity	950mAh Lithium Ion

Feature	Detail
Internal Storage	0.13 GB
Expandable Storage	Yes (via MicroSD card)
Display Type	LCD
Connectivity	Bluetooth, USB Type C
Special Features	SOS Button, FM Radio, Flashlight, Large Buttons, Loud Speaker (104dB)
Dimensions	10 x 8.6 x 5.7 cm
Weight	210 g

# 9. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation provided with your purchase or contact Logic customer service.

• Manufacturer: Logic

• Customer Support Phone: 1-888-776-0942

For further assistance, please visit the official Logic website or contact their customer support line.



© 2025 Logic. All rights reserved.

# **Related Documents - Z3L**

€ Ex	LOGIC Z3L 4G Flip Phone Quick Guide Official quick guide for the LOGIC Z3L 4G Flip Phone, covering setup, basic usage, file transfer, FCC compliance, SAR information, and warranty details.
1 4 2 5 5 5 5 5 5 5 5 5 5 5 5 5 5 5 5 5 5	LOGIC Z3L 4G Flip Phone Quick Start Guide  This quick start guide provides essential information for the LOGIC Z3L 4G Flip Phone, including setup instructions, FCC compliance, SAR information, and warranty details.
	LOGIC Z3L 4G FUP Phone Quick Start Guide  Get started with your LOGIC Z3L 4G FUP Phone. This quick start guide provides essential setup instructions, including SIM card installation, connecting to a computer, charging, and copying music. Features FCC statement and trademark information.
See See	LOGIC ZIL 4G Flip Phone Quick Start Guide Get started with your LOGIC ZIL 4G Flip Phone. This guide covers initial setup, SIM card installation, charging, connecting to a computer, and warranty information.

