

Gribouillage TC-SC--08

Gribouillage Handheld Steam Cleaner TC-SC--08 Instruction Manual

Model: TC-SC--08 | Brand: Gribouillage

1. INTRODUCTION AND OVERVIEW

This manual provides essential information for the safe and effective operation of your Gribouillage Handheld Steam Cleaner, Model TC-SC--08. This 2500W machine delivers high-temperature, pressurized steam for chemical-free cleaning across various surfaces.

Key features include:

- **High Pressure & Temperature:** Generates up to 3 bar of steam, reaching 221°F (105°C) in approximately 15 seconds.
- **Handle-Controlled Steam Output:** Ergonomic handle with a 1-click operation and 3 indicator lights for adjusting steam levels.
- **Large Water Tank:** A 1.6L capacity water tank allows for up to 1 hour of continuous cleaning, with the ability to refill during operation.
- **Versatile Cleaning:** Suitable for floors, couches, mattresses, windows, furniture, gas stoves, range hoods, car interiors, and more.
- **Compact & Portable:** Designed for easy handling and storage, with a 4.92ft spray gun hose and a 6.56ft power cord for flexibility.

2. SAFETY INFORMATION

WARNING: Failure to follow these safety instructions may result in fire, electric shock, or other injury or damage.

- Always ensure the appliance is unplugged from the power outlet before filling with water or performing maintenance.

- Do not touch the steam hose or extension rod when the steam cleaner is operating. High temperatures can cause severe burns.
 - Wear heat-resistant gloves when handling or changing accessories to prevent burns.
 - Never direct the spray handle towards any person, animal, or electrical appliance.
 - Keep the appliance out of reach of children and pets.
 - Use only clean tap water. Do not add cleaning solutions, perfumes, or other chemicals to the water tank.
 - Ensure the water tank cap is securely closed before operating.
 - Do not immerse the appliance in water or other liquids.
 - If the power cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.
-

3. PACKAGE CONTENTS

Your Gribouillage Handheld Steam Cleaner package includes the following items:

- Handheld Steam Cleaner Unit
- Spray Gun Hose
- Power Cord
- Bent Nozzle
- Straight Nozzle
- 2 Nylon Brushes
- 1 Metal Brush
- 1 Extension Rod
- 1 Fabric/Leather Scraper
- 1 Window Scraper
- 2 Small Scrapers
- 1 Nozzle Cleaning Pin
- 1 Towel Cover
- 1 Pair of Spacers
- 1 Pair of Gloves
- 1 Wrench
- 1 Storage Bag



Image 1: All included accessories for the Gribouillage Handheld Steam Cleaner.

4. SETUP

- 1. Prepare the Unit:** Place the steam cleaner on a stable, flat surface.
- 2. Fill Water Tank:** Open the water inlet cap. Carefully pour clean tap water into the 1.6L water tank. Do not overfill. Close the cap securely.
- 3. Install Batteries (for remote control):** Insert 2 AAA batteries into the spray handle if not already installed.
- 4. Attach Nozzle/Brush:** Select the appropriate nozzle or brush head for your cleaning task. Attach it firmly to the spray gun. Ensure rubber rings are placed in the nozzle or extension rod to avoid water leakage.
- 5. Connect Power:** Plug the power cord into a standard 110V electrical outlet. The display screen on the unit will show "0".



Image 2: Visual guide for initial setup and operation steps.



Image 3: Instructions for attaching various brush heads and nozzles.

5. OPERATING INSTRUCTIONS

1. **Power On:** Long press the button on the spray handle to turn on the machine.
2. **Preheating:** The display screen will show "1" and the unit will begin to preheat. Wait approximately 15 seconds until the steam is ready.
3. **Adjust Steam Output:** Use the button on the handle to cycle through 3 levels of steam output (indicated by lights on the handle and display). Select the appropriate level for your cleaning task.
4. **Begin Cleaning:** Direct the steam towards the surface to be cleaned. For stubborn dirt, use the appropriate brush attachment and apply gentle pressure.
5. **Refilling Water:** If the water level is low, you can add water to the tank at any time during operation without needing to power off.
6. **Power Off:** Long press the button on the spray handle to turn off the machine when finished.

Recommended Applications:

- **Kitchen Surfaces:** Use nylon brushes for gas stoves, range hoods, and countertops.
- **Bathroom Fixtures:** Bent nozzle for toilets, straight nozzle for sinks and showers.
- **Windows & Glass:** Window scraper attachment for streak-free cleaning.

- **Upholstery & Fabrics:** Fabric/leather scraper with towel cover for couches, mattresses, and curtains.
- **Car Detailing:** Various nozzles and brushes for seats, wheels, engine, and interior surfaces.
- **Bed Bugs:** High-temperature steam can effectively treat bed bugs on mattresses and furniture.



Image 4: Examples of different nozzle applications for diverse cleaning needs.

Steam Cleaner for Car Detailing



Image 5: Demonstrating the steam cleaner's use for car detailing.

Steamer for Bed Bugs



Image 6: The steam cleaner's effectiveness against bed bugs without chemicals.

6. MAINTENANCE

- **Draining Water:** After each use, unplug the unit and allow it to cool. Carefully drain any remaining water from the tank using the drain outlet.
- **Cleaning Accessories:** Clean all nozzles and brushes with water after use. For stubborn residue, a mild detergent can be used. Ensure they are dry before storage.
- **Descaling:** Over time, mineral deposits may build up in the water tank. If you notice reduced steam output, descale the unit by filling the tank with a mixture of water and white vinegar (1:1 ratio). Let it sit for 30 minutes, then drain and rinse thoroughly. Operate with clean water a few times to flush out any residue.
- **Storage:** Store the steam cleaner and its accessories in the provided storage bag in a cool, dry place, away from direct sunlight and extreme temperatures.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
No steam output	Water tank empty; Unit not preheated; Nozzle clogged	Refill water tank; Wait for 15 seconds preheat; Use cleaning pin to clear nozzle
Low steam pressure	Insufficient water; Mineral buildup	Ensure tank is adequately filled; Perform descaling procedure
Water leakage	Nozzle/hose not properly attached; Missing rubber rings	Ensure all connections are tight; Check for and install rubber rings
Unit not turning on	No power; Faulty power cord	Check power outlet; Contact customer support if cord is damaged

8. SPECIFICATIONS

Feature	Detail
Brand	Gribouillage
Model Name	TC-SC--08
Wattage	2500 watts
Voltage	110V
Pressure	Up to 3 Bar
Tank Volume	1.6 Liters
Heat Time	15 Seconds
Maximum Temperature	221°F (105°C)
Running Time	Up to 1 hour (continuous)
Adjustable Steam Levels	3 Levels
Product Dimensions	8.27"D x 5.63"W x 5.71"H
Item Weight	4.85 pounds
Power Cord Length	6.56 ft
Spray Gun Hose Length	4.92 ft

Power	2500W	Voltage	110V
Pressure	3 Bar	Preheating Time	10 - 15 s
Water Tank Capacity	1.6L	Steam Temperature	105°C/221°F
Adjustable Steam Levels	3 Levels	Running Time	1 Hour



Spray Handle for Remote Adjustment



Water Level Marking



Water Inlet



Drain Outlet

Image 7: Detailed technical specifications and key features of the steam cleaner.

9. WARRANTY AND SUPPORT

For warranty information, product support, or to purchase replacement parts, please refer to the contact information provided with your product packaging or visit the official Gribouillage website. Keep your purchase receipt as proof of purchase for any warranty claims.