

CHOEZON DMXG01CWL

CHOEZON Farmhouse Style Console Table DMXG01CWL User Manual

Model: DMXG01CWL | Brand: CHOEZON

PRODUCT OVERVIEW

This manual provides instructions for the assembly, operation, and maintenance of your CHOEZON Farmhouse Style Console Table. This versatile furniture piece is designed to offer ample storage and a convenient power solution for various spaces in your home.

- **Large Storage Capacity:** Features a spacious tabletop, two open shelves, and a cabinet with doors for organizing ornaments, books, keys, and remote controls.
- **Stable Construction:** Constructed from engineered wood, reinforced with solid legs and anti-tip devices to ensure stability and long-term durability.
- **Farmhouse Style:** Combines clean white and natural walnut finishes, featuring framed doors and X-shaped metal reinforcements for an elegant farmhouse aesthetic.
- **Easy Assembly and Cleaning:** Includes complete accessories and clear instructions for straightforward assembly. The smooth veneer surface allows for easy cleaning.
- **Integrated Power Strip:** Equipped with power outlets to supply small kitchen appliances or charge devices, ensuring not to exceed the specified power limits.

SAFETY INFORMATION

- Always follow assembly instructions carefully.
- Ensure all screws and fasteners are securely tightened before use.
- Use the included anti-tip device to secure the console table to a wall, preventing accidental tipping, especially in households with children or pets.
- Do not overload shelves or the tabletop beyond their weight capacity.
- When using the integrated power strip, do not exceed the maximum power rating. Avoid plugging in high-

power appliances simultaneously.

- Keep liquids away from the power outlets to prevent electrical hazards.
- Regularly inspect the console table for any loose parts or damage.

PACKAGE CONTENTS

Please verify that all components are present before beginning assembly. Refer to the assembly diagram for part identification.

- Tabletop
- Side Panels
- Cabinet Doors
- Shelves
- Back Panel
- Hardware Pack (screws, dowels, cam locks, hinges, handles, anti-tip kit)
- Power Strip Unit
- Assembly Manual

ASSEMBLY INSTRUCTIONS

Follow these steps carefully to assemble your console table. It is recommended to assemble the unit on a soft, clean surface to prevent scratches. Two people are recommended for assembly.

1. **Step 1: Unpack and Identify Parts**

Unpack all components and lay them out. Compare them with the parts list in the manual to ensure everything is present.

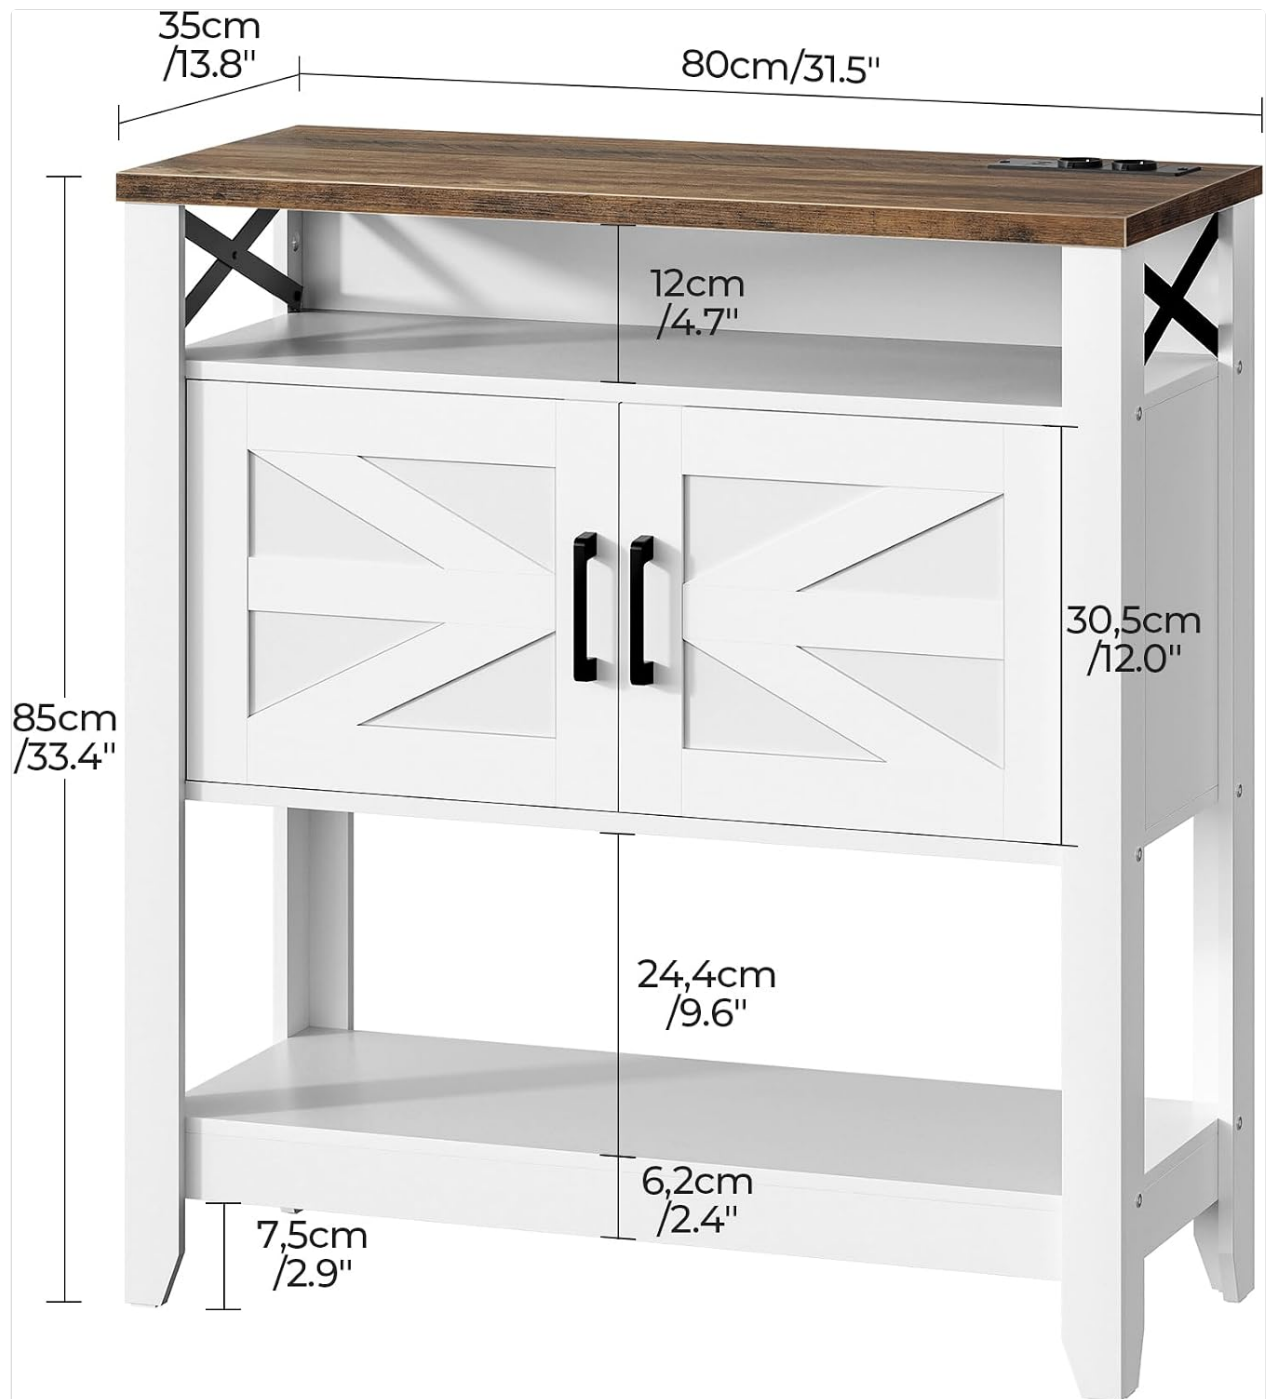


Image: Dimensions of the CHOEZON console table, illustrating overall size and internal shelf measurements.

2. Step 2: Assemble the Frame

Attach the side panels to the base and top panels using the provided screws and dowels. Ensure all connections are secure.

3. Step 3: Install Shelves

Insert the fixed shelves into the designated slots or attach them with hardware as per the diagram.

4. Step 4: Attach Cabinet Doors

Mount the hinges to the cabinet doors and then attach the doors to the main frame. Adjust hinges as needed for proper alignment.

Anti-Tip Device



Tight Door Closure



Wooden Table Legs



Metal Door Handles

Image: Details of the anti-tip device, door closure, wooden legs, and metal handles, highlighting key construction features.

5. Step 5: Install Handles

Attach the metal handles to the cabinet doors.

6. Step 6: Install Power Strip

Carefully insert the integrated power strip unit into the pre-cut opening on the tabletop. Ensure it is flush and secure.



Image: Detailed view of the integrated power strip, indicating specifications for AC outlets and USB ports, and the length of the power cord.

7. Step 7: Attach Anti-Tip Device

Secure the anti-tip device to the back of the console table and then to a wall stud using the provided hardware. This step is crucial for safety.

OPERATING THE INTEGRATED POWER STRIP

Your console table is equipped with a convenient power strip for charging devices and powering small appliances.

- **AC Outlets:** The unit includes two AC outlets (220-250V/16A). Use these for small household appliances such as lamps, coffee makers, or toasters.

- **USB Ports:** Two USB ports (5V/2.1A) are provided for charging smartphones, tablets, and other USB-powered devices.
- **Power Cord:** The power cord is 1.5 meters long. Ensure it is plugged into a grounded wall outlet.
- **Important:** Do not exceed the maximum power rating of the integrated power strip. Overloading can cause electrical hazards. Refer to the power strip's label for specific wattage limits.

MAINTENANCE AND CARE

- **Cleaning:** Wipe the surface with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners, which can damage the finish.
- **Spills:** Immediately wipe up any spills to prevent water damage or staining.
- **Dusting:** Regularly dust the console table to maintain its appearance.
- **Inspection:** Periodically check all screws and fasteners to ensure they remain tight. Re-tighten if necessary.
- **Sunlight:** Avoid prolonged exposure to direct sunlight, which can cause fading or discoloration of the wood finish.
- **Heat:** Do not place hot items directly on the tabletop without using protective coasters.

TROUBLESHOOTING

Issue: Table feels wobbly.

Solution: Check all assembly screws and fasteners. Tighten any loose connections. Ensure the table is on a level surface. Adjust leveling feet if present.

Issue: Cabinet doors do not align properly.

Solution: Adjust the hinges on the cabinet doors. Most hinges allow for minor adjustments to align the doors horizontally, vertically, and in depth.

Issue: Power outlets are not working.

Solution: Ensure the main power cord is securely plugged into a functional wall outlet. Check if the wall outlet itself is receiving power (test with another device). Avoid overloading the power strip; unplug some devices and try again. If the issue persists, contact customer support.

PRODUCT SPECIFICATIONS

Feature	Specification
Brand	CHOEZON
Model	DMXG01CWL
Dimensions (L x W x H)	80 x 35 x 85 cm (31.5 x 13.8 x 33.4 inches)
Item Weight	19.3 Kilograms
Material	Engineered Wood, Metal
AC Outlets	2 (220-250V/16A)

Feature	Specification
USB Ports	2 (5V/2.1A)
Power Cord Length	1.5 meters
Color	White and Walnut

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your purchase or contact the manufacturer directly. Keep your purchase receipt for warranty claims.

Manufacturer: CHOEZON
ASIN: B0F9XZMBCJ

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question