

[Manuals.plus](#) /

› [CHOEZON](#) /

› CHOEZON DTXG20KBB Narrow Console Table with Power Outlet User Manual

CHOEZON DTXG20KBB

CHOEZON DTXG20KBB Narrow Console Table with Power Outlet User Manual

Model: DTXG20KBB | Brand: CHOEZON

INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your CHOEZON DTXG20KBB Narrow Console Table. Please read this manual thoroughly before assembly and use to ensure proper function and safety.



Image: The CHOEZON Narrow Console Table, showcasing its slim design and integrated power outlet, positioned in an entryway.

SAFETY INFORMATION

- Always follow assembly instructions carefully.
- Ensure all screws and fasteners are securely tightened before use.
- Do not overload the table or the integrated power outlet. Refer to specifications for load limits.

- Use the provided anti-tip straps to secure the table to a wall, especially if placed on uneven surfaces or in areas with children or pets.
- Keep liquids away from the power outlet to prevent electrical hazards.
- Do not attempt to modify the electrical components. Contact qualified personnel for repairs.

PACKAGE CONTENTS

Before beginning assembly, verify that all parts listed below are present and undamaged. If any parts are missing or damaged, please contact customer support.

- Tabletop sections
- Metal frame components (legs, support bars)
- Integrated power outlet with power cord
- Adjustable feet (6 pieces)
- Anti-tip straps (2 pieces)
- Assembly hardware (screws, bolts, Allen wrench)
- Instruction manual

SETUP AND ASSEMBLY

Assembly of the CHOEZON DTXG20KBB console table is designed to be straightforward. Follow the included detailed illustrated instructions and use the provided tools.

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, soft surface to prevent scratches.
2. **Assemble Frame:** Connect the metal frame components using the provided screws and Allen wrench. Ensure all connections are snug but do not overtighten initially.
3. **Attach Tabletop:** Secure the tabletop sections to the assembled metal frame.
4. **Install Power Outlet:** The power outlet can be positioned on the left, right, or middle section of the tabletop. Choose your preferred location and secure it according to the instructions.
5. **Attach Adjustable Feet:** Screw the 6 adjustable feet into the bottom of the table legs. These can be adjusted to level the table on uneven floors.
6. **Install Anti-Tip Straps:** For enhanced stability and safety, especially if the table is free-standing or in a high-traffic area, attach the anti-tip straps to the rear of the table and secure them to a wall stud.



Image: Close-up view demonstrating the adjustable feet for leveling and the anti-tip device for securing the table to a wall.

MULTIPLE ASSEMBLY OPTIONS FOR POWER OUTLET



Image: Illustration showing the flexibility to install the integrated power outlet on the left, right, or middle section of the console table.

OPERATING INSTRUCTIONS

The CHOEZON DTXG20KBB console table features an integrated power outlet for convenient charging.

- **Power Connection:** Plug the table's power cord (1.5 meters long) into a standard wall outlet.
- **AC Outlets:** The power strip includes 2 standard AC sockets, rated for 220-240V/13A. Use these for devices requiring standard power.

- **USB Ports:** Two USB ports (Type-A and Type-C) are provided, rated for 5V/2A. These are suitable for charging smartphones, tablets, and other USB-powered devices.
- **Flexible Placement:** The power outlet can be positioned on either side or in the middle of the table during assembly to best suit your needs.



Image: Detailed view of the power outlet, highlighting the two AC sockets and two USB ports (Type-A and Type-C) with their respective electrical ratings.

MAINTENANCE

To ensure the longevity and appearance of your console table, follow these maintenance guidelines:

- **Cleaning:** Wipe the table surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners that may damage the finish.
- **Spills:** Clean up spills immediately to prevent staining, especially on the tabletop surface.
- **Fasteners:** Periodically check all screws and bolts to ensure they remain tight. Retighten if necessary.
- **Electrical Components:** Keep the power outlet free from dust and debris. Do not immerse the power strip in water or expose it to excessive moisture.

TROUBLESHOOTING

If you encounter issues with your CHOEZON DTXG20KBB console table, refer to the following common problems and solutions:

- **Table is Unstable/Wobbly:**
 - Ensure all assembly screws are fully tightened.
 - Adjust the individual feet at the bottom of the legs to level the table on uneven floors.
 - Verify that the anti-tip straps are securely installed and fastened to a wall stud.
- **Power Outlet Not Working:**
 - Check if the main power cord is securely plugged into a functional wall outlet.
 - Ensure the power outlet unit itself is correctly installed and connected within the table.
 - Test the wall outlet with another device to confirm it is supplying power.
 - Avoid overloading the power strip; disconnect some devices if too many are plugged in.
- **Missing or Damaged Parts:**
 - Review the "Package Contents" section. If parts are missing or damaged upon arrival, contact CHOEZON customer support immediately for replacements.

SPECIFICATIONS

Brand	CHOEZON
Model Number	DTXG20KBB
Product Dimensions (L x W x H)	200 x 18 x 82 cm (78.74"D x 7.09"W x 32.28"H)
Item Weight	8.9 Kilograms
Color	Black
Material	High-quality particleboard and metal frame
Required Assembly	Yes
Power Outlet	2 AC Sockets (220-240V/13A), 2 USB Ports (5V/2A)
Power Cord Length	1.5 meters

Special Features	Adjustable feet, Anti-tip straps, Flexible power outlet placement
------------------	---

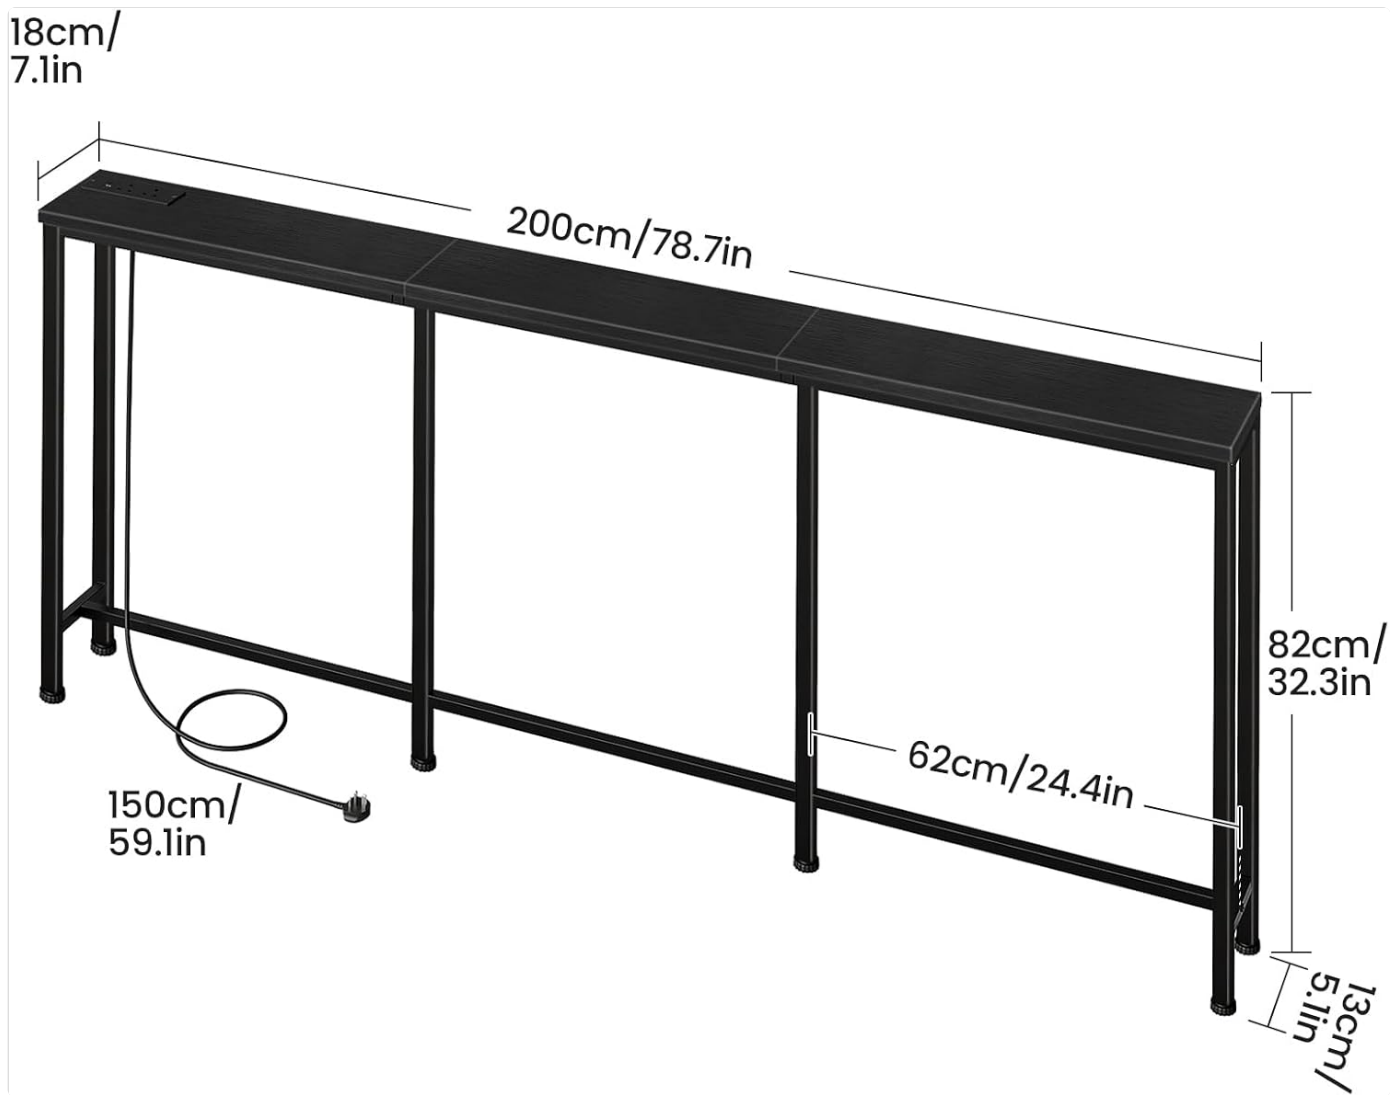


Image: Technical diagram illustrating the key dimensions of the console table in both centimeters and inches.

WARRANTY AND SUPPORT

CHOEZON products are manufactured with quality and customer satisfaction in mind. While specific warranty details are not provided in this manual, please retain your proof of purchase.

For any questions, missing parts, or support needs, please contact CHOEZON customer service through the retailer where the product was purchased or visit the official CHOEZON website for contact information.

© 2026 CHOEZON. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question