

CT Copper Tailor CTMK02030406LP

CT Copper Tailor Outdoor Kitchen Package Instruction Manual

Model: CTMK02030406LP

INTRODUCTION

This manual provides essential information for the safe and efficient use of your CT Copper Tailor Modular L-Shaped Outdoor Kitchen Package. This package includes a gas grill with 4 burners, a storage cabinet, a cooler cabinet, and a corner cabinet, all designed for outdoor use. Please read these instructions thoroughly before assembly and operation. The modular design allows for flexible arrangement of the components to create your ideal outdoor cooking space. Constructed from premium 304 stainless steel, this kitchen package is built for durability and resistance to outdoor elements.

SAFETY INFORMATION

WARNING: Failure to follow these instructions could result in fire, explosion, or burn hazard, which could cause property damage, personal injury, or death.

- Always ensure adequate ventilation when operating the gas grill. Do not use indoors.
- Keep children and pets away from the grill area during operation.
- Maintain a safe distance from combustible materials. Refer to local codes for minimum clearances.
- Do not store flammable liquids or aerosols near the grill.
- Always check for gas leaks before each use. Use a soapy water solution to detect leaks at connections.
- Turn off the gas supply at the source when the grill is not in use.
- Wear protective gloves when handling hot surfaces.
- Ensure the grill is on a stable, level surface.

SETUP AND ASSEMBLY

Your outdoor kitchen package is designed for modular assembly. Each piece features interlocking attachments for secure connection and casters with locking wheels for easy positioning.

Component Identification

- **Built-in BBQ Gas Grill and BBQ Grill Cabinet:** Houses the 32-inch gas grill with four burners and provides storage.
- **Refrigerator & Cooler Cabinet Module:** Designed to accommodate a fridge or beverage cooler (appliances not included).
- **Corner Cabinet Module:** Provides additional storage and countertop space for an L-shaped configuration.

Assembly Steps

1. Unpack all components and verify against the packing list.
2. Position the main grill cabinet in your desired location. Ensure the locking casters are engaged to prevent movement.
3. Attach the gas grill to the grill cabinet following the specific instructions provided with the grill unit.
4. Connect the cooler cabinet and corner cabinet modules using the interlocking attachments. Ensure they are securely fastened.
5. Route any necessary gas lines or electrical cables through the designated cable holes to maintain organization and prevent tangles.
6. Perform a gas leak test before initial use.



ELECTRONIC IGNITION SYSTEM



DURABLE BURNERS



STAINLESS STEEL SKEWERS



LARGE COOKING AREA



STAINLESS CABINET DESIGN



EASY MOVING

Image: Overview of the modular L-shaped outdoor kitchen package components.

OUTDOOR BBQ GAS GRILL CABINET

Provide you with a decent amount of storage space



Support Gas Grill



Extra Storage Space

Image: The complete CT Copper Tailor Outdoor Kitchen Package, showcasing the grill, cooler, and corner cabinets.

FITS FOR OUTDOOR FRIDGE & COOLER CABINET

(Appliances not included)



Image: The outdoor BBQ gas grill cabinet, highlighting its storage capacity and support for the gas grill.

TOTAL COOKING AREA CAPACITY



Steak



Drumstick



Skewer



Image: The outdoor fridge and cooler cabinet, showing its dimensions and potential for food preparation surface.



Easy Start Electronic Ignition

Electronic ignition system allows you to lit up burners safely and immediately at every push of the ignitor button.

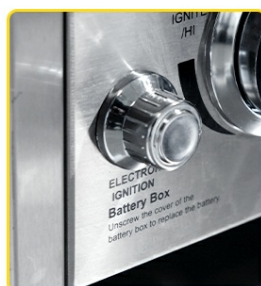


Image: The outdoor corner cabinet, featuring a spacious tabletop for additional preparation space.

Gas Grill Operation

1. **Pre-Operation Check:** Ensure all gas connections are tight and there are no obstructions in the burner ports.
2. **Lighting the Burners:** Open the grill lid. Turn on the gas supply at the propane tank. Push and turn a control knob to the HIGH position. Press the electronic ignition button to ignite the burner. If the burner does not light within 5 seconds, turn the knob off, wait 5 minutes, and repeat the process.
3. **Temperature Control:** Adjust the control knobs to achieve the desired cooking temperature. The grill features three 12,000 BTU tube burners and one 13,000 BTU infrared burner.
4. **Rotisserie Use:** The 10,000 BTU rear infrared rotisserie burner and rotisserie kit allow for even cooking of roasts. Secure food onto the rotisserie spit and engage the motor.
5. **Shutting Down:** Turn all control knobs to the OFF position. Turn off the gas supply at the propane tank. Close the grill lid once cooled.



Rotisserie Kit Included



Durable Burner



Large Cooking Area

Image: Close-up of the gas grill, showing the control knobs, rotisserie kit, and durable burners.

Full-size Grease Collection System

The removable grease tray can capture any residues that escape and protect the floor from fluid drips.



Image: Detail of the electronic ignition system, allowing for safe and immediate burner lighting.

FITS FOR OUTDOOR FRIDGE & COOLER CABINET

(Appliances not included)



Image: View of the four powerful burners, each providing 12,000 BTU for quick and even heat distribution.

Your browser does not support the video tag.

Video: A demonstration of the 4-piece outdoor kitchen package, showcasing its features and modularity.

MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your outdoor kitchen.

Cleaning Stainless Steel Surfaces

- Wipe down all stainless steel surfaces with a damp cloth and mild detergent after each use.
- For stubborn stains, use a stainless steel cleaner and polish, always wiping in the direction of the grain.
- Avoid abrasive cleaners or scouring pads, which can scratch the brushed finish.

Grill Component Maintenance

- **Cooking Grates:** Clean cooking grates with a grill brush after each use while the grill is still warm.
- **Grease Tray:** The full-size grease collection system should be emptied and cleaned regularly to prevent grease fires.

- **Burners:** Periodically inspect burner ports for blockages (e.g., from food debris or insects). Use a wire brush or paper clip to clear any obstructions.

Caster Maintenance

- Keep casters clean and free of debris to ensure smooth movement.
- Lubricate swivel casters periodically with a silicone-based spray.

304 STAINLESS STEEL COUNTERTOP

Stainless steel construction, durable and rust-proof, cleans easily with a damp cloth.



360° ROTATING WHEELS

Two 3-inch fixed casters and two 3-inch locking swivel casters so you can easily move and lock the unit in place



Image: The full-size grease collection system, designed to capture residues and protect the floor from drips.

CABLE HOLES

keep the cables organized and tangle-free



Image: Detail of the 304 stainless steel countertop, highlighting its durable and rust-proof construction.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Burner fails to ignite	No gas flow, clogged burner port, faulty igniter.	Check propane tank level and connections. Clear burner ports. Inspect igniter electrode and wire.
Uneven heating	Clogged burner ports, improper gas pressure.	Clean burner ports. Ensure gas regulator is functioning correctly.

Problem	Possible Cause	Solution
Yellow or orange flame	Improper air/gas mixture, dirty burner.	Clean burners. Consult a qualified technician if problem persists.
Gas leak detected	Loose connection, damaged hose/regulator.	Immediately turn off gas. Tighten all connections. Replace damaged components. Do not operate if leak persists.

SPECIFICATIONS

Feature	Detail
Brand	CT Copper Tailor
Model Number	CTMK02030406LP
Product Dimensions (D x W x H)	26.4" x 108.95" x 48.5"
Item Weight	145 Pounds
Material Type	304 Stainless Steel
Finish Type	Brushed
Fuel Type	Liquid Propane (Gas)
Number of Heating Elements	4 (3 Tube Burners, 1 Infrared Burner) + 1 Rear Infrared Rotisserie Burner
Burner BTU (Tube)	3 x 12,000 BTU
Burner BTU (Infrared)	1 x 13,000 BTU
Rotisserie Burner BTU	1 x 10,000 BTU
Grill Configuration	Built-in
Cooking System	Grill, Rotisserie
Special Features	Easy to Install, Enclosed Cabinet, Heavy Duty, Locking Casters, Wheels
Included Components	Beverage Cooler Cabinet, Built-in BBQ Gas Grill and BBQ Grill Cabinet, Outdoor Corner Cabinet
Installation Type	Free Standing
Required Assembly	Yes

WARRANTY AND SUPPORT

Warranty Information

This CT Copper Tailor Outdoor Kitchen Package is covered by a **1-Year Manufacturer Warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use and service. It does not cover damage resulting from misuse, abuse, accident, alteration, or improper installation. Please retain your proof of purchase for warranty claims.

Customer Support

For technical assistance, troubleshooting, or warranty inquiries, please contact CT Copper Tailor customer support. Refer to the contact information provided at the point of purchase or on the official CT Copper Tailor website.

© 2026 CT Copper Tailor. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question