

[Manuals.plus](#) /

› [Teenpull](#) /

› Teenpull Garden Sofa Grey with Storage Instruction Manual

Teenpull B0F9YGTM7M

Teenpull Garden Sofa Grey with Storage Instruction Manual

Model: B0F9YGTM7M

INTRODUCTION

This manual provides detailed instructions for the assembly, operation, maintenance, and troubleshooting of your Teenpull Garden Sofa Grey with Storage. Please read this manual thoroughly before assembly and use to ensure proper function and longevity of your product. Keep this manual for future reference.

SAFETY INFORMATION

- Ensure all components are securely fastened before use.
- Do not exceed the maximum weight capacity of 242.5 lbs (110 kg).
- Keep children away from the assembly area. Small parts may pose a choking hazard.
- Place the sofa on a flat, stable surface to prevent tipping.
- Avoid exposing the sofa to extreme weather conditions for prolonged periods to maximize its lifespan.

PACKAGE CONTENTS

Verify that all parts are present before beginning assembly. If any parts are missing or damaged, contact customer support.

- 2 x Corner Seats with Storage
- 2 x Back Cushions
- 2 x Seat Cushions with Removable and Washable Covers
- Assembly Hardware (screws, bolts, tools if included)



Image: Overview of the Teenpull Garden Sofa Grey with Storage, illustrating its main components.

SETUP AND ASSEMBLY

Assembly is required for this product. It is recommended that two people assemble the sofa. Please follow these steps carefully.

1. **Unpack Components:** Carefully remove all parts from the packaging. Lay them out on a clean, soft surface to prevent scratches.
2. **Assemble Frame Sections:** Connect the corner seat frames using the provided hardware. Ensure all connections are finger-tight before fully tightening.
3. **Attach Side Panels (if separate):** Secure any separate side or back panels to the main frame.
4. **Tighten All Fasteners:** Once all frame sections are aligned, fully tighten all screws and bolts. Do not overtighten.
5. **Insert Storage Compartments:** Place the storage compartment liners into the designated areas under the seats.
6. **Place Cushions:** Position the seat cushions onto the sofa frame, followed by the back cushions.



Image: Front view of the fully assembled Teenpull Garden Sofa, ready for use.



Image: Side view of the sofa, highlighting the integrated storage compartment.

OPERATING INSTRUCTIONS

Using the Sofa

The Teenpull Garden Sofa is designed for comfortable outdoor seating for up to two people.

- **Seating:** Ensure the sofa is placed on a stable, level surface before sitting.
- **Storage Function:** To access the storage compartments, lift the seat cushions and then lift the hinged lid of the storage box underneath. Store items such as small tools, covers, or additional cushions.



Image: Detailed view of the storage compartment located beneath the seat cushions.

Foldable Design

The sofa features a foldable design for easy storage when not in use. Specific folding mechanisms may vary, but generally involve collapsing the backrest and/or side panels. Refer to the assembly diagrams for detailed folding instructions if applicable.



Image: The sofa with a side table extended, demonstrating a versatile feature.

MAINTENANCE AND CARE

Proper maintenance will extend the life and appearance of your garden sofa.

- **Cushion Care:** The seat and back cushion covers are removable and washable. Unzip the covers, remove them, and wash according to the fabric care label (typically cold water, gentle cycle, air dry).
- **Frame Cleaning:** Wipe the synthetic poly rattan and powder-coated metal frame with a damp cloth and mild soap. Rinse thoroughly and dry completely to prevent water spots or residue buildup.
- **Weather Protection:** Although made from weather-resistant materials, prolonged exposure to harsh weather (heavy rain, snow, direct intense sunlight) can affect the product's lifespan. Consider using a protective cover or storing the sofa indoors during extreme weather.
- **Regular Inspection:** Periodically check all fasteners to ensure they remain tight. Tighten if necessary.



Image: Close-up view of the cushion fabric, highlighting its texture and removable cover.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Sofa feels unstable or wobbly.	Loose fasteners or uneven surface.	Ensure all bolts and screws are tightened. Move the sofa to a flat, level surface.
Cushions appear flattened or misshapen.	Prolonged use or improper storage.	Fluff cushions regularly. Store cushions indoors when not in use for extended periods.
Difficulty opening/closing storage.	Obstruction or misalignment.	Check for items blocking the lid. Ensure the sofa frame is correctly assembled and not warped.

SPECIFICATIONS

Feature	Detail
Brand	Teenpull

Feature	Detail
Model	B0F9YGTM7M
Color	Grey
Material	Synthetic Poly Rattan, Powder-Coated Metal
Product Dimensions (D x W x H)	24.4" x 48.8" x 27.2" (61.98 cm x 123.95 cm x 69.09 cm)
Seating Capacity	2 people
Maximum Weight Capacity	242.5 lbs (110 kg)
Assembly Required	Yes
Special Features	Foldable Design, Integrated Storage, Removable/Washable Cushion Covers

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your purchase or contact the manufacturer directly. Protection plans may be available for extended coverage.

Manufacturer: Teenpull