

FREDORCH F21S

FREDORCH F21S Wired Control Instruction Manual

Model: F21S Wired Control

1. INTRODUCTION

This instruction manual provides essential information for the proper setup, operation, and maintenance of the FREDORCH F21S Wired Control. This controller is specifically designed for use with FREDORCH F21S Sex Machines. Please read this manual thoroughly before use to ensure safe and effective operation.

Important: This wired control is exclusively compatible with FREDORCH F21S machines. Please verify your machine's model and purchase year to ensure compatibility, as product specifications may be updated.

2. PRODUCT DESCRIPTION

The FREDORCH F21S Wired Control is an external accessory designed to provide precise control over the functions of your FREDORCH F21S machine. It allows users to adjust various operational parameters directly via a wired connection.

Package Contents:

- 1 x FREDORCH F21S Wired Speed Controller



Image 2.1: This image displays the FREDORCH F21S Wired Control unit, highlighting the three primary control functions: Pattern, Depth, and Speed, each with an associated adjustment knob.

3. SETUP AND INSTALLATION

Follow these steps to connect your FREDORCH F21S Wired Control to your FREDORCH F21S machine:

1. **Ensure Power Off:** Before connecting, ensure your FREDORCH F21S machine is powered off and unplugged from the electrical outlet.
2. **Locate Connection Port:** Identify the designated wired control port on your FREDORCH F21S machine. This port is typically a multi-pin connector.
3. **Connect Controller:** Align the connector of the FREDORCH F21S Wired Control cable with the port on your machine. Gently push the connector in until it is securely seated. Do not force the connection.
4. **Verify Connection:** Once connected, ensure the cable is firmly attached to prevent accidental disconnection during operation.
5. **Power On:** You may now plug in and power on your FREDORCH F21S machine. The wired control should now be active.

Wired Controller



Use a wired controller to connect to the host to control the mode, speed, and distance of the machine.

Image 3.1: This image illustrates the FREDORCH F21S Wired Control unit, emphasizing its wired connection interface. The text 'Wired Controller' is visible, indicating its connection type.



↑
Just for Fredorch F21S



Image 3.2: This image shows the FREDORCH F21S Wired Control unit alongside a diagram of the FREDORCH F21S machine, clarifying that the controller is specifically designed for this model. A note indicates the machine itself is not included.

4. OPERATING INSTRUCTIONS

The FREDORCH F21S Wired Control features three primary adjustment knobs to manage your machine's operation:

- **PATTERN:** This control adjusts the operational pattern or mode of the machine. Rotate the knob to cycle through available patterns.
- **DEPTH:** This control regulates the depth of motion. Turning the knob will increase or decrease the operational depth.
- **SPEED:** This control adjusts the operational speed of the machine. Rotate the knob to increase or decrease the speed.

To use, simply power on your FREDORCH F21S machine after connecting the wired control. Adjust the knobs as desired to achieve the preferred operational settings.

5. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your FREDORCH F21S Wired Control.

- **Cleaning:** Disconnect the controller from the machine and power source before cleaning. Wipe the surface of the controller with a soft, dry, or slightly damp cloth. Do not use abrasive cleaners, solvents, or immerse the controller in water.
- **Storage:** Store the controller in a clean, dry place away from direct sunlight and extreme temperatures. Avoid placing heavy objects on the cable or controller.
- **Cable Care:** Regularly inspect the cable for any signs of damage, such as cuts, fraying, or kinks. If damage is observed, discontinue use and contact customer support.

6. TROUBLESHOOTING

If you encounter issues with your FREDORCH F21S Wired Control, please refer to the following common troubleshooting steps:

- **Controller Not Responding:**
 - Ensure the controller cable is securely connected to the FREDORCH F21S machine.
 - Verify that the FREDORCH F21S machine is powered on and functioning correctly.
 - Check for any visible damage to the controller or cable.
- **Intermittent Control:**
 - Check for loose connections at both the controller and the machine.
 - Ensure the cable is not bent or kinked excessively.

If these steps do not resolve the issue, please contact FREDORCH customer support for further assistance.

7. SPECIFICATIONS

Feature	Detail
Brand	FREDORCH
Model Number	F21S Wired control
Compatibility	FREDORCH F21S Sex Machines
Manufacturer	fredorch
Item Model Number	F21S Wired control

8. WARRANTY AND SUPPORT

For warranty information or technical support, please contact FREDORCH customer service. Ensure you have your product model number and purchase details available when contacting support. Contact information can typically be found on the FREDORCH official website or through your point of purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question