

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [FRIZCOL](#) /

› [FRIZCOL 3-in-1 Camping Fan User Manual](#)

FRIZCOL FA-GY03

FRIZCOL 3-in-1 Camping Fan User Manual

Model: FA-GY03

Brand: FRIZCOL

1. INTRODUCTION

Thank you for choosing the FRIZCOL 3-in-1 Camping Fan. This versatile device combines a powerful fan, an ambient LED light, and a portable power bank, making it an essential companion for indoor and outdoor activities. Please read this manual carefully before use to ensure proper operation and to maximize the product's lifespan.

2. SAFETY INSTRUCTIONS

- Do not immerse the fan in water or other liquids.
- Keep out of reach of children and pets.
- Do not disassemble, repair, or modify the product. Contact customer support if service is required.
- Use only the provided USB-C cable for charging.
- Avoid placing the fan near heat sources or in direct sunlight for extended periods.
- Ensure the fan blades are clear of obstructions during operation.

3. PACKAGE CONTENTS

- FRIZCOL 24000mAh Portable Rechargeable Fan (1)
- Remote Control (1)
- USB-C Cable (1)
- User Manual (1)

4. PRODUCT FEATURES

- **Powerful Airflow:** Equipped with a premium motor and ultra-thin fan blade, providing strong wind (up to 4.6 m/s) and a speed of 3950 r/min.

- **Ultra-Quiet Operation:** Noise level below 30 dB for undisturbed use.
- **Long-Lasting Battery:** Built-in 24000mAh rechargeable battery offers 20-140 hours of endurance depending on speed and light usage.
- **Power Bank Function:** Can be used to charge phones, tablets, or laptops via its USB-A output port.
- **Adjustable LED Light:** Features 2 levels of LED ambient light for illumination in dark environments.
- **Convenient Timer Settings:** Includes 1-hour, 3-hour, and 5-hour auto-off timer options.
- **Remote Control:** Full control over fan speed, light, and timer settings from a distance.
- **Versatile Design:** Vertically adjustable fan head and a hidden hook at the bottom for hanging in tents or other locations.
- **Durable Construction:** Made from sturdy ABS material with an anti-drop design and non-slip pads for stability.

5. SETUP

5.1 Initial Charging

Before first use, fully charge the fan. Connect the provided USB-C cable to the fan's charging port and plug the other end into a compatible 5V/2A USB power adapter (not included). The blue indicator lights will show the charging progress. A full charge typically takes 8-10 hours.

5.2 Remote Control Setup

The remote control is stored in a compartment on the bottom of the fan. Gently pull out the remote. Ensure the battery is properly inserted. The remote allows for convenient operation of the fan, light, and timer functions.



Image: The FRIZCOL 3-in-1 Camping Fan, showcasing its main features including the fan, remote control, and its ability to charge a mobile phone.

6. OPERATING INSTRUCTIONS

6.1 Fan Operation


- **Power On/Off:** Press the power button on the fan's control panel or the remote control to turn the fan on or off.
- **Adjust Fan Speed:** Press the fan speed button on the control panel or the remote to cycle through 4 speed settings (1, 2, 3, 4).

 **24000mAh**
Super Large Battery Capacity

1st Gear

 **2.4m/s** **140h**

2nd Gear

 **3.0m/s** **80h**

3rd Gear

 **3.6m/s** **50h**

4th Gear


 **4.6m/s** **20h**



Image: A visual representation of the fan's 24000mAh super large battery capacity and the corresponding endurance for each of its four wind speed settings.

6.2 LED Light Operation

- **Turn Light On/Off:** Press the light button on the control panel or the remote to turn the LED light on or off.
- **Adjust Light Brightness:** Press the light button again to switch between 2 brightness levels.

2 Level LED Ambient Light

Create a wonderful nighttime atmosphere



Image: The FRIZCOL Camping Fan providing 2 levels of LED ambient light, creating a comfortable nighttime atmosphere for users.

6.3 Timer Function

- **Set Timer:** Press the timer button on the control panel or the remote to set the fan to automatically turn off after 1 hour, 3 hours, or 5 hours.
- **Cancel Timer:** Continue pressing the timer button until no timer indicator light is on.

3 Timer Setting & Whisper Quiet

Set 1/3/5 Hr auto-off for peaceful sleep



Image: The FRIZCOL Camping Fan operating quietly (under 30 dB) with its 3 timer settings (1, 3, and 5 hours) for peaceful sleep.

6.4 Power Bank Function

To use the fan as a power bank, connect your device's charging cable to the USB-A output port on the fan. The fan will automatically begin charging your device. This function is ideal for emergency charging of small electronics.

6.5 Versatile Placement

The fan features a vertically adjustable head, allowing you to direct airflow as needed. A hidden hook is integrated into the base, enabling you to hang the fan from tent ceilings, branches, or other suitable points for elevated cooling.

Versatile Camping Fan

Customize the comfortable airflow



Image: The versatile FRIZCOL Camping Fan demonstrating its hidden hook for hanging and remote control functionality, allowing for customized airflow.

7. CHARGING THE FAN

To charge the fan, use the included USB-C cable. Plug the USB-C end into the fan's input port and the USB-A end into a 5V/2A power adapter. The blue indicator lights on the fan's control panel will illuminate to show the current battery level and charging status. All four lights will be solid when fully charged. Charging time is approximately 8-10 hours for a full charge.

8. MAINTENANCE AND CARE

- **Cleaning:** Use a soft, dry cloth to wipe the fan's exterior. Do not use abrasive cleaners or immerse the fan in water. For stubborn dirt, a slightly damp cloth can be used, ensuring the fan is completely dry before next use.
- **Storage:** When not in use for extended periods, store the fan in a cool, dry place away from direct sunlight and extreme temperatures. It is recommended to charge the fan every 3 months to maintain battery health.

9. TROUBLESHOOTING

Problem	Possible Cause	Solution
Fan does not turn on.	Battery is depleted.	Charge the fan fully.
Fan not charging.	Cable or adapter issue; improper connection.	Ensure cable is securely connected. Try a different USB-C cable or power adapter.
Remote control not working.	Remote battery depleted or improperly inserted.	Check remote battery orientation. Replace remote battery if necessary. Ensure no obstructions between remote and fan.
LED light not working.	Battery is too low; light function off.	Charge the fan. Press the light button to activate.

10. SPECIFICATIONS

Feature	Detail
Model Name	FA-GY03
Brand	FRIZCOL
Battery Capacity	24000mAh
Endurance	20-140 hours
Max Wind Speed	4.6 m/s
Max Fan Speed	3950 r/min
Noise Level	<30 dB
Wattage	5 watts
Voltage	5 Volts
Dimensions (D x W x H)	8.9" x 3.3" x 11.6"
Item Weight	1.98 pounds
Control Method	Push Button, Remote
Charging Port	USB Type C
Output Port	USB Type A

Lightweight & Compact Design

Portable for indoor outdoor carrying



Image: The FRIZCOL Camping Fan highlighting its lightweight and compact design, along with its dimensions and weight for easy portability.

11. WARRANTY AND SUPPORT

FRIZCOL products are designed and manufactured to the highest quality standards. This product comes with a standard manufacturer's warranty. For detailed warranty information, product support, or any inquiries, please refer to the contact information provided on the product packaging or visit the official FRIZCOL website.

Please retain your purchase receipt as proof of purchase for warranty claims.