

Vicco Viktor

Vicco Viktor Washing Machine Cabinet Instruction Manual

Model: Viktor (Anthracite/Goldkraft Oak)

INTRODUCTION

Welcome to your new Vicco Viktor Washing Machine Cabinet. This manual provides essential information for the safe assembly, operation, and maintenance of your cabinet. Please read these instructions carefully before beginning assembly and retain them for future reference.

IMPORTANT SAFETY INFORMATION

Please read and understand all safety warnings before assembly and use.

- **Tipping Hazard:** Unanchored furniture can tip over, causing serious or life-threatening injuries. This furniture **must** be anchored to the wall using appropriate mounting fittings suitable for your home walls. If you have questions, consult a local retailer.
- All mounting hardware must be tightened sufficiently and checked regularly.
- Do not use the item if there is any defect.
- Keep children away from the assembly area.
- Follow every step of the instructions carefully.

PACKAGE CONTENTS

Before assembly, verify that all parts listed below are present.

- Washing Machine Cabinet components
- Assembly instructions
- Mounting material (wall anchoring hardware included)

Decoration items are not included.

SETUP AND ASSEMBLY

This cabinet requires assembly. Follow the provided assembly instructions carefully.

Step 1: Unpacking and Inspection

Carefully unpack all components and inspect them for any damage. Lay out all parts on a clean, soft surface to prevent scratches.

Step 2: Component Identification

Refer to the assembly instructions to identify each component. While parts may not be individually labeled, match them to the diagrams.

Step 3: Cabinet Assembly

Assemble the cabinet frame and shelves according to the detailed diagrams in the separate assembly guide. Ensure all connections are secure.

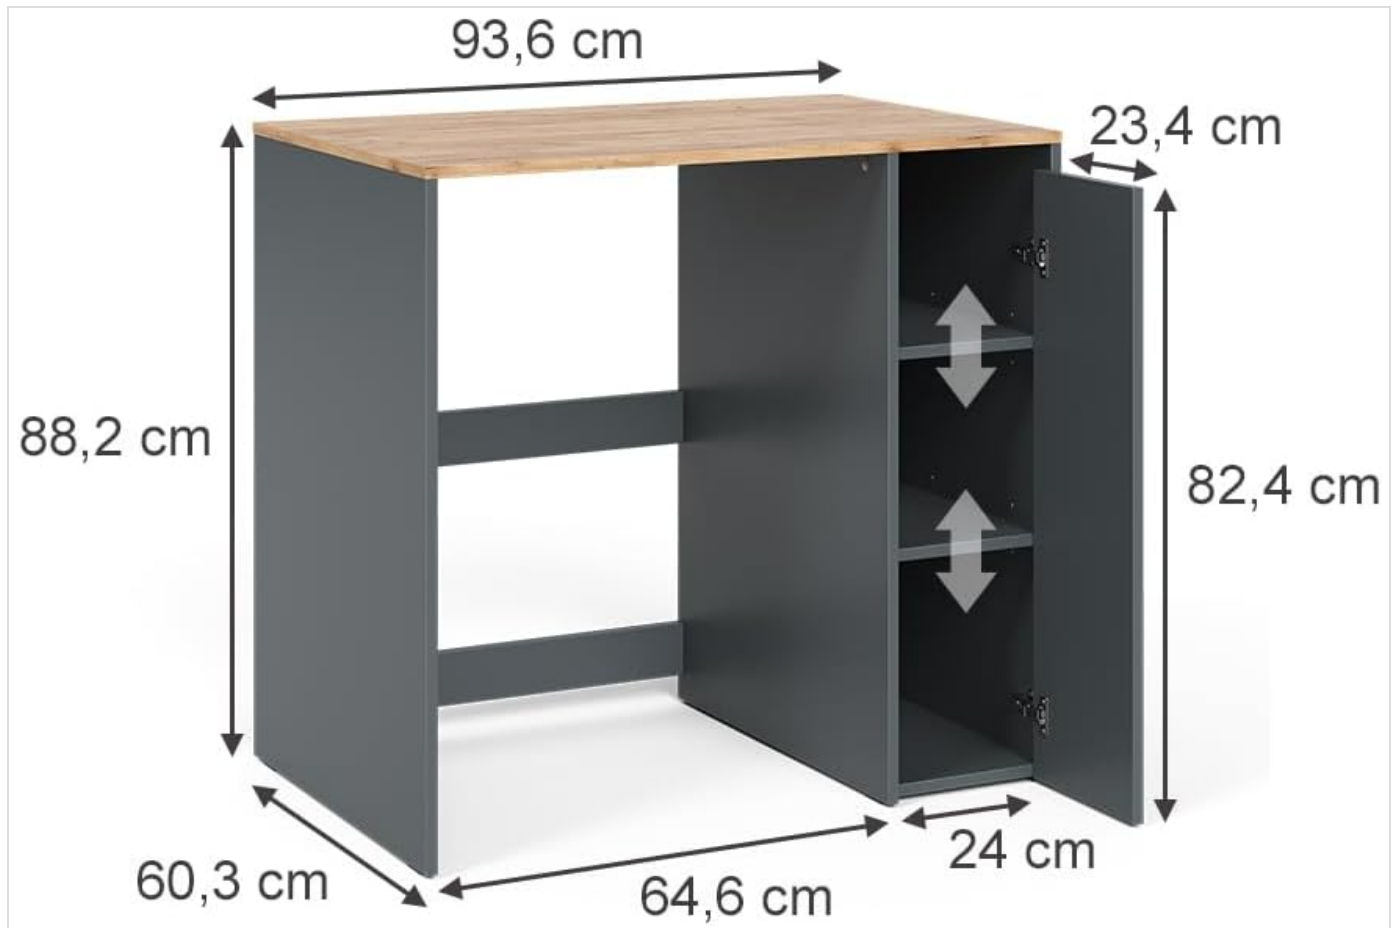


Image: A diagram illustrating the overall dimensions of the cabinet: 93.6 cm width, 88.2 cm height, 60.3 cm depth. It also shows the internal dimensions of the storage compartment: 23.4 cm width, 82.4 cm height, 24 cm depth, and a washing machine space of 64.6 cm width.

Step 4: Wall Anchoring

WARNING: To prevent tipping, this cabinet MUST be anchored to a wall.

Use the provided mounting material to securely fasten the cabinet to a suitable wall surface. Ensure the wall material can support the cabinet's weight and any items stored within.

OPERATING INSTRUCTIONS

The Vicco Viktor Washing Machine Cabinet is designed to provide organized storage and a dedicated space for your washing machine.

Washing Machine Placement

Position your washing machine within the designated open compartment of the cabinet. Ensure there is adequate clearance for hoses and power cords. The internal width for the washing machine is approximately 64.6 cm.



Image: A modern bathroom scene featuring the Vicco Viktor Washing Machine Cabinet in anthracite and goldkraft oak. A white washing machine is neatly placed within the cabinet's open section, with a plant and bathroom accessories on top.

Storage Compartment Use

Utilize the enclosed storage compartment for bathroom essentials, detergents, or other items. The cabinet features adjustable shelves to customize storage space.



Image: A close-up view of the cabinet's side storage compartment. The door is open, revealing two adjustable shelves and some storage baskets inside. The washing machine is partially visible to the left.

Weight Capacity

The maximum weight capacity for shelves is 15 kilograms. Do not overload the shelves to ensure stability and prevent damage.

CARE AND MAINTENANCE

To ensure the longevity and appearance of your Vicco Viktor Washing Machine Cabinet, follow these care instructions:

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals, which can damage the finish.
- **Spills:** Immediately wipe up any spills, especially water, to prevent moisture damage to the engineered wood.
- **Hardware:** Periodically check all screws and fittings to ensure they remain tight. Retighten as necessary.
- **Sunlight:** Avoid prolonged exposure to direct sunlight to prevent fading or discoloration.

TROUBLESHOOTING

Cabinet is Wobbly

Ensure all assembly screws are tightened. Verify that the cabinet is properly anchored to the wall. Check if the floor is even; use shims if necessary.

Door Misalignment

Adjust the hinges on the door to correct any misalignment. Refer to the assembly instructions for hinge adjustment details.

Missing or Damaged Parts

If you find any parts missing or damaged upon unpacking, please contact the manufacturer or supplier for replacements. Do not attempt to assemble with damaged parts.

TECHNICAL SPECIFICATIONS

Feature	Detail
Brand	Vicco
Model	Viktor
Color	Anthracite/Gold Kraft Oak
Material	Engineered Wood (16 mm chipboard)
Overall Dimensions (W x H x D)	93.6 x 88.2 x 60.3 cm (36.85" x 34.72" x 23.74")
Washing Machine Compartment Width	Approximately 64.6 cm
Storage Compartment Dimensions (W x H x D)	23.4 x 82.4 x 24 cm
Number of Shelves	2 (adjustable)
Maximum Shelf Weight Capacity	15 Kilograms
Item Weight	30.9 kg (34.45 kg including packaging)
Mounting Type	Floor Mount (requires wall anchoring)
Required Assembly	Yes

Note: All dimensions are approximate and may vary slightly.

WARRANTY AND CUSTOMER SUPPORT

For warranty information or assistance with your Vicco Viktor Washing Machine Cabinet, please refer to your purchase documentation or contact the retailer where the product was purchased.

If you require further support or have questions not covered in this manual, please reach out to Vicco customer service through their official website or contact information provided with your product.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

Is it possible to assemble the Vicco Viktor Washing Machine Cabinet (Model 60597) with the storage compartment on the left side instead of the right?

Based on the available documentation for the Vicco Viktor Washing Machine Cabinet, the manual does not explicitly state that the unit is "reversible" or designed for mirrored assembly. The diagrams and technical specifications consistently...

[Read full answer](#)