

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

- › [EZGHAR](#) /
- › EZGHAR Ultralink Pocket Portable WiFi Router SZA734 User Manual

## EZGHAR SZA734

# EZGHAR Ultralink Pocket Portable WiFi Router SZA734 User Manual

Model: SZA734

## 1. INTRODUCTION

The EZGHAR Ultralink Pocket Portable WiFi Router SZA734 is designed to provide portable internet access. This device allows multiple users to connect to a wireless network, offering connectivity for various electronic devices. It is compact and suitable for use in diverse environments.



Figure 1: Front view of the Ultralink Pocket Portable WiFi Router.

## 2. PACKAGE CONTENTS

Please check the package for the following items:

- 1 x EZGHAR Ultralink Pocket Portable WiFi Router SZA734
- 1 x User Manual
- 1 x Charging Cable

**Note: A compatible SIM card is required for internet access and is not included in the package.**

### 3. DEVICE OVERVIEW



Figure 2: Device highlighting its portable Wi-Fi and 5G capabilities.

The Ultralink Pocket Router features a compact design with a built-in antenna. It includes a display for status indicators and a power button for operation.

### 4. SETUP INSTRUCTIONS

1. **Charge the Device:** Before first use, fully charge the router using the provided charging cable and a compatible USB power adapter (not included). The battery capacity is 3650mAh.
2. **Insert SIM Card:** Locate the SIM card slot on the device. Carefully insert a compatible 4G LTE or 3G UMTS SIM card into the slot. Ensure the SIM card is correctly oriented as indicated on the device.
3. **Power On:** Press and hold the power button for a few seconds until the device powers on and the display illuminates.
4. **Connect to Wi-Fi:** On your computer, smartphone, or other Wi-Fi enabled device, search for available Wi-Fi

networks. Select the network name (SSID) broadcast by your Ultralink Pocket Router. The default SSID and password can usually be found on a sticker inside the SIM card compartment or on the device packaging.

5. **Enter Password:** Enter the Wi-Fi password when prompted to establish a connection.



Figure 3: Connecting the router to a laptop.

## 5. OPERATING INSTRUCTIONS

### 5.1 Power On/Off

- **To Power On:** Press and hold the power button until the screen lights up.
- **To Power Off:** Press and hold the power button until the device prompts you to power off, then confirm.

### 5.2 Checking Status Indicators

The device display shows important information such as battery level, signal strength, and Wi-Fi status. Refer to the on-screen icons for current operational status.

### 5.3 Connecting Multiple Devices

The router supports up to 10 users simultaneously. Follow the Wi-Fi connection steps (Section 4.4) for each device you wish to connect.

### 5.4 Battery Life

The 3650mAh battery provides over 50 hours of standby time and approximately 8 hours of continuous operation. Actual battery life may vary based on usage, network conditions, and environmental factors.

# STABLE FUNCTION STRONG SIGNAL ENJOY WIRELESS LIFE



Figure 4: Device features emphasizing portability and battery life.

## 6. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the device. Avoid liquid cleaners or abrasive materials.
- **Storage:** Store the device in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. If storing for an extended period, charge the battery to about 50% and recharge every few months.
- **Avoid Water:** This device is not waterproof. Keep it away from water and high humidity.

## 7. TROUBLESHOOTING

- **No Internet Connection:**
  - Ensure a valid and active SIM card is correctly inserted.
  - Check for network signal strength on the device display.
  - Verify that your SIM card plan has active data.
  - Restart the router and your connected device.
- **Slow Internet Speed:**
  - Move to an area with better network coverage.
  - Reduce the number of connected devices.
  - Check for any data caps or throttling from your SIM card provider.
- **Cannot Connect to Wi-Fi:**
  - Ensure the router is powered on and broadcasting a Wi-Fi signal.
  - Verify the Wi-Fi password entered is correct.
  - Restart both the router and the device attempting to connect.
- **Device Not Powering On:**
  - Ensure the battery is charged. Connect the device to a power source and try again.
  - If the issue persists, contact customer support.

## 8. SPECIFICATIONS

Feature	Specification
Model	SZA734
4G LTE Bands	B1/B3/B5/B40
3G UMTS WCDMA Bands	B1/B3
Peak Download Rate	150Mbps
Peak Upload Rate	50Mbps
Wi-Fi Standard	802.11 b/g/n
Max. Connected Users	10
Battery	3650mAh Lithium Battery
Standby Time	More than 50 hours
Continuous Work Time	Approximately 8 hours
Antenna	Built-in
Input Voltage	100V~240V
Output Voltage	5V DC±10%
Output Current	1.0A

Feature	Specification
Dimensions	98mm x 59mm x 14.8mm
Weight	110g
Language Support	Chinese and English

## 9. WARRANTY AND SUPPORT

This product is manufactured by EZGHAR. For warranty information, please refer to the terms provided at the time of purchase or contact your retailer. Standard return policies typically allow for returns or replacements within 30 days of purchase.

For technical support or further inquiries, please contact the manufacturer or your point of purchase. Keep your purchase receipt and product model number (SZA734) handy when seeking support.