

## Oulice NA332 00 Series 3000

# Oulice Replacement Air Fryer Basket Instruction Manual

For Philips NA332 00 Series 3000 Oil Free Deep Fryer (6.2L)

## 1. INTRODUCTION

---

This manual provides comprehensive instructions for the Oulice Replacement Air Fryer Basket, designed specifically for Philips NA332 00 Series 3000 Oil Free Deep Fryers (6.2L models). It covers proper installation, usage guidelines, and maintenance procedures to ensure optimal performance and longevity of your replacement part. Please read this manual thoroughly before installing or using the product.

## 2. PRODUCT OVERVIEW

---

The Oulice Replacement Air Fryer Basket is engineered to match the specifications of the original Philips NA332 00 Series 3000 basket. It features an ergonomic design for a comfortable grip and is constructed from durable, high-quality materials to withstand regular use in high-temperature environments. The perforated base promotes efficient air circulation for even cooking.



Figure 1: Oulice Replacement Air Fryer Basket, showing the main view with handle.



Figure 2: Side view of the replacement basket, highlighting the handle attachment mechanism.

### 3. INSTALLATION

This replacement basket is designed for easy installation. Follow these steps to replace your existing air fryer basket:

1. **Ensure Safety:** Unplug your Philips air fryer from the power outlet and allow it to cool completely before handling any parts.
2. **Remove Old Basket:** Carefully pull out the existing air fryer drawer. Locate the release button or mechanism that detaches the basket from the drawer. Press the button and lift the old basket out.
3. **Insert New Basket:** Align the Oulice Replacement Air Fryer Basket with the grooves in the air fryer drawer. Gently lower the basket into place until it clicks securely. Ensure the handle is firmly attached and the basket does not wobble.
4. **Verify Fit:** Once installed, gently pull on the handle to confirm the basket is securely locked into the drawer.

The replacement process is straightforward and does not require special tools.

### 4. OPERATING WITH THE NEW BASKET

Once the Oulice Replacement Air Fryer Basket is installed, your air fryer operates as usual. This basket maintains the original functionality and cooking performance of your Philips NA332 00 Series 3000 air fryer.

- **Food Placement:** Place food evenly in the basket, avoiding overcrowding to ensure proper air circulation.
- **Temperature and Time:** Refer to your Philips air fryer's original instruction manual or recipe guidelines for recommended cooking temperatures and times.
- **Shaking/Tossing:** For best results, shake or toss the food in the basket halfway through the cooking process, especially for smaller items.



Figure 3: Top view of the replacement basket, illustrating the perforated base for optimal air flow.

## 5. MAINTENANCE AND CLEANING

Regular cleaning of your air fryer basket is essential for hygiene and to maintain its non-stick properties. The Oulice Replacement Air Fryer Basket is designed for easy cleaning.

- **After Each Use:** Allow the basket to cool completely. Remove any food residue.

- **Hand Washing:** Wash the basket with warm, soapy water using a non-abrasive sponge or cloth. Rinse thoroughly and dry completely before storage or next use.
- **Dishwasher Safe:** The basket is generally dishwasher safe. Place it on the top rack for best results. Avoid using harsh detergents or abrasive cleaning tools that could damage the non-stick coating.
- **Stubborn Residue:** For baked-on food, soak the basket in warm, soapy water for 10-15 minutes before cleaning.



Figure 4: Bottom view of the replacement basket, showing the design of the perforated base.

## 6. TROUBLESHOOTING

If you encounter any issues with your Oulice Replacement Air Fryer Basket, please refer to the following common solutions:

- **Basket Does Not Fit:**  
**Cause:** Incorrect model compatibility or improper alignment during installation.  
**Solution:** Double-check that your air fryer is a Philips NA332 00 Series 3000 (6.2L). Ensure the basket is aligned correctly with the drawer's grooves and pushed down firmly until it clicks into place. Do not force the basket.
- **Food Sticking:**

**Cause:** Insufficient oil, high cooking temperature, or damaged non-stick coating.

**Solution:** Ensure a light coating of oil is applied to food or the basket if necessary. Avoid using metal utensils that can scratch the non-stick surface. Clean the basket thoroughly after each use.

- **Basket Wobbles After Installation:**

**Cause:** Basket not fully secured.

**Solution:** Remove the basket and re-insert it, ensuring it clicks firmly into the drawer. Check for any obstructions preventing a secure fit.

## 7. SPECIFICATIONS

Feature	Detail
Product Name	Oulice Replacement Air Fryer Basket
Compatibility	Philips NA332 00 Series 3000 Oil Free Deep Fryer (6.2L)
Material	Durable, high-quality materials with non-stick coating
Dimensions (Approximate)	1 x 1 x 1 inches (Product Dimensions)
ASIN	B0F9YTTLRT
Date First Available	May 27, 2025

## 8. WARRANTY AND SUPPORT

For warranty information or technical support regarding your Oulice Replacement Air Fryer Basket, please refer to the seller's policies or contact Oulice customer service directly. Keep your purchase receipt as proof of purchase.

For general inquiries or assistance, you may visit the Oulice official website or contact their support channels. Specific contact details are typically provided with your purchase documentation.